

Contents

23 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 Safety precautions	1
1.2 Safety precautions when working on the fuel system	1
1.3 Rules for cleanliness and instructions for working on fuel system	2
1.4 To avoid any risk of injuries to persons and/or damage to the injection and glow plug system, always observe the following safety precautions:	3
1.5 Checking vacuum system	3
2 Injection system	5
2.1 Overview of fitting locations	5
2.2 Fuel system - overview (vehicles up to autumn 2009)	14
2.3 Fuel system - overview (vehicles from autumn 2009 onwards)	16
2.4 Fuel system - exploded view	18
2.5 Bleeding fuel system	21
2.6 Air cleaner - exploded view	22
2.7 Removing and installing engine cover panel	24
2.8 Removing and installing air filter element	25
2.9 Removing air cleaner (bottom section)	26
2.10 Removing and installing air mass meter G70	30
2.11 Intake manifold - exploded view	30
2.12 Removing and installing intake manifold (top section)	32
2.13 Removing and installing bottom section of intake manifold (left-side)	33
2.14 Removing and installing bottom section of intake manifold (right-side)	35
2.15 Installing high-pressure pipes	37
2.16 Checking injectors (piezo injectors)	39
2.17 Adaption of injector delivery calibration values and injector voltage calibration values	39
2.18 Checking return flow rate of injectors (piezo injectors) with engine running	40
2.19 Checking return flow rate of injectors (piezo injectors) at starter cranking speed	43
2.20 Checking pressure retention valve in fuel return line	45
2.21 Checking restrictor in fuel return line	46
2.22 Removing and installing injectors	46
2.23 Toothed belt for high-pressure pump - exploded view	51
2.24 Removing and installing toothed belt for high-pressure pump	52
2.25 High-pressure pump - exploded view	59
2.26 Removing and installing high-pressure pump	60
2.27 Performing first fuel filling after installing high-pressure pump	61
2.28 Bleeding fuel system and checking for leaks	62
2.29 Checking fuel pressure regulating valve N276	62
2.30 Removing and installing fuel pressure regulating valve N276	63
2.31 Removing and installing fuel pressure sender G247	66
2.32 Lambda probe - exploded view	69
2.33 Removing and installing Lambda probe G39 with Lambda probe heater Z19	70
2.34 Removing and installing exhaust gas pressure sensor 1 G450	70
3 Engine control unit	72
3.1 Wiring and component check with test box V.A.G 1598/42	72
3.2 Renewing engine control unit J623	74
28 - Glow plug system	78
1	78
1.1 Removing and installing glow plugs	78
1.2 Removing and installing engine speed sender G28	80