

Contents

00	Technical data	1
1	General notes	1
1.1	Differentiating between engine generations	1
2	Safety precautions	2
2.1	Safety precautions when working on the fuel system	2
2.2	Safety precautions when working on the fuel supply system	3
2.3	Safety precautions when working on vehicles with start/stop system	3
2.4	Safety precautions when using testers and measuring instruments during a road test	4
2.5	Safety precautions when working on the subframe	4
3	Repair instructions	5
3.1	Rules for cleanliness	5
3.2	Test conditions	5
3.3	Contact corrosion	5
20	Fuel supply system	7
1	Fuel tank	7
1.1	Exploded view - fuel tank	7
1.2	Draining fuel tank	10
1.3	Removing and installing fuel tank	18
1.4	Removing and installing misfuelling prevention device	26
1.5	Deactivating misfuelling prevention device	29
2	Fuel delivery unit/fuel gauge sender	30
2.1	Exploded view - fuel delivery unit/fuel gauge sender	30
2.2	Removing and installing fuel delivery unit/fuel gauge sender	34
2.3	Checking fuel gauge sender G	41
2.4	Removing and installing fuel gauge sender G	47
3	Fuel filter	49
3.1	Exploded view - fuel filter	49
3.2	Removing and installing fuel filter	51
3.3	Removing and installing regulating valve	52
4	Accelerator mechanism	54
4.1	Exploded view - accelerator pedal module	54
4.2	Removing and installing accelerator pedal module with accelerator position sender G79/ G185	55
5	Fuel pump	57
5.1	Checking fuel system pressurisation pump G6	57
5.2	Removing and installing fuel pump control unit J538	74
5.3	Checking delivery rate of supplementary fuel pump V393	75
5.4	Removing and installing supplementary fuel pump V393	77
6	Filling and bleeding fuel system	79
6.1	Bleeding fuel system	79
6.2	Bleeding fuel supply line leading to metering pump, vehicles with auxiliary heater	79
7	Checking fuel system for leaks	82