

Contents

1	General information	1
1.1	--- Change history ---	1
1.2	General notes on Maintenance Manuals	2
1.3	Cleaning engine	2
1.4	Engine number	2
1.5	Vehicle identification number	4
1.6	Vehicle data sticker	4
1.7	Basic information on high-voltage vehicles	5
1.8	Safety information	10
2	Preparations	11
2.1	Vehicle: raising	11
2.2	Engine cover panel: removing and installing	12
2.3	Noise insulation: removing and installing	13
2.4	Window regulators: activating automatic open/close function	15
2.5	Vehicle diagnostic tester: connecting	15
3	Maintenance	17
3.1	Diesel particulate filter: reading out ash deposit volume	21
3.2	Event memory: reading out	22
3.3	Service interval display: resetting service event	22
3.4	Diagnostic work: performing	22
3.5	Static event memory: working through	23
3.6	Transport mode: deactivating	23
3.7	Transport mode: checking activation and activating if necessary	24
3.8	Shipping mode: deactivating	24
3.9	ERA-GLONASS: checking emergency call function	25
3.10	Battery: reading out status	25
3.11	Vehicle diagnosis: completing	26
3.12	Battery: checking electrolyte level	26
3.13	Vehicle identification numbers: checking numbers match and are embossed properly	28
3.14	Readiness for sending and receiving information: establishing	29
3.15	Service disconnect: checking for dirt and damage	29
3.16	ECE towing bracket: checking (if fitted)	30
3.17	Battery: connecting stationary battery charger (min. 30A, charging voltage max. 14.8 V on IV characteristic curve)	30
3.18	Battery: determining and recording state of charge (SOC)	32
3.19	Mirror hanger indicating defective battery: renewing battery on affected vehicles	34
3.20	Data sheet for Radio Equipment Directive: printing and placing in glove compartment	35
3.21	Connected gateway: renewing emergency battery	35
3.22	Connectivity box: checking emergency battery, telematics	36
3.23	Brake fluid: changing	36
3.24	Brake fluid (vehicles older than 12 months): changing	41
3.25	Brake fluid: checking fluid level	42
3.26	Brake system: checking condition of brake hoses, and checking that caps are fitted on bleeder screws	42
3.27	Brake pads: checking thickness	43
3.28	Brake discs: checking for surface rust and operating brakes to clean if necessary	44
3.29	Parking brake: releasing	45
3.30	Tyres: checking condition, age and wear pattern, and checking and recording tread depth	45
3.31	Tyres: checking tyre pressures and adjusting if necessary	46
3.32	Tyres (except spare wheel): checking tyre pressures and adjusting to 3.5 bar if necessary	47
3.33	Tyre Pressure Loss Indicator: storing changed tyre pressures	48
3.34	Tyre repair kit: checking that set is complete, and checking and recording expiry date	48
3.35	Wheel bolts: tightening to specified torque	49



3.36	Suspension struts on front and rear axle: removing locking elements and correctly fitting bump stops	49
3.37	Axles (front and rear): checking components for play, secure attachment and damage, and checking protective boots	51
3.38	Engine, gearbox, final drive and steering: checking for leaks and damage	54
3.39	Vehicle (from below): checking for damage	55
3.40	Underbody: checking trim, wheel housing liners, side members and pipes/wiring for damage, and checking that they are properly secured	55
3.41	Roof insert for panoramic sliding sunroof: checking operation	56
3.42	Water drains - panoramic sliding sunroof: checking	56
3.43	Door hinges with separate door arrester: cleaning and lubricating	57
3.44	Windscreen/rear window washer system: checking spray pattern and adjusting if necessary	58
3.45	Wiper blades: checking for damage	59
3.46	Headlight washer system: checking operation	60
3.47	Headlights: checking for correct adjustment	60
3.48	Headlights and reversing lights, brake lights, side lights, number plate lights, turn signals, hazard warning lights: checking operation	61
3.49	Luggage compartment lighting: checking operation	62
3.50	Luggage compartment: removing protective film and felt pieces	62
3.51	Glove compartment light, interior lighting and reading light: checking operation	62
3.52	Horn: checking operation	63
3.53	Passenger airbag: checking key switch on/off and setting to "on"	63
3.54	Owner's literature: checking that all documents are present	63
3.55	Service Schedule: affixing vehicle data sticker	63
3.56	Owner's Manual: attaching vehicle data sticker	64
3.57	Seat belts: checking retainers for latch plate and belt buckle, and checking locking action of automatic belt retractor	64
3.58	Vehicle interior: removing protective covers for seats (if present) and carpet	65
3.59	Vehicle interior: checking that it is clean and cleaning if necessary	65
3.60	Vehicle interior: removing any objects other than those protecting interior surfaces	65
3.61	Vehicle interior and exterior: checking for and documenting any damage	65
3.62	Instrument cluster: checking warning lamps	65
3.63	Seal on coolant expansion tank for high-voltage system: checking seal is present	66
3.64	Warning triangle: checking availability	66
3.65	First-aid kit: checking and recording expiry date	66
3.66	Emergency flare: fitted so it is visible from driver's seat or driver's entrance	66
3.67	Certificate of conformity (COC): checking COC is present in vehicle	66
3.68	Emergency call function: checking status LED (must be green before delivery to customer)	66
3.69	Vehicle keys: checking operation and recording number of keys given to customer	67
3.70	Vehicle key: removing from ignition lock	67
3.71	Vehicle key(s), wheel covers and owner's literature: checking availability and recording number present	68
3.72	Sun visors: checking that they are folded up and folding up if necessary	68
3.73	Luggage compartment cover and sun blind: checking that they are rolled up and rolling up if necessary	68
3.74	Engine oil: draining	68
3.75	Engine oil: extracting	69
3.76	Engine oil: renewing oil filter	70
3.77	Engine oil: filling up	74
3.78	Engine oil: checking oil level and correcting if necessary	75
3.79	Spark plugs: renewing	76
3.80	Coolant level: checking (coolant level must reach at least top marking on coolant expansion tank)	83
3.81	Cooling system for high-voltage system: checking anti-freeze protection and coolant level, and correcting if necessary	86
3.82	Air filter: renewing filter element and cleaning housing	90

3.83	Snow screen: cleaning	96
3.84	Dust and pollen filter: renewing	96
3.85	Fuel filter: renewing	98
3.86	Water separator filter: renewing	99
3.87	Water separator (fuel filter): draining	100
3.88	Fuel tank: adding fuel additive	101
3.89	Reducing agent (AdBlue®): filling up tank completely	102
3.90	Vehicle doors: removing edge protection	107
3.91	Vehicle exterior: checking unprotected areas for dirt, and cleaning if necessary	107
3.92	Vehicle exterior: removing protective film, if present	107
3.93	Vehicle cover: checking position and correcting if necessary	108
3.94	Vehicle cover: removing according to manufacturer's instructions	108
3.95	Paintwork, trims, side windows and wiper blades: checking cleanliness	108
3.96	Body: checking vehicle paintwork for damage and corrosion from below and with bonnet, rear lid and doors open	108
3.97	High-voltage battery: checking state of charge (recommendation: approx. 80% when delivering to customer)	108
3.98	High-voltage battery: charging	108
3.99	High-voltage battery on electric vehicles and hybrid vehicles: determining and recording state of charge (SOC)	109
3.100	High-voltage battery on electric vehicles and hybrid vehicles: charging to a state of charge (SOC) of 3/4 according to manufacturer's instructions	109
3.101	Vehicles parked outdoors: locking	109
3.102	Road test	109
3.103	Stock vehicles: observing measures specified in maintenance table for stock vehicles (see "Before handing vehicle over to customer")	110
3.104	Charging cable: checking that cable is present and complete	110
3.105	Charging system: checking that system is present and complete	111
3.106	Charging socket: checking for dirt and damage	111
3.107	Accessories: installing	111
3.108	Checklist "Documentation of cleaning and care routine": checking that list is present	112
3.109	"Stock vehicle maintenance" checklist: signing and placing in vehicle wallet	112
3.110	Cleaning and care: checking that required measures have been carried out on time	112
3.111	Stock vehicle care management: deciding and recording date of next check	112
3.112	Display instruments: setting time and date	112
3.113	Manual gearbox/automatic gearbox: selecting 1st gear/park	112
3.114	Automatic gearbox (Tiptronic): changing ATF	113
3.115	Dual clutch gearbox (S tronic): changing ATF and renewing exchangeable ATF filter	113
3.116	Dual clutch gearbox (S tronic): changing ATF and renewing exchangeable ATF filter (if fitted)	113
3.117	Interior mirror: calibrating compass	113
3.118	Poly V-belt for ancillaries: renewing	113
3.119	Instrument cluster: resetting driver information system	113
3.120	Toothed belt for camshaft drive: renewing	113
3.121	Toothed belt for camshaft drive, and drive sprockets for camshaft, crankshaft and high-pressure pump: renewing	114
3.122	Toothed belt for camshaft drive and tensioning roller: renewing	114
4	Exhaust emissions test	115
4.1	Petrol engines: performing exhaust emissions test	115
4.2	Diesel engines: performing exhaust emissions test - up to EU5	123
4.3	Diesel engines: performing exhaust emissions test - from EU6 onwards	132
5	Periodic technical inspection (PTI)	134