

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
2 Repair instructions	4
2.1 Rules for cleanliness	4
2.2 General notes	4
2.3 Contact corrosion	5
2.4 ESD (electrostatic discharge) workplace	5
2.5 Routing and attachment of pipes, hoses and wiring	5
2.6 Identification plates	5
2.7 Use of impact wrenches	6
91 - Radio, telephone, navigation	7
1 Safety information	7
2 Infotainment system	8
2.1 Layout - infotainment system	8
2.2 Overview of fitting locations - infotainment system	15
2.3 Removing and installing infotainment system display	17
2.4 Removing and installing control unit 1 for information electronics J794	19
2.5 Removing and installing multimedia system operating unit E380	21
2.6 Removing and installing driver side volume regulator E67	22
2.7 Removing and installing multimedia system button module E817	23
3 Sound system	24
3.1 Layout - sound system	24
3.2 Overview of fitting locations - sound system	29
3.3 Removing and installing digital sound package control unit/amplifier	32
3.4 Removing and installing rear treble loudspeakers R14 / R16	35
3.5 Removing and installing front treble loudspeakers R20 / R22	36
3.6 Removing and installing front treble loudspeakers 2 R220 / R221	37
3.7 Removing and installing front mid-range loudspeakers R103 / R104	38
3.8 Removing and installing front mid-range loudspeakers 2 R276 / R277	38
3.9 Removing and installing rear bass loudspeakers R15 / R17	39
3.10 Removing and installing front bass loudspeakers R21 / R23	39
3.11 Removing and installing subwoofer R211	40
3.12 Removing and installing effect loudspeakers	41
3.13 Removing and installing centre loudspeaker R208	42
3.14 Removing and installing centre loudspeaker 2 R219	42
3.15 Removing and installing internal microphone R74	43
4 Aerial systems	44
4.1 Layout - aerial systems	44
4.2 Overview of fitting locations - aerial systems	47
4.3 Removing and installing aerial amplifier	53
4.4 Removing and installing window aerial suppression filter C18	54
4.5 Removing and installing roof aerial	55
4.6 Removing and installing GPS aerial	56
4.7 Removing and installing GSM aerial	56
4.8 Removing and installing LTE aeriels	56
4.9 Removing and installing satellite tuner aerial R172	58
4.10 Removing and installing digital radio aerial	58

4.11	Removing and installing emergency call module aerials	58
4.12	Removing and installing bumper aerials	61
4.13	Removing and installing traffic data aerial	61
4.14	Removing and installing dedicated short-range communication aerial	62
4.15	Removing and installing wireless data transfer aerial R336	62
4.16	Removing and installing wireless data transfer aerial 2 R366	63
4.17	Removing and installing near field communication aerial R350	63
4.18	Removing and installing near field communication aerial 2 R351	64
4.19	Removing and installing near field communication control unit 2 J1170	64
5	Radio	66
5.1	Layout - radio	66
5.2	Overview of fitting locations - radio	66
5.3	Removing and installing radio	66
5.4	Removing and installing digital radio/satellite radio	66
6	Telephone system	67
6.1	Layout - telephone	67
6.2	Overview of fitting locations - telephone system	77
6.3	Assembly overview - microphone unit	79
6.4	Removing and installing front microphone R140 / R141	81
6.5	Removing and installing aerial amplifier for mobile telephone R86	82
6.6	Removing and installing telephone bracket	82
7	Navigation system	85
7.1	Layout - navigation system	85
7.2	Overview of fitting locations - navigation system	85
7.3	Removing and installing control unit for navigation system	88
7.4	Removing and installing chip card reader control unit	88
8	TV system	90
8.1	Layout - TV system	90
8.2	Overview of fitting locations - TV system	91
8.3	Removing and installing TV tuner	92
9	Reversing camera system	95
9.1	Layout - reversing camera system	95
9.2	Overview of fitting locations - reversing camera system	95
9.3	Removing and installing reversing camera R189	96
9.4	Removing and installing reversing camera system control unit J772	96
9.5	Calibrating reversing camera system	97
10	Multifunction steering wheel	103
10.1	Layout - multifunction steering wheel	103
10.2	Assembly overview - multi-function steering wheel	103
10.3	Removing and installing multifunction buttons in steering wheel E441 / E440	104
10.4	Removing and installing Tiptronic switches in steering wheel E480 / E479	105
11	Connection for external multimedia devices	107
11.1	Layout - connection for external multimedia devices	107
11.2	Removing and installing connection for external multimedia devices	109
11.3	Removing and installing USB connection 1 U41	110
11.4	Removing and installing USB charging socket 2 U38	110
11.5	Removing and installing control unit with Android operating system J1243	111
12	Rear Seat Entertainment system (RSE)	112
12.1	Layout - Rear Seat Entertainment system	112
12.2	Overview of fitting locations - Rear Seat Entertainment system	112
12.3	Removing and installing multimedia system display unit Y31 / Y32	113
12.4	Removing and installing holder for multimedia system display unit R315 / R316	114
12.5	Removing and installing rear information display and operating unit control unit J648 / J649	115

13	Overhead view camera	116
13.1	Layout - overhead view camera system	116
13.2	Overview of fitting locations - overhead view camera	117
13.3	Removing and installing control unit for overhead view camera J928	119
13.4	Removing and installing rear overhead view camera R246	119
13.5	Removing and installing front overhead view camera R243	119
13.6	Removing and installing right and left overhead view cameras R244 / R245	120
13.7	Calibrating overhead view camera	121
14	Online services	124
14.1	Layout - online services	124
14.2	Overview of fitting locations - mobile online services	127
14.3	Removing and installing emergency call module control unit and communication unit J949	132
14.4	Removing and installing emergency battery, telematics A16	133
14.5	Removing and installing loudspeaker for emergency call module R335	134
15	Personal danger alarm system	135
15.1	Overview of fitting locations - personal danger alarm system	135