

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with high-voltage system	2
1.2 Safety precautions when working in the vicinity of high-voltage components	3
1.3 Safety precautions when working on vehicles with start/stop system	3
1.4 Safety precautions when using testers and measuring instruments during a road test	4
1.5 Safety precautions when working on pyrotechnic components	4
1.6 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolators (pyrotechnic components)	6
1.7 Additional safety regulations for airbag control units	6
1.8 Additional safety regulations for side airbags	7
1.9 Additional safety regulations for curtain airbags	8
1.10 Safety regulations for crash sensors (pressure sensors) for front side airbag	8
1.11 Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version	9
1.12 Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	9
1.13 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	10
1.14 Checking airbag mounting components following an accident	11
1.15 Accident in which no airbag was triggered	11
1.16 Checking seat belts	12
1.17 Checking belt webbing	12
1.18 Checking automatic belt retractor (locking action)	13
1.19 Visual inspection of belt buckle	14
1.20 Functional check of belt buckle	14
1.21 Checking guide fittings and latch plate	14
1.22 Checking securing components and anchorage points following an accident	14
1.23 Checking child seat restraint function of seat belt for additional child seats (not for driver seat belt; country-specific version)	15
1.24 Checking child seat anchors following an accident	15
1.25 Safety regulations for automatic anti-dazzle interior mirror	15
2 Repair instructions	17
2.1 Contact corrosion	17
2.2 Routing and attachment of pipes, hoses and wiring	17
2.3 Identification plates	17
2.4 Use of impact wrenches	17
68 - Interior equipment	19
1 Safety information	19
2 Storage compartments/covers/trim panels	20
2.1 Overview of fitting locations - storage compartments/covers/trim panels	20
2.2 Assembly overview - dash panel cover (driver side)	21
2.3 Assembly overview - steering column trim	22
2.4 Assembly overview - glove compartment	23
2.5 Removing and installing dash panel cover (driver side)	24
2.6 Removing and installing footwell cover (driver side)	25
2.7 Removing and installing upper steering column trim	26
2.8 Removing and installing lower steering column trim	27
2.9 Removing and installing glove compartment opening mechanism	28
2.10 Removing and installing lock cylinder for glove compartment opening mechanism	29
2.11 Removing and installing glove compartment	30
2.12 Removing and installing glove compartment cover	32
2.13 Removing and installing restrictor for glove compartment cover	32

3	Equipment	34
3.1	Assembly overview - net partition	34
3.2	Assembly overview - sun visors	35
3.3	Assembly overview - sun blind	36
3.4	Removing and installing retainer for net partition	38
3.5	Removing and installing sun visor	38
3.6	Removing and installing sun visor centre mount	39
3.7	Removing and installing sun blind	39
3.8	Removing and installing retainer for sun blind	40
3.9	Removing and installing grab handle	40
4	Centre console	42
4.1	Assembly overview - centre console	42
4.2	Removing and installing rear centre console trim	47
4.3	Removing and installing rear ashtray	48
4.4	Removing and installing centre console insert	48
4.5	Removing and installing front centre console storage compartment	49
4.6	Removing and installing centre console trim	50
4.7	Removing and installing front centre console footwell trim	50
4.8	Removing and installing centre console	51
4.9	Removing and installing trim panel for centre console	53
4.10	Removing and installing cup holders	55
4.11	Removing and installing vent (rear) in centre console	56
4.12	Removing and installing bracket for centre console	57
5	Front centre armrest	59
5.1	Assembly overview - front centre armrest	59
5.2	Removing and installing front centre armrest	59
5.3	Removing and installing upper part of centre armrest	60
6	Interior mirror	62
6.1	Assembly overview - interior mirror	62
6.2	Removing and installing interior mirror	62
6.3	Setting magnetic deflection zone	64
6.4	Calibrating digital compass	65
6.5	Adjusting automatic anti-dazzle interior mirror for right-hand drive or left-hand drive vehicles	66
6.6	Selecting the applicable deflection zone from the map	66
69 - Passenger protection		73
1	Safety information	73
2	Seat belts	74
2.1	Overview of fitting locations - seat belts and anchorage points	74
2.2	Assembly overview - front three-point seat belt	77
2.3	Assembly overview - rear outer three-point seat belt	81
2.4	Assembly overview - rear centre three-point seat belt	81
2.5	Assembly overview - front belt buckle	83
2.6	Assembly overview - rear belt buckle	83
2.7	Removing and installing front three-point seat belt	85
2.8	Removing and installing rear three-point seat belt	92
2.9	Removing and installing rear belt guide	95
2.10	Removing and installing front belt guide	97
2.11	Removing and installing front belt end fitting	97
2.12	Removing and installing rear outer belt end fitting	98
2.13	Removing and installing rear centre belt end fitting	99
2.14	Removing and installing belt height adjuster	99
2.15	Removing and installing front belt buckle	100
2.16	Removing and installing rear belt buckle	101

3	Child seat anchors	104
3.1	Assembly overview - front child seat anchors	104
3.2	Assembly overview - rear child seat anchors	104
3.3	Removing and installing front child seat anchor	105
3.4	Removing and installing rear child seat anchor	106
4	Airbag system	109
4.1	Overview of fitting locations - airbag system	109
5	Airbag control unit	112
5.1	Assembly overview - airbag control unit	112
5.2	Removing and installing airbag control unit J234	112
6	Battery isolation igniter	116
6.1	Assembly overview - battery isolation igniter	116
6.2	Removing and installing battery isolation igniter	118
7	Driver airbag	122
7.1	Assembly overview - driver airbag	122
7.2	Removing and installing airbag unit with igniters	123
7.3	Removing and installing connector at airbag	131
8	Front passenger airbag	134
8.1	Assembly overview - front passenger airbag	134
8.2	Removing and installing front passenger airbag unit with igniters	136
8.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	139
9	Side airbags	140
9.1	Assembly overview - front side airbag	140
9.2	Assembly overview - rear side airbag	140
9.3	Removing and installing front side airbag with igniter	141
9.4	Removing and installing rear side airbag with igniter	144
9.5	Removing and installing wire for side airbag	147
10	Curtain airbags	150
10.1	Assembly overview - curtain airbag	150
10.2	Removing and installing curtain airbag with igniter	150
11	Knee bolster	154
11.1	Assembly overview - knee bolster	154
11.2	Removing and installing knee bolster	155
12	Crash sensors for airbags	157
12.1	Overview of fitting locations - crash sensors for airbags	157
12.2	Removing and installing front airbag crash sensor for driver side G283	159
12.3	Removing and installing front side airbag crash sensor G179 / G180	161
12.4	Removing and installing rear side airbag crash sensor G256 / G257	164
12.5	Removing and installing centre crash sensor for X/Y axis G858	166
13	Seat position sensor	169
13.1	Assembly overview - seat position sensor	169
13.2	Removing and installing seat position sensor	169
14	Belt-fastened recognition system	171
14.1	Removing and installing seat occupied sensor on front passenger side G128	171
15	Seat occupied recognition system	172
15.1	Overview of fitting locations - seat occupied recognition system	172
15.2	Removing and installing seat occupied sensor	173
16	Pedestrian protection	176
16.1	Assembly overview - pedestrian protection	176
16.2	Removing and installing centre crash sensor for pedestrian protection G693	178
16.3	Removing and installing crash sensor for pedestrian protection	180
16.4	Resetting triggered pedestrian protection system	182
16.5	Removing and installing trigger for pedestrian protection G598 / G599	183

70 - Trim, insulation	186
1 Safety information	186
2 Front door trim	187
2.1 Assembly overview - front door trim	187
2.2 Removing and installing trim panel	189
2.3 Removing and installing trim for door puller	189
2.4 Removing and installing front door trim	190
2.5 Removing and installing front door puller	192
2.6 Removing and installing interior door handle	193
2.7 Removing and installing window frame trim	194
3 Rear door trim	196
3.1 Assembly overview - rear door trim	196
3.2 Removing and installing rear door trim	197
3.3 Removing and installing interior door handle	200
3.4 Removing and installing rear door puller	200
3.5 Removing and installing window frame trim	201
4 Dash panel	204
4.1 Assembly overview - dash panel	204
4.2 Removing and installing dash panel cover (side)	207
4.3 Removing and installing trim for dash panel insert	207
4.4 Removing and installing trim panel for dash panel	208
4.5 Removing and installing loudspeaker trim	209
4.6 Removing and installing dash panel	212
4.7 Removing and installing trim for operating and display unit	218
4.8 Removing and installing outer dash panel vent	218
4.9 Removing and installing centre vent	220
4.10 Removing and installing front centre defroster vent	222
4.11 Removing and installing side defroster vent	223
4.12 Removing and installing support for dash panel	224
4.13 Removing and installing tether for dash panel vents (centre and passenger side)	225
5 Dash panel cross member	226
5.1 Assembly overview - dash panel cross member	226
5.2 Removing and installing dash panel cross member	228
6 Passenger compartment trim panels	232
6.1 Overview of fitting locations - passenger compartment trim panels	232
6.2 Assembly overview - sill panel moulding	233
6.3 Assembly overview - A-pillar trim	234
6.4 Assembly overview - B-pillar trim	236
6.5 Assembly overview - C-pillar trim	236
6.6 Assembly overview - D-pillar trim	237
6.7 Assembly overview - foot rest and floor covering	238
6.8 Removing and installing sill panel moulding	240
6.9 Removing and installing A-pillar trim	241
6.10 Removing and installing B-pillar trim	245
6.11 Removing and installing C-pillar trim	248
6.12 Removing and installing D-pillar trim	249
6.13 Removing and installing side cover	252
6.14 Removing and installing foot rest	254
6.15 Removing and installing floor covering	255
7 Luggage compartment trim panels	257
7.1 Overview of fitting locations - luggage compartment trim panels	257
7.2 Assembly overview - luggage compartment side trim	258
7.3 Assembly overview - luggage compartment floor	260
7.4 Assembly overview - lower rear lid trim	264

7.5	Removing and installing lower rear lid trim	266
7.6	Removing and installing upper rear lid trim	267
7.7	Removing and installing luggage compartment side trim	269
7.8	Removing and installing lock carrier trim	271
7.9	Removing and installing luggage compartment floor	272
7.10	Removing and installing fastening ring	275
7.11	Removing and installing grip for rear luggage compartment floor	277
7.12	Removing and installing gap cover	278
7.13	Removing and installing retaining rail	278
7.14	Removing and installing tail light cover	279
7.15	Removing and installing switch trim	279
8	Roof trim panels	282
8.1	Assembly overview - moulded headliner	282
8.2	Removing and installing moulded headliner	283
8.3	Lowering moulded headliner	284
8.4	Lowering moulded headliner for removal of roof aerial	287
8.5	Removing and installing roof reinforcement	289
72 - Seat frames	293	
1	Safety information	293
2	Overview - seat versions	294
2.1	Overview of fitting locations - seat versions	294
3	Front seats	297
3.1	Overview of fitting locations - electrical and electronic components	297
3.2	Assembly overview - front seat	300
3.3	Assembly overview - front seat backrest	302
3.4	Assembly overview - head restraint	304
3.5	Assembly overview - seat pan	305
3.6	Removing and installing front seat	309
3.7	Connecting and disconnecting airbag adapter	315
3.8	Attaching front seat to seat repair stand	318
3.9	Connecting and disconnecting modular wiring	319
3.10	Removing and installing seat longitudinal adjustment handle	320
3.11	Removing and installing seat height adjustment handle	321
3.12	Removing and installing backrest adjuster knob	322
3.13	Removing and installing front seat backrest	324
3.14	Removing and installing spring mat	327
3.15	Removing and installing backrest fan	330
3.16	Removing and installing head restraint	331
3.17	Removing and installing head restraint guide	331
3.18	Dismantling and assembling seat pan	332
3.19	Removing and installing seat adjustment operating unit E470 / E471	336
3.20	Removing and installing lumbar support adjustment switch E663 / E664	337
3.21	Removing and installing massage function button E670 / E671	338
3.22	Removing and installing lumbar support adjustment motor V125 / V126 / V129 / V130	338
3.23	Removing and installing control unit for seat functions	341
3.24	Removing and installing seat cushion fan	341
4	Front seat pneumatic system	344
4.1	Connection diagram - pneumatic system	344
4.2	Assembly overview - pneumatic system	344
4.3	Checking pneumatic system	346
4.4	Severing and connecting pneumatic lines	349
4.5	Servicing pneumatic lines	350
4.6	Removing and installing air cushion for lumbar support	351
4.7	Removing and installing control unit for front multicontour seat J872 / J873	352

4.8	Removing and installing compressor for multicontour seat V439 / V440	354
5	Rear seats	356
5.1	Assembly overview - bench seat/individual seats	356
5.2	Assembly overview - head restraint and head restraint guide	358
5.3	Assembly overview - rear seat backrest	359
5.4	Assembly overview - locking mechanism	365
5.5	Assembly overview - centre armrest	367
5.6	Assembly overview - backrest remote release mechanism	368
5.7	Removing and installing bench seat/individual seats	370
5.8	Removing and installing head restraint	373
5.9	Removing and installing head restraint guide	374
5.10	Removing and installing rear seat backrest	375
5.11	Removing and installing seat frame trim	380
5.12	Removing and installing trim for locking mechanism	383
5.13	Removing and installing locking mechanism for rear seat backrest	385
5.14	Removing and installing outer bearing sleeve	387
5.15	Removing and installing inner pivot pin	387
5.16	Removing and installing trim for folding backrest (centre)	388
5.17	Removing and installing centre mounting	390
5.18	Removing and installing centre armrest	391
5.19	Removing and installing side padding	392
5.20	Removing and installing Bowden cable for folding backrest	393
74 - Seat - padding, covers	395	
1	Safety information	395
2	Covers and padding on front seats	396
2.1	Assembly overview - seat pan cover and padding	396
2.2	Assembly overview - backrest cover and padding	399
2.3	Assembly overview - seat heater elements	403
2.4	Removing and installing seat pan cover and padding	406
2.5	Removing and installing backrest cover and padding	409
2.6	Separating seat pan cover and padding	412
2.7	Separating backrest cover and padding	414
2.8	Removing and installing seat heater element	415
2.9	Removing and installing backrest heater element	416
3	Covers and padding on rear seats	418
3.1	Assembly overview - cover and padding	418
3.2	Assembly overview - seat heater elements	421
3.3	Removing and installing cover and padding	422
3.4	Removing and installing intermediate padding - backrest with load-through hatch	425
3.5	Detaching cover from padding	426
3.6	Removing and installing seat heater element	429
3.7	Removing and installing backrest heater element	429