

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on the cooling system	1
1.4 Safety precautions when working on the high-voltage system	2
1.5 Safety precautions when working in the vicinity of high-voltage components	3
2 Repair instructions	4
2.1 Routing and attachment of pipes, hoses and wiring	4
2.2 Contact corrosion	4
2.3 Preparations for installation of self-adhesive components	4
2.4 General information on using adhesives	6
2.5 Secure threaded connections	7
2.6 Identification plates	7
2.7 Impact wrenches	7
50 - Body - front	9
1 Safety information	9
2 Lock carrier	10
2.1 Assembly overview - lock carrier	10
2.2 Removing and installing lock carrier	12
2.3 Removing and installing lower longitudinal member	18
3 Wing	19
3.1 Assembly overview - wing	19
3.2 Removing and installing wing	21
3.3 Removing and installing wing panel brace	22
3.4 Removing and installing wing bracket	23
3.5 Removing and installing cover for wing	25
3.6 Removing and installing closure plate	26
4 Bulkhead	27
4.1 Assembly overview - bulkhead	27
4.2 Assembly overview - plenum chamber cover	27
4.3 Removing and installing plenum chamber bulkhead	28
4.4 Removing and installing plenum chamber cover	32
4.5 Removing and installing cover (side) for plenum chamber cover	33
55 - Bonnet, rear lid	35
1 Safety information	35
2 Bonnet	36
2.1 Assembly overview - bonnet	36
2.2 Assembly overview - insulation and impact guard on bonnet	37
2.3 Overview of fitting locations - Bowden cable	38
2.4 Assembly overview - Bowden cable	39
2.5 Removing and installing bonnet	41
2.6 Adjusting bonnet	43
2.7 Removing and installing hinges	48
2.8 Resetting hinge	49
2.9 Removing and installing striker	49
2.10 Removing and installing gas strut	50
2.11 Releasing gas from gas strut	51
2.12 Removing and installing insulation	51
2.13 Removing and installing impact guard	52



2.14	Removing and installing Bowden cable	53
2.15	Removing and installing bonnet lock	59
2.16	Removing and installing operating lever for bonnet lock	60
2.17	Removing and installing operating lever for arrester	60
2.18	Removing and installing mounting bracket for operating lever for bonnet lock	61
2.19	Removing and installing mounting bracket with Bowden cable for operating lever for arrester	62
3	Rear lid	64
3.1	Assembly overview - rear lid	64
3.2	Assembly overview - rear lid power opening	68
3.3	Removing and installing rear lid	70
3.4	Adjusting rear lid	72
3.5	Removing and installing hinges	74
3.6	Removing and installing rear lid seal	75
3.7	Removing and installing adjusting buffer	76
3.8	Removing and installing gas strut	77
3.9	Releasing gas from gas strut	78
3.10	Removing and installing rear lid lock	79
3.11	Removing and installing striker	80
3.12	Removing and installing power latching motor for rear lid V382	81
3.13	Removing and installing Bowden cable for power latching system	83
3.14	Removing and installing rear lid drive unit VX69/rear lid drive unit 2 VX77	86
3.15	Adapting rear lid drive unit VX69/rear lid drive unit 2 VX77	86
3.16	Preparing rear lid drive unit VX69/rear lid drive unit 2 VX77 for disposal	87
3.17	Removing and installing rear lid control unit J605	88
3.18	Removing and installing rear lid power opening control unit J938	88
3.19	Removing and installing rear lid power opening sender G750/G760	89
4	Tank flap unit	91
4.1	Assembly overview - tank flap unit	91
4.2	Removing and installing tank flap unit	91
4.3	Removing and installing trim panel for tank flap	93
4.4	Removing and installing drain hose for tank flap unit	94
4.5	Removing and installing manual release cable	95
5	Charging flap unit	96
5.1	Assembly overview - charging flap unit	96
5.2	Removing and installing charging flap unit	96
5.3	Removing and installing cable for high-voltage charging flap lock	97
57	Front doors, door components, central locking	99
1	Safety information	99
2	Door	100
2.1	Assembly overview - door	100
2.2	Assembly overview - door seals	106
2.3	Removing and installing door	107
2.4	Adjusting door	108
2.5	Removing and installing door hinge - Security	115
2.6	Removing and installing door arrester	116
2.7	Removing and installing inner door seal	117
2.8	Removing and installing outer door seal	118
3	Door components	122
3.1	Assembly overview - window regulator	122
3.2	Assembly overview - door handle and door lock	124
3.3	Assembly overview - window guides and window slot seals	126
3.4	Removing and installing window regulator	127
3.5	Removing and installing window regulator motor	130

3.6	Removing and installing door handle	131
3.7	Removing and installing door handle trim	132
3.8	Removing and installing mounting bracket	134
3.9	Removing and installing operating cable for exterior door handle	136
3.10	Removing and installing lock cylinder	136
3.11	Removing and installing housing	137
3.12	Removing and installing door lock	137
3.13	Removing and installing cover for door lock	138
3.14	Removing and installing striker	139
3.15	Removing and installing operating cable for interior door handle	140
3.16	Removing and installing inner door cover	140
3.17	Removing and installing window guide	141
3.18	Removing and installing inner window slot seal	142
3.19	Removing and installing outer window slot seal	143
4	Central locking system	145
4.1	Overview of fitting locations - central locking system	145
4.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	146
4.3	Removing and installing rear left door control unit J388 and rear right door control unit J389	147
4.4	Removing and installing convenience system central control unit J393	148
4.5	Removing and installing bonnet contact switch F266 / bonnet contact switch 2 F329	149
4.6	Removing and installing tank filler flap locking motor V155	150
4.7	Removing and installing actuator for high-voltage charging flap lock 1 F496	151
58	Rear doors, door components	152
1	Safety information	152
2	Door	153
2.1	Assembly overview - door	153
2.2	Assembly overview - door seals	158
2.3	Removing and installing door	159
2.4	Adjusting door	160
2.5	Removing and installing door arrester	167
2.6	Removing and installing inner door seal	168
2.7	Removing and installing outer door seal	169
2.8	Removing and installing joint seal	174
2.9	Removing and installing side member seal	174
3	Door components	176
3.1	Assembly overview - window regulator	176
3.2	Assembly overview - door handle and door lock	179
3.3	Assembly overview - window guides and window slot seals	181
3.4	Removing and installing window regulator	182
3.5	Removing and installing window regulator motor	186
3.6	Removing and installing door handle	187
3.7	Removing and installing door handle trim	188
3.8	Removing and installing mounting bracket	189
3.9	Removing and installing operating cable for door lock	192
3.10	Removing and installing housing	194
3.11	Removing and installing door lock	195
3.12	Removing and installing striker	196
3.13	Removing and installing operating cable for door opener	196
3.14	Removing and installing inner door cover	199
3.15	Removing and installing window guide	201
3.16	Removing and installing guide rail for door window	202
3.17	Removing and installing inner window slot seal	203
3.18	Removing and installing outer window slot seal	204



60 - Sunroof	206
1 Safety information	206
2 Sliding sunroof	207
2.1 Assembly overview - sliding sunroof	207
2.2 Assembly overview - sunroof roller blind	212
2.3 Assembly overview - wind deflector	214
2.4 Removing and installing sliding sunroof frame	216
2.5 Removing and installing glass panel	221
2.6 Adjusting glass panel	226
2.7 Removing and installing sliding sunroof adjustment control unit J245	231
2.8 Adapting sliding sunroof adjustment control unit J245	233
2.9 Removing and installing sliding sunroof motor V1	233
2.10 Adapting sliding sunroof motor V1	235
2.11 Removing and installing sliding sunroof seals	235
2.12 Removing and installing sunroof roller blind	238
2.13 Removing and installing sunroof roller blind motor V260	244
2.14 Adapting sunroof roller blind motor V260	245
2.15 Removing and installing cables for sunroof roller blind	245
2.16 Removing and installing wind deflector	246
2.17 Emergency opening	248
3 Water drain hoses	249
3.1 Assembly overview - water drain hoses	249
3.2 Cleaning water drain hoses	250
3.3 Removing and installing water drain hoses	251
63 - Bumpers	255
1 Safety information	255
2 Front bumper	256
2.1 Assembly overview - bumper cover	256
2.2 Assembly overview - reflector	264
2.3 Assembly overview - bumper carrier	265
2.4 Removing and installing bumper cover	267
2.5 Removing and installing side panel of bumper cover	270
2.6 Removing and installing lower section of bumper cover	271
2.7 Adjusting bumper cover	272
2.8 Removing and installing bumper cover mounting	273
2.9 Removing and installing cover for headlight washer jet	274
2.10 Removing and installing dummy cover in bumper cover	275
2.11 Removing and installing side air intake grille	275
2.12 Removing and installing centre air intake grille	278
2.13 Removing and installing connecting piece for side panel of bumper cover	279
2.14 Removing and installing closure plate for side panel of bumper cover	280
2.15 Removing and installing fastening strip for side panel of bumper cover	281
2.16 Removing and installing trim for side air intake grille	283
2.17 Removing and installing trim strip for lower section of bumper cover	283
2.18 Removing and installing front spoiler (side)	284
2.19 Removing and installing underbody guard	285
2.20 Removing and installing closure plate for bumper cover	286
2.21 Removing and installing reflector	288
2.22 Removing and installing lock carrier cover	289
2.23 Removing and installing bumper carrier	290
2.24 Removing and installing mounting for bumper carrier	292
2.25 Removing and installing moulded foam insert	293
2.26 Removing and installing bracket for ambient temperature sensor G17	295

3	Rear bumper	296
3.1	Assembly overview - bumper cover	296
3.2	Assembly overview - bumper carrier	306
3.3	Removing and installing bumper cover	308
3.4	Removing and installing cover for tail light	312
3.5	Removing and installing upper section of bumper cover	312
3.6	Removing and installing lower section of bumper cover	313
3.7	Removing and installing base plate for bumper cover	314
3.8	Removing and installing underbody guard	315
3.9	Removing and installing bumper cover mounting	316
3.10	Removing and installing trim strip for bumper cover	318
3.11	Removing and installing trim strip	324
3.12	Removing and installing bumper cover trim	325
3.13	Removing and installing bumper carrier	328
3.14	Removing and installing bracket for parking aid sender	330
64	- Glazing	332
1	Safety information	332
2	Repair instructions	333
2.1	Minimum drying times for bonded windows	333
2.2	Repairing windows	333
2.3	Tools and materials required for installation and removal	333
2.4	Preparing undamaged windows for installation	337
2.5	Preparing new windows for installation	338
2.6	Preparing body flange for installation	340
2.7	Cleaning off adhesive sealant	340
3	Windscreen	342
3.1	Assembly overview - windscreen	342
3.2	Removing and installing windscreen	345
4	Rear window	355
4.1	Assembly overview - rear window	355
4.2	Removing and installing rear window	356
5	Side windows	365
5.1	Assembly overview - rear side window	365
5.2	Removing and installing rear side window	366
6	Door windows	375
6.1	Assembly overview - front door window	375
6.2	Assembly overview - rear door window	376
6.3	Removing and installing front door window	380
6.4	Removing and installing rear door window	384
66	- Exterior equipment	392
1	Safety information	392
2	Radiator grille/front trim	393
2.1	Assembly overview - radiator grille	393
2.2	Removing and installing radiator grille	396
2.3	Preparing new radiator grille for installation	397
2.4	Attaching number plate holder - country-specific version	398
2.5	Removing and installing reinforcement strut	400
3	Spoilers	402
3.1	Assembly overview - spoilers	402
3.2	Removing and installing spoiler	402
3.3	Removing and installing spoiler (side)	404
4	Strips/trim panels/extensions	407



4.1	Assembly overview - trim strip and covers	407
4.2	Assembly overview - sill panel trim	409
4.3	Assembly overview - water deflector strip	410
4.4	Assembly overview - trim panel for A-pillar	411
4.5	Assembly overview - trim panel for B-pillar	412
4.6	Assembly overview - trim panel for C-pillar	413
4.7	Assembly overview - wheel arch covers	414
4.8	Removing and installing trim strip	416
4.9	Removing and installing cover	419
4.10	Removing and installing sill panel trim	422
4.11	Removing and installing water deflector strip	425
4.12	Removing and installing trim panel for A-pillar	426
4.13	Removing and installing trim panel for B-pillar on door	427
4.14	Removing and installing trim panel for C-pillar on door	429
4.15	Removing and installing wheel arch covers	429
4.16	Removing and installing wheel arch extension	433
5	Noise insulation	435
5.1	Assembly overview - noise insulation	435
5.2	Removing and installing noise insulation	435
6	Underbody cladding	437
6.1	Assembly overview - underbody cladding	437
6.2	Assembly overview - underbody struts	439
6.3	Removing and installing front underbody cladding	440
6.4	Removing and installing underbody cladding for tunnel	441
6.5	Removing and installing centre underbody cladding	442
6.6	Removing and installing rear underbody cladding	442
6.7	Removing and installing underbody cladding (rear centre)	443
6.8	Removing and installing side underbody cladding	444
6.9	Removing and installing tunnel cross-piece	444
6.10	Removing and installing cover for tunnel cross-piece	445
6.11	Removing and installing underbody guard (rear)	445
7	Roof strips/roof rails	448
7.1	Assembly overview - roof rail	448
7.2	Removing and installing roof rail	450
7.3	Removing and installing roof carrier detection sensor G625	453
7.4	Removing and installing compensation element	453
8	Exterior mirrors	455
8.1	Assembly overview - exterior mirror	455
8.2	Removing and installing exterior mirror	457
8.3	Removing and installing mirror glass	458
8.4	Removing and installing mirror adjustment unit	460
8.5	Removing and installing mirror cover	460
8.6	Removing and installing mirror trim	461
9	Wheel housing liners	462
9.1	Assembly overview - front wheel housing liner	462
9.2	Assembly overview - rear wheel housing liner	463
9.3	Removing and installing front wheel housing liner	463
9.4	Removing and installing wheel spoiler (front)	464
9.5	Removing and installing drive shaft cover	465
9.6	Removing and installing rear wheel housing liner	467
10	Lettering and badges	469
10.1	Assembly overview - lettering and badges	469
10.2	Dimensions - lettering and badges at rear	469
10.3	Dimensions - lettering and badges on sides	470
10.4	General notes on renewing lettering and badges	471

10.5	Removing and installing lettering and badges for radiator grille	472
11	Towing bracket	475
11.1	Assembly overview - towing bracket	475
11.2	Removing and installing trailer detector control unit J345	475
12	Heat shields	477
12.1	Overview of fitting locations - heat shields	477
12.2	Removing and installing heat shield (front) for longitudinal member	478
12.3	Removing and installing heat shield (rear) for longitudinal member	480
12.4	Removing and installing heat shield for plenum chamber bulkhead	481
12.5	Removing and installing heat shield for tunnel (front)	482
12.6	Removing and installing heat shield for tunnel (rear)	483
12.7	Removing and installing heat shield for propshaft	484
12.8	Removing and installing heat shield for rear silencer	485