

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety briefing/employee qualification</b>	<b>1</b>
1.1 Qualification	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety information	2
2.2 Work that requires high-voltage system to be de-energised	4
2.3 Safety precautions when working on the high-voltage system	4
2.4 Safety precautions when working in the vicinity of high-voltage components	5
2.5 Safety precautions when working on the cooling system	6
2.6 Safety precautions when using testers and measuring instruments during a road test	6
<b>3 Repair instructions</b>	<b>7</b>
3.1 Important notes	7
3.2 General notes	7
3.3 Information on handling fine dust, aluminium dust and steel dust	8
3.4 Routing and attachment of pipes, hoses and wiring	9
3.5 Contact corrosion	9
3.6 Bonding surfaces for self-adhesive components	9
3.7 Secure threaded connections	9
3.8 Identification plates	9
3.9 Impact wrenches	9
3.10 Moulded foam inserts	10
3.11 Bonded joints	12
3.12 Galvanised body panels, high-strength and extra-high-strength steel	14
3.13 Surface treatment	15
3.14 Matching the surface contour	16
<b>4 Vehicle identification data</b>	<b>17</b>
4.1 Vehicle identification number	17
4.2 Type plate	17
4.3 Vehicle data sticker	17
<b>5 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)</b>	<b>18</b>
<b>6 Cast aluminium profiles</b>	<b>20</b>
<b>7 Overview of attachment pairings</b>	<b>22</b>
<b>8 Overview of rivets and tools</b>	<b>23</b>
8.1 Overview of rivets used for repair measures	27
8.2 Removing rivets accessible from one side only	28
8.3 Renewing studs	29
8.4 Thread repair for M6 pop rivet nut	30
8.5 Repairing thread for seat belt anchorage	30
<b>9 Body dimensions</b>	<b>32</b>
9.1 Body - front	32
9.2 Floor group, front	34
9.3 Floor group, rear	35
9.4 Body - rear	36
<b>10 Processing body structure adhesive D 180 004 M2</b>	<b>38</b>
10.1 Preparing bonding surfaces	39
<b>11 Using edge milling unit -VAS 882 005-</b>	<b>53</b>
11.1 General information	53
11.2 Assembling unit/changing milling tool	56
11.3 Separating flanged edges	66
11.4 Separating panels at corners and along surfaces	72



11.5	Separating outer edges	75
11.6	Renewing roof	78
11.7	Separating laser weld seams using round head milling unit	80
11.8	Aluminium panels	82
<b>12</b>	<b>Tools</b>	<b>85</b>
12.1	Straightening jig	89
<b>50 - Body - front</b>		<b>91</b>
<b>1</b>	<b>Safety information</b>	<b>91</b>
<b>2</b>	<b>Renewing impact damper mounting</b>	<b>92</b>
2.1	Tools	92
2.2	Procedure	93
<b>3</b>	<b>Renewing upper wheel housing longitudinal member - partial renewal</b>	<b>97</b>
3.1	Tools	97
3.2	Procedure	98
<b>4</b>	<b>Renewing front longitudinal member - partial renewal</b>	<b>104</b>
4.1	Tools	104
4.2	Procedure	105
<b>5</b>	<b>Renewing front longitudinal member with suspension turret</b>	<b>112</b>
5.1	Tools	112
5.2	Procedure	113
<b>6</b>	<b>Renewing upper footwell cross member</b>	<b>123</b>
6.1	Tools	123
6.2	Procedure	124
<b>7</b>	<b>Repairing threads for attachment of subframe</b>	<b>128</b>
7.1	Tools	128
<b>51 - Body - centre</b>		<b>136</b>
<b>1</b>	<b>Safety information</b>	<b>136</b>
<b>2</b>	<b>Permitted separating cuts on complete side frame</b>	<b>137</b>
<b>3</b>	<b>Renewing roof</b>	<b>138</b>
3.1	Tools	138
3.2	Procedure	144
<b>4</b>	<b>Renewing roof (vehicles with panoramic tilting sunroof)</b>	<b>159</b>
4.1	Tools	159
4.2	Procedure	160
<b>5</b>	<b>Renewing roof side member</b>	<b>174</b>
5.1	Tools	174
5.2	Procedure	175
<b>6</b>	<b>Renewing front roof cross member</b>	<b>182</b>
6.1	Tools	182
6.2	Procedure	183
<b>7</b>	<b>Renewing rear roof cross member</b>	<b>186</b>
7.1	Tools	186
7.2	Procedure	187
<b>8</b>	<b>Renewing outer A-pillar</b>	<b>192</b>
8.1	Tools	192
8.2	Procedure	193
<b>9</b>	<b>Renewing upper inner A-pillar - partial renewal</b>	<b>198</b>
9.1	Tools	198
9.2	Procedure	199
<b>10</b>	<b>Renewing lower inner A-pillar - partial renewal</b>	<b>209</b>
10.1	Tools	209

10.2	Procedure	210
<b>11</b>	<b>Renewing outer B-pillar</b>	<b>218</b>
11.1	Tools	219
11.2	Procedure	219
<b>12</b>	<b>Renewing inner B-pillar - partial renewal</b>	<b>224</b>
12.1	Tools	224
12.2	Procedure	225
<b>13</b>	<b>Renewing inner B-pillar</b>	<b>240</b>
13.1	Tools	240
13.2	Procedure	241
<b>14</b>	<b>Renewing outer side member</b>	<b>249</b>
14.1	Tools	249
14.2	Procedure	250
<b>15</b>	<b>Renewing inner side member</b>	<b>255</b>
15.1	Tools	255
15.2	Procedure	256
<b>16</b>	<b>Renewing front seat cross member</b>	<b>260</b>
16.1	Tools	260
16.2	Procedure	261
<b>17</b>	<b>Renewing rear seat cross member</b>	<b>267</b>
17.1	Tools	267
17.2	Procedure	268
<b>18</b>	<b>Renewing centre tunnel</b>	<b>272</b>
18.1	Tools	272
18.2	Procedure	273
<b>53 - Body - rear</b>		<b>281</b>
<b>1</b>	<b>Safety information</b>	<b>281</b>
<b>2</b>	<b>Permitted separating cuts on complete side frame</b>	<b>282</b>
<b>3</b>	<b>Renewing rear cross panel</b>	<b>283</b>
3.1	Tools	283
3.2	Procedure	284
<b>4</b>	<b>Renewing rear cross panel reinforcement</b>	<b>289</b>
4.1	Tools	290
4.2	Procedure	290
<b>5</b>	<b>Renewing tail light mounting</b>	<b>294</b>
5.1	Tools	294
5.2	Procedure	295
<b>6</b>	<b>Renewing lower corner panel</b>	<b>300</b>
6.1	Tools	300
6.2	Procedure	301
<b>7</b>	<b>Renewing rear longitudinal member - partial renewal</b>	<b>305</b>
7.1	Tools	306
7.2	Procedure	306
<b>8</b>	<b>Renewing side panel</b>	<b>311</b>
8.1	Tools	311
8.2	Procedure	312
<b>9</b>	<b>Renewing inner side panel</b>	<b>320</b>
9.1	Procedure	321
<b>10</b>	<b>Renewing C-pillar reinforcement</b>	<b>326</b>
10.1	Tools	326
10.2	Procedure	327



<b>11</b>	<b>Renewing D-pillar reinforcement</b> .....	<b>331</b>
11.1	Tools .....	331
11.2	Procedure .....	332
<b>12</b>	<b>Renewing outer wheel housing - partial renewal</b> .....	<b>336</b>
12.1	Tools .....	337
12.2	Procedure .....	337
<b>13</b>	<b>Renewing outer wheel housing</b> .....	<b>342</b>
13.1	Tools .....	342
13.2	Procedure .....	343
<b>14</b>	<b>Renewing inner wheel housing</b> .....	<b>347</b>
14.1	Tools .....	347
14.2	Procedure .....	348
<b>15</b>	<b>Renewing luggage compartment floor</b> .....	<b>352</b>
15.1	Tools .....	353
15.2	Procedure .....	353