

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Gearbox identification	1
1.2 Identification of all-wheel drive coupling 0CJ or 0CX	4
<b>2 Safety information</b>	<b>6</b>
2.1 Safety precautions when working on vehicles with start/stop system	6
2.2 Safety precautions when working on the subframe	6
<b>3 Repair instructions</b>	<b>7</b>
3.1 Contact corrosion	7
3.2 Use of impact wrenches	7
3.3 General repair instructions	8
<b>4 Technical data</b>	<b>13</b>
4.1 Allocation of gearbox to engine	13
4.2 Capacities	18
<b>5 Overview - power transmission</b>	<b>20</b>
5.1 Overview - power transmission, front-wheel drive	20
5.2 Overview - power transmission, all-wheel drive	21
<b>6 Electrical components</b>	<b>22</b>
6.1 Overview of fitting locations - electrical components	22
<b>30 - Clutch</b>	<b>24</b>
<b>1 Clutch mechanism</b>	<b>24</b>
1.1 Assembly overview - pedal cluster	24
1.2 Assembly overview - clutch hydraulics	28
1.3 Removing and installing clutch pedal	30
1.4 Removing and installing over-centre spring	32
1.5 Removing and installing clutch master cylinder	35
1.6 Bleeding clutch mechanism	39
1.7 Checking clutch master cylinder and clutch slave cylinder	41
<b>2 Clutch</b>	<b>43</b>
2.1 Assembly overview - clutch module	43
2.2 Tightening sequence - clutch module to drive plate	43
2.3 Removing and installing clutch module	47
2.4 Servicing clutch	47
<b>34 - Controls, housing</b>	<b>48</b>
<b>1 Selector mechanism</b>	<b>48</b>
1.1 Overview - selector mechanism	48
1.2 Assembly overview - gear knob and cover	49
1.3 Assembly overview - selector mechanism	49
1.4 Removing and installing gear knob	51
1.5 Removing and installing selector mechanism	52
1.6 Adjusting selector mechanism	61
1.7 Checking selector mechanism	64
1.8 Renewing selector shaft oil seal	65
1.9 Removing and installing gear detection sensor G604	68
<b>2 Removing and installing gearbox</b>	<b>73</b>
2.1 Removing gearbox	73
2.2 Installing gearbox	105
2.3 Tightening torques for gearbox	120
<b>3 Assembly mountings</b>	<b>123</b>
3.1 Assembly overview - assembly mountings	123



3.2	Removing and installing tunnel cross member .....	124
3.3	Removing and installing gearbox support with gearbox mounting .....	125
3.4	Removing and installing gearbox mounting .....	127
<b>4</b>	<b>Transporting gearbox .....</b>	<b>128</b>
<b>5</b>	<b>Dismantling and assembling gearbox .....</b>	<b>129</b>
<b>6</b>	<b>Gear oil .....</b>	<b>130</b>
6.1	Checking gear oil level .....	130
6.2	Checking ATF level for all-wheel drive coupling .....	135
<b>35 - Gears, shafts .....</b>		<b>136</b>
1	Dismantling and assembling gears and shafts .....	136
<b>39 - Final drive - front differential .....</b>		<b>137</b>
<b>1</b>	<b>Oil seals .....</b>	<b>137</b>
1.1	Overview of fitting locations - oil seals .....	137
1.2	Renewing left oil seal .....	139
1.3	Renewing right oil seal .....	139
1.4	Renewing output shaft oil seal .....	140
1.5	Renewing sealing cap for output shaft in gearbox cover .....	141
<b>2</b>	<b>Differential .....</b>	<b>144</b>
2.1	Removing and installing left flange shaft .....	144
2.2	Removing and installing right flange shaft .....	144
<b>3</b>	<b>All-wheel drive coupling .....</b>	<b>148</b>