

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Gearbox identification	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety precautions when working on vehicle	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	2
<b>3 Repair instructions</b>	<b>4</b>
3.1 Rules for cleanliness	4
3.2 General notes	4
3.3 General repair instructions	5
3.4 Contact corrosion	7
3.5 Use of impact wrenches	7
<b>4 Technical data</b>	<b>9</b>
4.1 Capacities	9
4.2 Oil distribution	10
<b>5 Overview - power transmission</b>	<b>12</b>
<b>32 - Torque converter</b>	<b>13</b>
1 Torque converter	13
<b>37 - Controls, housing</b>	<b>14</b>
<b>1 Selector mechanism</b>	<b>14</b>
1.1 Assembly overview - selector mechanism	14
1.2 Assembly overview - manual release mechanism for parking lock	16
1.3 Checking selector mechanism	17
1.4 Manual release from position P	21
1.5 Removing and installing selector lever handle	23
1.6 Detaching and attaching selector lever boot on selector lever handle	25
1.7 Removing and installing selector mechanism	26
1.8 Removing and installing manual release cable for parking lock	27
1.9 Renewing seal for parking lock shaft	33
<b>2 Removing and installing gearbox</b>	<b>37</b>
2.1 Removing gearbox	37
2.2 Installing gearbox	78
2.3 Tightening torques for gearbox	86
<b>3 Assembly mountings</b>	<b>88</b>
3.1 Assembly overview - assembly mountings	88
3.2 Removing and installing tunnel cross member	89
<b>4 Transporting gearbox</b>	<b>94</b>
<b>5 Securing to engine and gearbox support</b>	<b>96</b>
<b>6 ATF circuit</b>	<b>97</b>
6.1 Assembly overview - ATF circuit	97
6.2 Removing and installing ATF cooler	100
6.3 Removing and installing ATF lines	101
<b>7 ATF</b>	<b>104</b>
7.1 Overview of fitting locations - drain and inspection plugs	104
7.2 Tools for filling ATF	104
7.3 Checking ATF level	106
7.4 Draining and filling ATF	109



<b>38 - Gears, control</b>	<b>112</b>
<b>1 ATF system</b>	<b>112</b>
1.1 Removing and installing oil pan	112
<b>2 Mechatronic unit</b>	<b>114</b>
<b>39 - Final drive - front differential</b>	<b>115</b>
<b>1 Final drive</b>	<b>115</b>
1.1 Assembly overview - final drive	115
1.2 Removing and installing O-ring on cover for front final drive	118
<b>2 Gear oil</b>	<b>120</b>
2.1 Checking gear oil level	120
2.2 Draining and filling gear oil	127
<b>3 Gear oil cooler and pipes</b>	<b>141</b>
3.1 Removing and installing gear oil cooler	141
<b>4 Oil seals</b>	<b>144</b>
4.1 Renewing left oil seal	144
4.2 Renewing right oil seal	147
<b>5 Differential</b>	<b>149</b>
5.1 Removing and installing left flange shaft	149
5.2 Removing and installing right flange shaft	151
<b>6 Centre differential</b>	<b>154</b>
<b>7 Gearbox control system</b>	<b>155</b>
7.1 Overview of fitting locations - gearbox control system	155