

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working in the vicinity of high-voltage components	1
1.2 Safety precautions when working on the high-voltage system	2
1.3 Safety precautions when working on vehicle	2
1.4 Safety precautions when working on vehicles with start/stop system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	4
1.6 Safety precautions when working on the subframe	4
2 Identification	5
2.1 Gearbox identification	5
3 Repair instructions	6
3.1 Rules for cleanliness	6
3.2 General repair instructions	6
3.3 Contact corrosion	8
3.4 Safety functions of gearbox control unit	8
3.5 Routing and attachment of pipes, hoses and wiring	9
3.6 Deactivating ATF pump and discharging hydraulic accumulator	9
3.7 Use of impact wrenches	9
4 Technical data	11
4.1 Capacities	11
5 Overview - power transmission	12
5.1 Overview - power transmission, all-wheel drive	12
30 - Clutch	13
1 Safety information	13
2 Clutch	14
2.1 Assembly overview - dual clutch and three-phase current drive VX54	14
2.2 Removing and installing dual clutch	17
2.3 Renewing input shaft oil seal	24
2.4 Removing and installing automatic gearbox pressure regulating valve 4 N218	26
2.5 Adjusting disengagement clutch for three-phase current drive VX54	27
34 - Controls, housing	32
1 Safety information	32
2 Mechatronic unit	33
2.1 Assembly overview - mechatronic unit	33
2.2 Removing and installing oil pan	36
2.3 Removing and installing mechatronic unit	38
3 Selector mechanism	45
3.1 Assembly overview - selector mechanism	45
3.2 Assembly overview - manual release mechanism for parking lock	49
3.3 Checking selector mechanism	50
3.4 Manual release from position P	55
3.5 Removing and installing selector lever handle	58
3.6 Detaching and attaching selector lever boot on selector lever handle	60
3.7 Removing and installing selector mechanism	60
3.8 Removing and installing manual release cable for parking lock	61
3.9 Removing and installing parking lock solenoid N486 / gear sensor G676	66
3.10 Renewing seal for parking lock shaft	70
4 Removing and installing gearbox	73
4.1 Tightening torques for gearbox	73
4.2 Removing gearbox	74



4.3	Installing gearbox	91
4.4	Removing and installing three-phase current drive VX54	97
5	Assembly mountings	103
5.1	Assembly overview - assembly mountings	103
5.2	Removing and installing tunnel cross member	105
6	Transporting gearbox	109
7	Securing to engine and gearbox support	111
8	Gear oil circuit	113
8.1	Assembly overview - gear oil circuit	113
8.2	Removing and installing gear oil pump	114
9	ATF circuit	117
9.1	Assembly overview - ATF circuit	117
9.2	Removing and installing ATF cooler	119
9.3	Removing and installing ATF pump	122
10	Gear oil	125
10.1	Checking gear oil level	125
10.2	Draining and filling gear oil	126
11	ATF	129
11.1	Checking ATF level	129
11.2	Draining and filling ATF	130
35 - Gears, shafts		134
1	Safety information	134
2	Dismantling and assembling gears and shafts	135
39 - Final drive - differential		136
1	Safety information	136
2	Oil seals	137
2.1	Overview of fitting locations - oil seals	137
3	Differential	138
3.1	Assembly overview - differential	138
3.2	Removing and installing left flange shaft	140
4	Gearbox control system	141
4.1	Overview of fitting locations - gearbox control system	141
5	All-wheel drive coupling	143