

Contents

00 - Technical data	1
1 Identification	1
1.1 Engine number/engine data	1
2 Safety information	2
2.1 Safety precautions when working on the fuel supply system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the cooling system	3
2.5 Safety precautions when working on the exhaust system	3
2.6 Safety precautions when working on the ignition system	4
3 Repair instructions	5
3.1 Identification plates	5
3.2 Use of impact wrenches	5
3.3 Working on the subframe	6
3.4 Rules for cleanliness	7
3.5 Performing adaptations after renewing a component	7
3.6 Foreign material in engine	8
3.7 Cleaning engine	8
3.8 Contact corrosion	8
3.9 Routing and attachment of pipes, hoses and wiring	9
3.10 Installing radiators and condensers	9
3.11 Checking vacuum system	9
3.12 Nuts, bolts	10
10 - Removing and installing engine	11
1 Removing and installing engine	11
1.1 Removing engine	11
1.2 Separating engine and gearbox	38
1.3 Removing engine from scissor-type assembly platform	48
1.4 Securing engine to engine and gearbox support	49
1.5 Installing engine	50
2 Assembly mountings	54
2.1 Assembly overview - assembly mountings	54
2.2 Supporting engine in installation position	59
2.3 Removing and installing engine mountings	61
2.4 Removing and installing gearbox mountings	66
3 Engine cover panel	67
3.1 Removing and installing engine cover panel	67
13 - Crankshaft group	68
1 Cylinder block (pulley end)	68
1.1 Assembly overview - cylinder block (pulley end)	68
1.2 Removing and installing poly V-belt	71
1.3 Removing and installing poly V-belt tensioner	72
1.4 Removing and installing vibration damper	74
1.5 Removing and installing bracket for ancillaries	87
1.6 Removing and installing engine support	90
2 Cylinder block (gearbox end)	93
2.1 Assembly overview - cylinder block (gearbox end)	93
2.2 Removing and installing drive plate	95
2.3 Removing and installing sealing flange (gearbox end)	96
2.4 Renewing needle bearing in drive plate	99



3	Crankshaft	101
3.1	Assembly overview - crankshaft	101
3.2	Crankshaft dimensions	104
3.3	Allocation of main bearing shells	104
3.4	Measuring axial clearance of crankshaft	105
3.5	Measuring radial clearance of crankshaft	106
3.6	Removing and installing crankshaft	106
3.7	Removing and installing sender wheel	108
4	Balance shaft	109
4.1	Assembly overview - balance shaft	109
4.2	Removing and installing balance shaft	111
4.3	Renewing oil seal for balance shaft (inlet side)	114
5	Pistons and conrods	117
5.1	Assembly overview - pistons and conrods	117
5.2	Removing and installing pistons	121
5.3	Removing and installing oil spray jets	122
5.4	Checking pistons and cylinder bores	125
5.5	Separating parts of new conrod	126
5.6	Checking radial clearance of conrod bearings	126
15	Cylinder head, valve gear	128
1	Timing chain cover	128
1.1	Assembly overview - timing chain cover	128
1.2	Removing and installing timing chain cover	131
1.3	Renewing oil seal for vibration damper	134
2	Chain drive	137
2.1	Assembly overview - camshaft timing chains	137
2.2	Assembly overview - drive chain for balance shaft	139
2.3	Removing and installing bearing saddle	141
2.4	Removing and installing camshaft timing chain	145
2.5	Checking chain elongation	154
2.6	Removing and installing drive chain for balance shaft	155
2.7	Checking valve timing	158
3	Cylinder head	162
3.1	Assembly overview - cylinder head	162
3.2	Removing and installing cylinder head	166
3.3	Checking compression	173
4	Valve gear	176
4.1	Assembly overview - valve gear	176
4.2	Removing and installing camshaft	180
4.3	Installing ball for slider	189
4.4	Removing and installing cam adjustment actuators	190
4.5	Removing and installing camshaft control valves N205 / N318	191
4.6	Removing and installing valve stem oil seals	192
5	Inlet and exhaust valves	202
5.1	Checking valve guides	202
5.2	Checking valves	203
5.3	Valve dimensions	203
17	Lubrication	204
1	Sump/oil pump	204
1.1	Assembly overview - sump/oil pump	204
1.2	Engine oil	208
1.3	Removing and installing lower part of sump	208
1.4	Removing and installing oil pump	210

1.5	Removing and installing upper part of sump	211
1.6	Removing and installing oil level and oil temperature sender G266	215
2	Engine oil cooler	216
2.1	Assembly overview - engine oil cooler	216
2.2	Removing and installing engine oil cooler	216
2.3	Removing and installing mechanical switching valve	217
3	Crankcase breather	218
3.1	Assembly overview - crankcase breather system	218
3.2	Removing and installing oil separator	219
3.3	Removing and installing tank breather pressure sensor 1 G950	220
4	Oil filter/oil pressure switches	221
4.1	Assembly overview - oil filter	221
4.2	Assembly overview - oil pressure switches/oil pressure control	222
4.3	Removing and installing oil pressure switch F22	224
4.4	Removing and installing oil pressure switch for reduced oil pressure F378	224
4.5	Removing and installing stage 3 oil pressure switch F447	224
4.6	Removing and installing valve for oil pressure control N428	226
4.7	Removing and installing piston cooling jet control valve N522	227
4.8	Checking oil pressure	227
19 - Cooling		230
1	Cooling system/coolant	230
1.1	Connection diagram - coolant hoses	230
1.2	Checking cooling system for leaks	232
1.3	Draining and filling cooling system	236
2	Coolant pump/thermostat assembly	244
2.1	Assembly overview - coolant pump/thermostat	244
2.2	Assembly overview - electric coolant pump	246
2.3	Assembly overview - coolant temperature senders	247
2.4	Removing and installing electric coolant pump	249
2.5	Removing and installing coolant pump	251
2.6	Removing and installing toothed belt for coolant pump	253
2.7	Removing and installing actuator for engine temperature regulation N493	255
2.8	Removing and installing coolant temperature sender G62	257
2.9	Removing and installing radiator outlet coolant temperature sender G83	258
3	Coolant pipes	260
3.1	Assembly overview - coolant pipes	260
3.2	Removing and installing coolant pipes	262
3.3	Removing and installing coolant pipes for gearbox	266
4	Radiator/radiator fan	269
4.1	Assembly overview - radiator/radiator fan	269
4.2	Assembly overview - radiator cowl and radiator fan	271
4.3	Assembly overview - radiator blind	273
4.4	Removing and installing radiator	275
4.5	Removing and installing radiator blind	283
4.6	Removing and installing radiator blind control motor V544	285
4.7	Removing and installing radiator cowl	288
4.8	Removing and installing radiator fan VX57	292
4.9	Removing and installing radiator fan 2 V177	292
21 - Turbocharging/supercharging		293
1	Turbocharger	293
1.1	Assembly overview - turbocharger	293
1.2	Removing and installing turbocharger	298
1.3	Removing and installing turbocharger air recirculation valve N249	300



1.4	Removing and installing charge pressure control module GX34	301
2	Charge air system	302
2.1	Assembly overview - charge air system	302
2.2	Assembly overview - hose connections for charge air system	303
2.3	Removing and installing charge air cooler	304
2.4	Removing and installing charge pressure sender G31	306
2.5	Checking charge air system for leaks	306
24	Mixture preparation - injection	311
1	Injection system	311
1.1	Overview of fitting locations - injection system	311
2	Air filter	321
2.1	Assembly overview - air filter housing	321
2.2	Removing and installing air filter housing	325
3	Intake manifold	327
3.1	Assembly overview - intake manifold	327
3.2	Removing and installing intake manifold	329
3.3	Removing and installing throttle valve module GX3	333
3.4	Cleaning throttle valve module GX3	334
3.5	Removing and installing intake manifold flap valve N316	335
3.6	Checking intake manifold change-over function	335
4	Injectors	337
4.1	Assembly overview - fuel rail with injectors	337
4.2	Removing and installing fuel rail	338
4.3	Removing and installing injectors	338
4.4	Cleaning injectors	342
5	Senders and sensors	344
5.1	Removing and installing air mass meter G70	344
5.2	Removing and installing intake manifold pressure sender G71	344
5.3	Removing and installing fuel pressure sender G247	345
5.4	Checking fuel pressure sender G247	346
5.5	Removing and installing pressure differential sender for particulate filter G1037	348
6	High-pressure pump	350
6.1	Assembly overview - high-pressure pump	350
6.2	Removing and installing high-pressure pump	352
6.3	Removing and installing high-pressure pipe	354
7	Lambda probe	356
7.1	Assembly overview - Lambda probe	356
7.2	Removing and installing Lambda probe	358
8	Engine control unit	360
8.1	Assembly overview - engine control unit	360
8.2	Removing and installing engine control unit J623	361
26	Exhaust system	363
1	Exhaust pipes/silencers	363
1.1	Assembly overview - silencers	363
1.2	Separating exhaust pipes/silencers	372
1.3	Removing and installing front silencer	374
1.4	Removing and installing silencer	377
1.5	Stress-free alignment of exhaust system	379
1.6	Checking exhaust system for leaks	380
2	Emission control system	381
2.1	Assembly overview - emission control system	381
2.2	Removing and installing catalytic converter	382

2.3	Removing and installing particulate filter	387
3	Exhaust gas temperature regulation	388
3.1	Assembly overview - exhaust gas temperature regulation	388
3.2	Removing and installing parts of exhaust gas temperature regulation	388
28	Ignition system	390
1	Ignition system	390
1.1	Assembly overview - ignition system	390
1.2	Removing and installing ignition coils	392
1.3	Removing and installing knock sensor 1 G61	394
1.4	Removing and installing Hall senders	395
1.5	Removing and installing engine speed sender G28	396