

## Contents

<b>00 - Technical data</b> .....	1
1 <b>Identification</b> .....	1
2 <b>Safety information</b> .....	2
2.1     Safety precautions when working on the high-voltage system .....	2
2.2     Safety precautions when working in the vicinity of high-voltage components .....	3
2.3     Safety precautions for all vehicles .....	3
3 <b>Repair instructions</b> .....	4
3.1     Rules for cleanliness when working on the high-voltage battery .....	4
3.2     Painting work on vehicles with high-voltage system .....	4
3.3     Repair instructions for all vehicles .....	4
4 <b>Assessing high-voltage system risk level</b> .....	5
4.1     Necessary qualifications .....	5
4.2     Work that requires high-voltage system to be de-energised .....	5
<b>10 - Removing and installing engine</b> .....	7
1 <b>Safety information</b> .....	7
2 <b>Removing and installing engine</b> .....	8
2.1     Removing engine .....	8
2.2     Separating engine and gearbox .....	68
2.3     Removing engine from scissor-type assembly platform .....	74
2.4     Securing engine to engine and gearbox support .....	76
2.5     Installing engine .....	76
3 <b>Assembly mountings</b> .....	82
3.1     Assembly overview - assembly mountings .....	82
3.2     Supporting engine in installation position .....	85
3.3     Removing and installing engine mountings .....	87
3.4     Removing and installing gearbox mounting .....	96
4 <b>Engine cover panel</b> .....	97
<b>13 - Crankshaft group</b> .....	98
1 <b>Safety information</b> .....	98
2 <b>Cylinder block (pulley end)</b> .....	99
2.1     Assembly overview - cylinder block (pulley end) .....	99
2.2     Removing and installing poly V-belt .....	99
2.3     Removing and installing poly V-belt tensioner .....	99
2.4     Removing and installing vibration damper .....	99
2.5     Removing and installing bracket for ancillaries .....	100
2.6     Removing and installing engine support .....	100
3 <b>Cylinder block (gearbox end)</b> .....	105
4 <b>Crankshaft</b> .....	106
5 <b>Balance shaft</b> .....	107
6 <b>Pistons and conrods</b> .....	108
<b>15 - Cylinder head, valve gear</b> .....	109
1 <b>Safety information</b> .....	109
2 <b>Timing chain cover</b> .....	110
3 <b>Chain drive</b> .....	111
4 <b>Cylinder head</b> .....	112
4.1     Assembly overview - cylinder head .....	112
4.2     Removing and installing cylinder head .....	113



4.3	Checking compression .....	121
<b>5</b>	<b>Valve gear .....</b>	<b>122</b>
5.1	Assembly overview - valve gear .....	122
5.2	Removing and installing camshaft .....	122
5.3	Installing ball for slider .....	130
5.4	Removing and installing cam adjustment actuators .....	130
5.5	Removing and installing camshaft control valve 1 N205 .....	130
5.6	Removing and installing valve stem oil seals .....	130
<b>6</b>	<b>Inlet and exhaust valves .....</b>	<b>131</b>
<b>17 - Lubrication .....</b>		<b>132</b>
1	Safety information .....	132
2	Sump/oil pump .....	133
2.1	Assembly overview - sump/oil pump .....	133
2.2	Engine oil .....	133
2.3	Removing and installing lower part of sump .....	133
2.4	Removing and installing oil pump .....	135
2.5	Removing and installing upper part of sump .....	135
2.6	Removing and installing oil level and oil temperature sender G266 .....	135
<b>3</b>	<b>Engine oil cooler .....</b>	<b>137</b>
<b>4</b>	<b>Crankcase breather .....</b>	<b>138</b>
<b>5</b>	<b>Oil filter/oil pressure switches .....</b>	<b>139</b>
5.1	Assembly overview - oil filter .....	139
5.2	Assembly overview - oil pressure switches/oil pressure control .....	139
5.3	Removing and installing oil pressure switch F22 .....	139
5.4	Removing and installing oil pressure switch for reduced oil pressure F378 .....	139
5.5	Removing and installing stage 3 oil pressure switch F447 .....	139
5.6	Removing and installing valve for oil pressure control N428 .....	143
5.7	Removing and installing piston cooling jet control valve N522 .....	143
5.8	Checking oil pressure .....	143
<b>19 - Cooling .....</b>		<b>144</b>
1	Safety information .....	144
<b>2</b>	<b>Cooling system/coolant .....</b>	<b>145</b>
2.1	Connection diagram - coolant hoses .....	145
2.2	Checking cooling system for leaks .....	151
2.3	Draining and filling cooling system .....	156
<b>3</b>	<b>Coolant pump/thermostat assembly .....</b>	<b>180</b>
3.1	Assembly overview - coolant pump/thermostat .....	180
3.2	Assembly overview - electric coolant pump .....	181
3.3	Assembly overview - coolant temperature senders .....	184
3.4	Assembly overview - coolant valves .....	189
3.5	Removing and installing electric coolant pump .....	192
3.6	Removing and installing coolant pump .....	204
3.7	Removing and installing toothed belt for coolant pump .....	208
3.8	Removing and installing actuator for engine temperature regulation N493 .....	210
3.9	Removing and installing coolant temperature sender G62 .....	211
3.10	Removing and installing radiator outlet coolant temperature sender G83 .....	214
3.11	Removing and installing coolant temperature sender 1 for thermal management G902 ..	216
3.12	Removing and installing coolant temperature sender 2 for thermal management G903 ..	217
3.13	Removing and installing coolant temperature sender 3 for thermal management G904 ..	218
3.14	Removing and installing coolant temperature sender 4 for thermal management G905 ..	219
3.15	Removing and installing coolant temperature sender 5 for thermal management G906 ..	220
3.16	Removing and installing coolant temperature sender 6 for thermal management G907 ..	221

3.17	Removing and installing coolant temperature sender 7 for thermal management G908 . . . . .	222
3.18	Removing and installing coolant temperature sender 8 for thermal management G968 . . . . .	223
3.19	Removing and installing coolant temperature sender for high-voltage battery G898/G899 . . . . .	224
3.20	Removing and installing coolant valves . . . . .	229
<b>4</b>	<b>Coolant pipes . . . . .</b>	<b>236</b>
4.1	Assembly overview - coolant pipes . . . . .	236
4.2	Removing and installing coolant pipes . . . . .	241
4.3	Removing and installing coolant pipes for gearbox . . . . .	250
<b>5</b>	<b>Radiator/radiator fans . . . . .</b>	<b>261</b>
5.1	Assembly overview - radiator/radiator fans . . . . .	261
5.2	Assembly overview - radiator cowl and radiator fan . . . . .	265
5.3	Assembly overview - radiator blind . . . . .	266
5.4	Removing and installing radiator . . . . .	267
5.5	Removing and installing radiator cowl . . . . .	272
5.6	Removing and installing radiator blind . . . . .	277
5.7	Removing and installing radiator blind control motor . . . . .	279
5.8	Removing and installing radiator fan V7 . . . . .	280
5.9	Removing and installing auxiliary radiator . . . . .	281
<b>21 - Turbocharging/supercharging . . . . .</b>	<b>283</b>	
<b>1</b>	<b>Safety information . . . . .</b>	<b>283</b>
<b>2</b>	<b>Turbocharger . . . . .</b>	<b>284</b>
2.1	Assembly overview - turbocharger . . . . .	284
2.2	Removing and installing turbocharger . . . . .	284
<b>3</b>	<b>Charge air system . . . . .</b>	<b>290</b>
3.1	Assembly overview - charge air system . . . . .	290
3.2	Assembly overview - hose connections for charge air system . . . . .	291
3.3	Removing and installing charge air cooler . . . . .	291
3.4	Removing and installing charge pressure sender G31 . . . . .	293
3.5	Checking charge air system for leaks . . . . .	293
<b>24 - Mixture preparation - injection . . . . .</b>	<b>297</b>	
<b>1</b>	<b>Safety information . . . . .</b>	<b>297</b>
<b>2</b>	<b>Injection system . . . . .</b>	<b>298</b>
2.1	Overview of fitting locations - injection system . . . . .	298
<b>3</b>	<b>Air filter . . . . .</b>	<b>312</b>
3.1	Assembly overview - air filter housing . . . . .	312
3.2	Removing and installing air filter housing . . . . .	314
<b>4</b>	<b>Intake manifold . . . . .</b>	<b>316</b>
4.1	Assembly overview - intake manifold . . . . .	316
4.2	Removing and installing intake manifold . . . . .	316
4.3	Removing and installing throttle valve module GX3 . . . . .	331
4.4	Cleaning throttle valve module GX3 . . . . .	331
4.5	Checking intake manifold change-over function . . . . .	331
<b>5</b>	<b>Injectors . . . . .</b>	<b>332</b>
5.1	Assembly overview - fuel rail with injectors . . . . .	332
5.2	Removing and installing fuel rail . . . . .	332
5.3	Removing and installing injectors . . . . .	334
5.4	Cleaning injectors . . . . .	334
<b>6</b>	<b>Senders and sensors . . . . .</b>	<b>335</b>
6.1	Removing and installing intake manifold pressure sender G71 . . . . .	335
6.2	Removing and installing fuel pressure sender G247 . . . . .	335
6.3	Checking fuel pressure sender G247 . . . . .	336
6.4	Removing and installing fuel pressure sender for low pressure G410 . . . . .	336



<b>7</b>	<b>High-pressure pump</b>	<b>337</b>
7.1	Assembly overview - high-pressure pump	337
7.2	Removing and installing high-pressure pump	337
7.3	Removing and installing high-pressure pipe	339
<b>8</b>	<b>Lambda probe</b>	<b>341</b>
<b>9</b>	<b>Engine control unit</b>	<b>342</b>
9.1	Assembly overview - engine control unit	342
9.2	Removing and installing engine/motor control unit J623	342
<b>26 - Exhaust system</b>		<b>344</b>
1	<b>Safety information</b>	<b>344</b>
<b>2</b>	<b>Exhaust pipes/silencers</b>	<b>345</b>
2.1	Assembly overview - silencers	345
2.2	Separating exhaust pipes/silencers	349
2.3	Removing and installing front silencers	350
2.4	Removing and installing silencers	353
2.5	Stress-free alignment of exhaust system	354
2.6	Checking exhaust system for leaks	355
<b>3</b>	<b>Emission control system</b>	<b>356</b>
3.1	Assembly overview - emission control system	356
3.2	Removing and installing catalytic converter	356
3.3	Removing and installing particulate filter	363
<b>4</b>	<b>Exhaust gas temperature regulation</b>	<b>371</b>
4.1	Assembly overview - exhaust gas temperature regulation	371
4.2	Removing and installing parts of exhaust gas temperature regulation	372
<b>5</b>	<b>Secondary air system</b>	<b>376</b>
5.1	Assembly overview - secondary air system	376
5.2	Removing and installing secondary air pump motor V101	376
5.3	Removing and installing secondary air inlet valve N112	378
5.4	Removing and installing sender 1 for secondary air pressure G609	379
<b>28 - Ignition system</b>		<b>380</b>
1	<b>Safety information</b>	<b>380</b>
<b>2</b>	<b>Ignition system</b>	<b>381</b>
2.1	Assembly overview - ignition system	381
2.2	Removing and installing ignition coil	381
2.3	Removing and installing knock sensor 1 G61	381
2.4	Removing and installing Hall senders	381
2.5	Removing and installing engine speed sender G28	381
<b>93 - Electric drive systems</b>		<b>385</b>
1	<b>Safety information</b>	<b>385</b>
<b>2</b>	<b>High-voltage components</b>	<b>386</b>
2.1	Overview of fitting locations - high-voltage components	386
<b>3</b>	<b>Warning stickers</b>	<b>389</b>
3.1	Checking warning stickers	389
<b>4</b>	<b>High-voltage battery unit</b>	<b>393</b>
4.1	Assembly overview - high-voltage battery	393
4.2	Determining mean cell voltage	395
4.3	Charging and discharging battery modules	396
4.4	Checking high-voltage battery for leaks	397
4.5	Inspecting and classifying hybrid battery unit AX1	404
4.6	Removing and installing hybrid battery unit AX1	405
4.7	Removing and installing switching unit for high-voltage battery SX6	413

---

<b>5</b>	<b>High-voltage battery components</b>	<b>417</b>
5.1	Assembly overview - high-voltage battery	417
5.2	Overview of fitting locations - battery modules	422
5.3	Overview of fitting locations - battery connectors	424
5.4	Marking battery modules	425
5.5	Removing battery module	425
5.6	Installing battery module	443
5.7	Removing and installing battery regulation control unit J840	459
<b>6</b>	<b>Power and control electronics for electric drive</b>	<b>460</b>
6.1	Overview of fitting locations - power and control electronics for electric drive	460
6.2	Removing and installing power and control electronics for electric drive	463
6.3	Removing and installing bracket for power and control electronics for electric drive JX1	468
<b>7</b>	<b>Electric drive motor</b>	<b>471</b>
7.1	Assembly overview - electric drive motor	471
7.2	Removing and installing three-phase current drive VX54	473
7.3	Removing and installing drive motor temperature sender G712	473
7.4	Removing and installing drive motor rotor position sender 1 G713	475
7.5	Removing and installing oil return connection	477
7.6	Renewing input shaft oil seal	477
<b>8</b>	<b>High-voltage wiring</b>	<b>480</b>
8.1	Overview of fitting locations - high-voltage wiring	480
8.2	Removing and installing high-voltage wiring harness for high-voltage battery	486
8.3	Removing and installing high-voltage wiring harness for drive motor	488
8.4	Removing and installing high-voltage wire leading to switching unit for high-voltage battery	495
8.5	Removing and installing high-voltage wire for electrical air conditioner compressor and high-voltage heater (PTC)	496
<b>9</b>	<b>De-energising high-voltage system</b>	<b>497</b>
<b>10</b>	<b>Re-energising high-voltage system</b>	<b>500</b>
<b>11</b>	<b>Potential equalisation lines</b>	<b>502</b>
11.1	General notes - potential equalisation lines	502
11.2	Overview of fitting locations - potential equalisation lines	502
11.3	Potential equalisation measurement	503
11.4	Removing and installing potential equalisation lines	504
<b>12</b>	<b>Charging socket</b>	<b>509</b>
12.1	Assembly overview - charging socket	509
12.2	e-tron charging system	510
12.3	Diagnosis of e-tron charging system	510
12.4	Removing and installing high-voltage battery charging socket 1 UX4	513
12.5	Removing and installing module for battery charge selector buttons EX32	516
<b>13</b>	<b>Charging unit for high-voltage battery</b>	<b>517</b>
13.1	Assembly overview - charging unit for high-voltage battery	517
13.2	Removing and installing charging unit 1 for high-voltage battery AX4	518
13.3	Removing and installing bracket for charging unit 1 for high-voltage battery AX4	523
<b>14</b>	<b>Vehicle noise/engine sound</b>	<b>524</b>
14.1	Overview of fitting locations - vehicle noise/engine sound	524
14.2	Removing and installing engine sound generator control unit J943	525
14.3	Removing and installing actuator 1 for engine sound generator R257	526