

## Contents

<b>00 - Technical data</b>	<b>1</b>
1     Identification	1
2     Safety information	2
3     Repair instructions	3
<b>10 - Removing and installing engine</b>	<b>4</b>
1     Removing and installing engine	4
1.1    Removing engine	4
1.2    Securing engine to engine and gearbox support	22
1.3    Installing engine	22
2     Assembly mountings	25
2.1    Assembly overview - assembly mountings	25
2.2    Supporting engine in installation position	28
2.3    Removing and installing engine mountings	31
2.4    Removing and installing gearbox mounting	33
3     Engine cover panel	35
<b>13 - Crankshaft group</b>	<b>36</b>
1     Cylinder block (pulley end)	36
1.1    Assembly overview - cylinder block (pulley end)	36
1.2    Assembly overview - sealing flange (pulley end)	36
1.3    Removing and installing poly V-belt	36
1.4    Removing and installing poly V-belt tensioner	36
1.5    Removing and installing vibration damper	36
1.6    Removing and installing bracket for ancillaries	36
1.7    Removing and installing engine support	37
1.8    Removing and installing sealing flange (pulley end)	41
2     Cylinder block (gearbox end)	42
3     Crankshaft	43
4     Pistons and conrods	44
<b>15 - Cylinder head, valve gear</b>	<b>45</b>
1     Toothed belt drive	45
2     Cylinder head	46
3     Valve gear	47
4     Inlet and exhaust valves	48
<b>17 - Lubrication</b>	<b>49</b>
1     Sump/oil pump	49
1.1    Assembly overview - sump/oil pump	49
1.2    Engine oil	49
1.3    Removing and installing sump	49
1.4    Removing and installing oil pump	49
1.5    Removing and installing oil level and oil temperature sender G266	50
2     Engine oil cooler	51
3     Oil filter/oil pressure switches	52
<b>19 - Cooling</b>	<b>53</b>
1     Cooling system/coolant	53
1.1    Connection diagram - coolant hoses	53
1.2    Checking cooling system for leaks	57

1.3	Draining and filling cooling system . . . . .	57
<b>2</b>	<b>Coolant pump/thermostat assembly . . . . .</b>	<b>67</b>
2.1	Assembly overview - coolant pump/thermostat . . . . .	67
2.2	Assembly overview - electric coolant pump . . . . .	67
2.3	Assembly overview - coolant temperature senders . . . . .	68
2.4	Removing and installing electric coolant pump . . . . .	68
2.5	Removing and installing coolant pump . . . . .	71
2.6	Removing and installing thermostat . . . . .	71
2.7	Checking thermostat . . . . .	71
2.8	Removing and installing coolant valve for cylinder head N489 . . . . .	71
2.9	Removing and installing coolant temperature sender G62 . . . . .	72
<b>3</b>	<b>Coolant pipes . . . . .</b>	<b>73</b>
3.1	Assembly overview - coolant pipes . . . . .	73
3.2	Removing and installing coolant pipes . . . . .	76
3.3	Removing and installing coolant pipes for gearbox . . . . .	89
<b>4</b>	<b>Radiators/radiator fans . . . . .</b>	<b>92</b>
4.1	Assembly overview - radiators/radiator fans . . . . .	92
4.2	Removing and installing radiator . . . . .	95
4.3	Removing and installing water radiator for charge air cooling circuit . . . . .	100
4.4	Removing and installing radiator cowl . . . . .	102
4.5	Removing and installing radiator fan V7 . . . . .	106
<b>21</b>	<b>- Turbocharging/supercharging . . . . .</b>	<b>107</b>
1	Turbochargers . . . . .	107
2	Charge air system . . . . .	108
<b>23</b>	<b>- Mixture preparation - injection . . . . .</b>	<b>109</b>
1	<b>Injection system . . . . .</b>	<b>109</b>
1.1	Overview - fuel system . . . . .	109
1.2	Overview of fitting locations - injection system . . . . .	109
1.3	Filling and bleeding fuel system . . . . .	117
1.4	Checking fuel system for leaks . . . . .	117
2	<b>Vacuum system . . . . .</b>	<b>118</b>
2.1	Connection diagram - vacuum system . . . . .	118
2.2	Checking vacuum system . . . . .	118
3	<b>Air filter . . . . .</b>	<b>119</b>
3.1	Assembly overview - air filter housing . . . . .	119
3.2	Removing and installing air filter housing . . . . .	121
4	<b>Intake manifold . . . . .</b>	<b>123</b>
5	<b>Injectors/high-pressure reservoir (rail) . . . . .</b>	<b>124</b>
6	<b>High-pressure pump . . . . .</b>	<b>125</b>
7	<b>Senders and sensors . . . . .</b>	<b>126</b>
7.1	Removing and installing air mass meter G70 . . . . .	126
7.2	Removing and installing fuel temperature sender G81 . . . . .	127
7.3	Removing and installing fuel pressure sender G247 . . . . .	127
7.4	Checking fuel pressure regulating valve N276 . . . . .	127
7.5	Removing and installing fuel pressure regulating valve N276 . . . . .	127
7.6	Removing and installing pressure differential sender G505 . . . . .	127
8	<b>Lambda probe . . . . .</b>	<b>128</b>
9	<b>Engine control unit . . . . .</b>	<b>129</b>
9.1	Assembly overview - engine control unit . . . . .	129
9.2	Removing and installing engine/motor control unit J623 . . . . .	129
<b>26</b>	<b>- Exhaust system . . . . .</b>	<b>131</b>

<b>1</b>	<b>Exhaust pipes/silencers</b>	<b>131</b>
1.1	Assembly overview - silencers	131
1.2	Removing and installing front exhaust pipe	134
1.3	Separating exhaust pipes/silencers	138
1.4	Removing and installing silencers	140
1.5	Stress-free alignment of exhaust system	141
1.6	Checking exhaust system for leaks	142
<b>2</b>	<b>Emission control system</b>	<b>143</b>
<b>3</b>	<b>SCR (selective catalytic reduction) system</b>	<b>144</b>
3.1	Assembly overview - reducing agent tank	144
3.2	Assembly overview - control unit for SCR system	145
3.3	Assembly overview - delivery unit	146
3.4	Assembly overview - reducing agent supply line	147
3.5	Assembly overview - injector for reducing agent	148
3.6	Releasing pressure in SCR system	148
3.7	Draining reducing agent tank	148
3.8	Removing and installing reducing agent tank	152
3.9	Removing and installing injector for reducing agent N474	155
3.10	Removing and installing control unit for reducing agent metering system J880	156
3.11	Removing and installing pump for reducing agent V437	156
3.12	Removing and installing pressure sender for reducing agent metering system G686	160
3.13	Removing and installing connection for SCR supply line	163
3.14	Resetting SCR learnt values	166
<b>4</b>	<b>Exhaust gas temperature regulation</b>	<b>167</b>
<b>5</b>	<b>Exhaust gas recirculation</b>	<b>168</b>
<b>28 - Glow plug system</b>	<b>169</b>	
<b>1</b>	<b>Glow plug system</b>	<b>169</b>
1.1	Assembly overview - glow plug system	169
1.2	Removing and installing glow plug	169
1.3	Removing and installing automatic glow period control unit J179	169
1.4	Removing and installing Hall sender G40	170
1.5	Removing and installing engine speed sender G28	170