

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
<b>2 Safety precautions</b>	<b>2</b>
<b>3 Repair instructions</b>	<b>3</b>
<b>10 - Removing and installing engine</b>	<b>4</b>
<b>1 Removing and installing engine</b>	<b>4</b>
1.1 Removing engine	4
1.2 Separating engine and gearbox	17
1.3 Securing engine to engine and gearbox support	24
1.4 Installing engine	27
<b>2 Assembly mountings</b>	<b>31</b>
2.1 Exploded view - assembly mountings	31
2.2 Supporting engine in installation position	33
2.3 Removing and installing engine mountings	34
2.4 Removing and installing gearbox mounting	37
<b>3 Engine cover panel</b>	<b>38</b>
<b>13 - Crankshaft group</b>	<b>39</b>
<b>1 Cylinder block (pulley end)</b>	<b>39</b>
1.1 Exploded view - cylinder block (pulley end)	39
1.2 Exploded view - sealing flange (pulley end)	39
1.3 Removing and installing poly V-belt	39
1.4 Removing and installing poly V-belt tensioner	39
1.5 Removing and installing vibration damper	39
1.6 Removing and installing bracket for ancillaries	42
1.7 Removing and installing engine support	42
1.8 Renewing crankshaft oil seal (pulley end)	43
1.9 Removing and installing sealing flange (pulley end)	43
<b>2 Cylinder block (gearbox end)</b>	<b>44</b>
<b>3 Crankshaft</b>	<b>45</b>
<b>4 Balance shaft</b>	<b>46</b>
<b>5 Pistons and conrods</b>	<b>47</b>
<b>15 - Cylinder head, valve gear</b>	<b>48</b>
<b>1 Timing chain cover</b>	<b>48</b>
<b>2 Chain drive</b>	<b>49</b>
<b>3 Cylinder head</b>	<b>50</b>
3.1 Exploded view - cylinder head	50
3.2 Exploded view - cylinder head cover	50
3.3 Removing and installing cylinder head	50
3.4 Removing and installing cylinder head cover	50
3.5 Removing and installing seals for injectors	51
3.6 Checking compression	51
<b>4 Valve gear</b>	<b>52</b>
<b>5 Inlet and exhaust valves</b>	<b>53</b>
<b>17 - Lubrication</b>	<b>54</b>
<b>1 Sump/oil pump</b>	<b>54</b>
1.1 Exploded view - sump/oil pump	54
1.2 Engine oil	54



1.3	Removing and installing sump (bottom section)	54
1.4	Removing and installing sump (top section)	54
1.5	Removing and installing oil pump	54
1.6	Removing and installing oil level and oil temperature sender G266	54
<b>2</b>	<b>Engine oil cooler</b>	<b>55</b>
<b>3</b>	<b>Oil filter/oil pressure switches</b>	<b>56</b>
3.1	Exploded view - oil filter	56
3.2	Exploded view - oil pressure switches/oil pressure control	56
3.3	Removing and installing oil filter housing	56
3.4	Removing and installing oil pressure switch F22	56
3.5	Removing and installing oil temperature sender G8	56
3.6	Removing and installing oil pressure sender G10	56
3.7	Removing and installing oil temperature sender 2 G664	57
3.8	Checking oil pressure	57
3.9	Removing and installing valve for oil pressure control N428	57
<b>19</b>	<b>Cooling</b>	<b>58</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>58</b>
1.1	Connection diagram - coolant hoses	58
1.2	Checking cooling system for leaks	59
1.3	Draining and filling cooling system	59
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>64</b>
2.1	Exploded view - coolant pump	64
2.2	Exploded view - electric coolant pump	64
2.3	Exploded view - thermostat	65
2.4	Exploded view - coolant temperature senders	65
2.5	Removing and installing electric coolant pump	65
2.6	Removing and installing coolant pump	67
2.7	Removing and installing thermostat	67
2.8	Removing and installing coolant temperature sender G62	67
2.9	Removing and installing temperature sender for engine temperature regulation G694	67
2.10	Removing and installing coolant temperature sender 2 G802	67
2.11	Removing and installing coolant valves	67
<b>3</b>	<b>Coolant pipes</b>	<b>68</b>
3.1	Exploded view - coolant pipes	68
3.2	Removing and installing coolant pipes	70
<b>4</b>	<b>Radiator/radiator fans</b>	<b>79</b>
4.1	Exploded view - radiators/radiator fans	79
4.2	Exploded view - auxiliary radiator	82
4.3	Removing and installing radiator	82
4.4	Removing and installing radiator cowl	86
4.5	Removing and installing radiator fan V7	89
4.6	Removing and installing auxiliary radiator	89
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>92</b>
<b>1</b>	<b>Turbocharger</b>	<b>92</b>
1.1	Exploded view - turbocharger	92
1.2	Removing and installing turbocharger	92
<b>2</b>	<b>Charge air system</b>	<b>93</b>
2.1	Exploded view - charge air system	93
2.2	Exploded view - hose connections for charge air system	94
2.3	Removing and installing charge air cooler	94
2.4	Removing and installing charge pressure sender G31	96
2.5	Removing and installing intake air temperature sender G42	97
2.6	Checking charge air system for leaks	97

<b>23 - Mixture preparation - injection</b> .....	<b>98</b>
<b>1 Injection system</b> .....	<b>98</b>
1.1 Overview - fuel system .....	98
1.2 Overview of fitting locations - injection system .....	99
1.3 Filling and bleeding fuel system .....	103
1.4 Checking fuel system for leaks .....	103
<b>2 Vacuum system</b> .....	<b>104</b>
<b>3 Air cleaner</b> .....	<b>105</b>
3.1 Exploded view - air cleaner housing .....	105
3.2 Removing and installing air cleaner housing .....	106
<b>4 Intake manifold</b> .....	<b>108</b>
4.1 Exploded view - intake manifold .....	108
4.2 Removing and installing intake manifold (top section) .....	108
4.3 Removing and installing intake manifold (bottom section) .....	109
4.4 Removing and installing intake manifold flap motor V157 .....	109
4.5 Removing and installing throttle valve module J338 .....	109
<b>5 Injectors/high-pressure reservoir (rail)</b> .....	<b>110</b>
5.1 Exploded view - injectors .....	110
5.2 Checking injectors .....	110
5.3 Performing adaption of correction values for injectors .....	110
5.4 Checking for injectors sticking open .....	110
5.5 Checking return flow rate of injectors with engine running .....	110
5.6 Checking return flow rate of injectors at starter cranking speed .....	110
5.7 Checking pressure retention valve in fuel return line .....	111
5.8 Removing and installing injectors .....	111
5.9 Removing and installing high-pressure pipes .....	113
5.10 Removing and installing high-pressure reservoir (rail) .....	113
<b>6 Senders and sensors</b> .....	<b>114</b>
6.1 Removing and installing air mass meter G70 .....	114
6.2 Removing and installing fuel temperature sender G81 .....	115
6.3 Removing and installing fuel pressure sender G247 .....	115
6.4 Removing and installing fuel pressure sender for low pressure G410 .....	115
6.5 Checking fuel pressure regulating valve N276 .....	116
6.6 Removing and installing fuel pressure regulating valve N276 .....	118
6.7 Removing and installing pressure differential sender G505 .....	118
<b>7 High-pressure pump</b> .....	<b>122</b>
<b>8 Lambda probe</b> .....	<b>123</b>
<b>9 Engine control unit</b> .....	<b>124</b>
9.1 Exploded view - engine control unit .....	124
9.2 Removing and installing engine/motor control unit J623 .....	124
<b>26 - Exhaust system</b> .....	<b>126</b>
<b>1 Exhaust pipes/silencers</b> .....	<b>126</b>
1.1 Exploded view - silencers .....	126
1.2 Removing and installing front exhaust pipe .....	128
1.3 Separating exhaust pipes/silencers .....	129
1.4 Removing and installing silencers .....	131
1.5 Stress-free alignment of exhaust system .....	131
1.6 Checking exhaust system for leaks .....	132
<b>2 Emission control system</b> .....	<b>133</b>
2.1 Exploded view - emission control system .....	133
2.2 Removing and installing emission control module .....	135
<b>3 Exhaust gas temperature control</b> .....	<b>139</b>



3.1	Exploded view - exhaust gas temperature control	139
3.2	Removing and installing exhaust gas temperature sender 1 G235	139
3.3	Removing and installing exhaust gas temperature sender 2 G448	139
3.4	Removing and installing exhaust gas temperature sender 3 G495	139
3.5	Removing and installing exhaust gas temperature sender 4 G648	140
<b>4</b>	<b>Exhaust gas recirculation</b>	<b>142</b>
<b>5</b>	<b>Exhaust manifolds</b>	<b>143</b>
5.1	Exploded view - exhaust manifold	143
5.2	Removing and installing exhaust manifolds	143
<b>28</b>	<b>Glow plug system</b>	<b>147</b>
<b>1</b>	<b>Glow plug system</b>	<b>147</b>
1.1	Exploded view - glow plug system	147
1.2	Removing and installing glow plug	147
1.3	Removing and installing automatic glow period control unit J179	147
1.4	Removing and installing Hall sender G40	148
1.5	Removing and installing engine speed sender G28	148