

Contents

00 - Technical data	1
1 Identification	1
2 Safety information	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Separating engine and gearbox	18
1.3 Securing engine to engine and gearbox support	26
1.4 Installing engine	29
2 Assembly mountings	36
2.1 Assembly overview - assembly mountings	36
2.2 Supporting engine in installation position	38
2.3 Removing and installing engine mountings	40
2.4 Removing and installing gearbox mounting	43
3 Engine cover panel	44
13 - Crankshaft group	45
1 Cylinder block (pulley end)	45
1.1 Assembly overview - cylinder block (pulley end)	45
1.2 Assembly overview - sealing flange (pulley end)	45
1.3 Removing and installing poly V-belt	45
1.4 Removing and installing poly V-belt tensioner	46
1.5 Removing and installing vibration damper	46
1.6 Removing and installing bracket for ancillaries	49
1.7 Removing and installing engine support	49
1.8 Renewing crankshaft oil seal (pulley end)	50
1.9 Removing and installing sealing flange (pulley end)	50
2 Cylinder block (gearbox end)	51
3 Crankshaft	52
4 Balance shaft	53
5 Pistons and conrods	54
15 - Cylinder head, valve gear	55
1 Timing chain cover	55
1.1 Assembly overview - timing chain cover	55
1.2 Removing and installing timing chain cover	55
2 Chain drive	56
3 Cylinder head	57
3.1 Assembly overview - cylinder head	57
3.2 Assembly overview - cylinder head cover	57
3.3 Removing and installing cylinder head	57
3.4 Removing and installing cylinder head cover	57
3.5 Removing and installing seals for injectors	58
3.6 Checking compression	58
4 Valve gear	59
4.1 Assembly overview - valve gear	59
4.2 Removing and installing cam actuators	59
4.3 Measuring axial clearance of camshaft	59
4.4 Measuring radial clearance of camshaft	59



4.5	Removing and installing camshaft	59
4.6	Removing and installing valve stem oil seals	59
5	Inlet and exhaust valves	60
17	- Lubrication	61
1	Sump/oil pump	61
1.1	Assembly overview - sump/oil pump	61
1.2	Engine oil	61
1.3	Removing and installing lower part of sump	61
1.4	Removing and installing upper part of sump	61
1.5	Removing and installing oil pump	62
1.6	Removing and installing oil level and oil temperature sender G266	62
2	Engine oil cooler	63
3	Crankcase breather	64
4	Oil filter/oil pressure switches	65
4.1	Assembly overview - oil filter	65
4.2	Assembly overview - oil pressure switches/oil pressure control	65
4.3	Removing and installing oil filter housing	65
4.4	Removing and installing oil pressure switch F22	66
4.5	Removing and installing oil temperature sender G8	66
4.6	Removing and installing oil pressure sender G10	66
4.7	Checking oil pressure	66
4.8	Removing and installing valve for oil pressure control N428	67
4.9	Removing and installing oil temperature sender 2 G664	67
19	- Cooling	68
1	Cooling system/coolant	68
1.1	Connection diagram - coolant hoses	68
1.2	Checking cooling system for leaks	72
1.3	Draining and filling cooling system	72
2	Coolant pump/thermostat assembly	77
2.1	Assembly overview - coolant pump	77
2.2	Assembly overview - electric coolant pump	77
2.3	Assembly overview - thermostat	78
2.4	Assembly overview - coolant temperature senders	78
2.5	Removing and installing electric coolant pump	78
2.6	Removing and installing coolant pump	80
2.7	Removing and installing thermostat	80
2.8	Removing and installing coolant temperature sender G62	81
2.9	Removing and installing temperature sender for engine temperature regulation G694 ..	81
2.10	Removing and installing coolant valves	81
3	Coolant pipes	82
3.1	Assembly overview - coolant pipes	82
3.2	Removing and installing coolant pipes	86
4	Radiator/radiator fans	97
4.1	Exploded view - radiator/radiator fans	97
4.2	Assembly overview - auxiliary radiator	100
4.3	Removing and installing radiator	101
4.4	Removing and installing radiator cowl	105
4.5	Removing and installing radiator fan V7	107
21	- Turbocharging/supercharging	109
1	Turbocharger	109
1.1	Exploded view - turbocharger	109
1.2	Removing and installing turbocharger	109

2	Charge air system	111
2.1	Assembly overview - charge air system	111
2.2	Assembly overview - hose connections for charge air system	113
2.3	Removing and installing charge air cooler	113
2.4	Removing and installing charge pressure sender G31	115
2.5	Removing and installing charge air temperature sender after charge air cooler G811	115
2.6	Checking charge air system for leaks	116
23	Mixture preparation - injection	117
1	Injection system	117
1.1	Overview - fuel system	117
1.2	Overview of fitting locations - injection system	118
1.3	Filling and bleeding fuel system	124
1.4	Checking fuel system for leaks	124
2	Vacuum system	125
3	Air filter	126
3.1	Assembly overview - air filter housing	126
3.2	Removing and installing air filter housing	128
4	Intake manifold	130
4.1	Exploded view - intake manifold	130
4.2	Removing and installing upper part of intake manifold	130
4.3	Removing and installing lower part of intake manifold	131
4.4	Removing and installing intake manifold flap motor V157	131
4.5	Removing and installing throttle valve module GX3	131
5	Injectors/high-pressure reservoir (rail)	132
5.1	Assembly overview - injectors	132
5.2	Checking injectors	132
5.3	Performing adaptation of correction values for injectors	132
5.4	Checking for injectors sticking open	132
5.5	Checking return flow rate of injectors with engine running	132
5.6	Checking return flow rate of injectors at starter cranking speed	132
5.7	Checking restrictor in fuel return line	133
5.8	Removing and installing injectors	133
5.9	Removing and installing high-pressure pipes	135
5.10	Removing and installing high-pressure reservoir (rail)	135
6	Senders and sensors	137
6.1	Removing and installing air mass meter G70	137
6.2	Removing and installing fuel temperature sender G81	138
6.3	Removing and installing fuel pressure sender G247	138
6.4	Removing and installing fuel pressure sender for low pressure G410	138
6.5	Checking fuel pressure regulating valve N276	139
6.6	Removing and installing fuel pressure regulating valve N276	141
6.7	Removing and installing pressure differential sender G505 / pressure differential sender 2 G524	141
7	High-pressure pump	145
8	Lambda probe	146
8.1	Assembly overview - Lambda probe	146
8.2	Removing and installing Lambda probe	148
8.3	Removing and installing NOx senders	148
8.4	Removing and installing particulate sensor G784	151
9	Engine control unit	153
9.1	Exploded view - engine control unit	153
9.2	Removing and installing engine/motor control unit J623	154
26	Exhaust system	155



1	Exhaust pipes/silencers	155
1.1	Exploded view - silencers	155
1.2	Removing and installing front exhaust pipe	157
1.3	Separating exhaust pipes/silencers	159
1.4	Removing and installing silencers	160
1.5	Stress-free alignment of exhaust system	161
1.6	Checking exhaust system for leaks	162
2	Emission control system	163
2.1	Assembly overview - emission control system	163
2.2	Removing and installing emission control module	163
2.3	Removing and installing ammonia trap	166
2.4	Removing and installing exhaust flap control unit J883	166
3	SCR (selective catalytic reduction) system	167
3.1	Assembly overview - reducing agent tank	167
3.2	Assembly overview - control unit for SCR system	168
3.3	Assembly overview - delivery unit	169
3.4	Assembly overview - reducing agent supply line	170
3.5	Releasing pressure in SCR system	170
3.6	Draining reducing agent tank	171
3.7	Removing and installing reducing agent tank	173
3.8	Removing and installing injector for reducing agent N474	176
3.9	Removing and installing control unit for reducing agent metering system J880	176
3.10	Removing and installing pump for reducing agent V437	177
3.11	Removing and installing pressure sender for reducing agent metering system G686	180
3.12	Removing and installing connection for SCR supply line	183
4	Exhaust gas temperature regulation	186
4.1	Assembly overview - exhaust gas temperature regulation	186
4.2	Removing and installing exhaust gas temperature sender 1 G235	188
4.3	Removing and installing exhaust gas temperature sender 2 G448	188
4.4	Removing and installing exhaust gas temperature sender 3 G495	188
4.5	Removing and installing exhaust gas temperature sender 4 G648	188
5	Exhaust gas recirculation	190
5.1	Assembly overview - exhaust gas recirculation system	190
5.2	Removing and installing exhaust gas recirculation cooler	192
5.3	Removing and installing exhaust gas recirculation valve 2 GX6	194
5.4	Removing and installing exhaust gas recirculation temperature sensor G98	195
6	Exhaust manifolds	196
6.1	Exploded view - exhaust manifold	196
6.2	Removing and installing exhaust manifolds	197
28	Glow plug system	201
1	Glow plug system	201