

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Identification</b>	<b>1</b>
1.1 Engine number / engine data	1
<b>2 Safety information</b>	<b>2</b>
2.1 Safety precautions when working on the fuel system	2
2.2 Safety precautions when working on vehicles with start/stop system	2
2.3 Safety precautions when using testers and measuring instruments during a road test	3
2.4 Safety precautions when working on the cooling system	3
2.5 Safety precautions when working on the exhaust system	3
2.6 Safety precautions when working on the SCR system	4
2.7 Safety precautions when working on the glow plug system	5
<b>3 Repair instructions</b>	<b>6</b>
3.1 Identification plates	6
3.2 Use of impact wrenches	6
3.3 Rules for cleanliness	7
3.4 General notes	7
3.5 General repair instructions	9
3.6 Foreign material in engine	10
3.7 Cleaning engine	10
3.8 Contact corrosion	10
3.9 Routing and attachment of pipes, hoses and wiring	11
3.10 Installing radiators and condensers	11
3.11 Performing adaptations after renewing a component	11
<b>10 - Removing and installing engine</b>	<b>13</b>
<b>1 Removing and installing engine</b>	<b>13</b>
<b>2 Assembly mountings</b>	<b>14</b>
<b>3 Engine cover panel</b>	<b>15</b>
3.1 Removing and installing engine cover panel	15
<b>13 - Crankshaft group</b>	<b>16</b>
<b>1 Cylinder block (pulley end)</b>	<b>16</b>
1.1 Assembly overview - cylinder block (pulley end)	16
1.2 Assembly overview - sealing flange (pulley end)	23
1.3 Removing and installing poly V-belts	24
1.4 Removing and installing poly V-belt tensioner	29
1.5 Removing and installing vibration damper	31
1.6 Removing and installing bracket for ancillaries	33
1.7 Removing and installing engine support	37
1.8 Renewing crankshaft oil seal (pulley end)	37
1.9 Removing and installing sealing flange (pulley end)	39
<b>2 Cylinder block (gearbox end)</b>	<b>43</b>
2.1 Assembly overview - cylinder block (gearbox end)	43
2.2 Removing and installing drive plate	43
2.3 Renewing crankshaft oil seal (gearbox end)	46
<b>3 Crankshaft</b>	<b>49</b>
3.1 Assembly overview - crankshaft	49
3.2 Crankshaft dimensions	52
3.3 Allocation of main bearing shells	52
3.4 Measuring axial clearance of crankshaft	55
3.5 Measuring radial clearance of crankshaft	56
3.6 Checking sender wheel	57



<b>4</b>	<b>Balance shaft</b> .....	<b>59</b>
4.1	Assembly overview - balance shaft .....	59
4.2	Removing and installing balance shaft .....	59
4.3	Renewing roller bearing .....	67
<b>5</b>	<b>Pistons and conrods</b> .....	<b>70</b>
5.1	Assembly overview - pistons and conrods .....	70
5.2	Removing and installing pistons .....	74
5.3	Measuring piston projection at TDC .....	75
5.4	Checking pistons and cylinder bores .....	78
5.5	Checking radial clearance of conrod bearings .....	80
<b>15</b>	<b>- Cylinder head, valve gear</b> .....	<b>81</b>
<b>1</b>	<b>Timing chain cover</b> .....	<b>81</b>
1.1	Assembly overview - timing chain cover .....	81
1.2	Removing and installing timing chain cover .....	85
<b>2</b>	<b>Chain drive</b> .....	<b>99</b>
2.1	Assembly overview - camshaft timing chains .....	99
2.2	Assembly overview - drive chain for high-pressure pump .....	101
2.3	Assembly overview - drive chain for oil pump .....	102
2.4	Assembly overview - intermediate drive .....	103
2.5	Removing camshaft timing chain from camshafts .....	104
2.6	Removing and installing camshaft timing chain .....	117
2.7	Removing and installing drive chain for high-pressure pump .....	129
2.8	Installing intermediate drive .....	131
<b>3</b>	<b>Cylinder head</b> .....	<b>140</b>
3.1	Assembly overview - cylinder head .....	140
3.2	Assembly overview - cylinder head cover .....	143
3.3	Removing and installing cylinder head .....	149
3.4	Removing and installing cylinder head cover .....	158
3.5	Removing and installing seals for injectors .....	163
3.6	Checking compression .....	164
<b>4</b>	<b>Valve gear</b> .....	<b>167</b>
4.1	Assembly overview - valve gear .....	167
4.2	Measuring axial clearance of camshaft .....	176
4.3	Measuring radial clearance of camshaft .....	178
4.4	Removing and installing camshaft .....	179
4.5	Removing and installing valve stem oil seals .....	196
<b>5</b>	<b>Inlet and exhaust valves</b> .....	<b>207</b>
5.1	Reworking valve seats .....	207
5.2	Checking valve guides .....	207
5.3	Checking valves .....	208
5.4	Valve dimensions .....	208
<b>17</b>	<b>- Lubrication</b> .....	<b>210</b>
<b>1</b>	<b>Sump/oil pump</b> .....	<b>210</b>
1.1	Assembly overview - sump/oil pump .....	210
1.2	Engine oil .....	215
1.3	Removing and installing lower part of sump .....	215
1.4	Removing and installing upper part of sump .....	219
1.5	Removing and installing oil pump .....	222
1.6	Removing and installing oil level and oil temperature sender G266 .....	224
<b>2</b>	<b>Engine oil cooler</b> .....	<b>226</b>
2.1	Assembly overview - engine oil cooler .....	226
2.2	Removing and installing engine oil cooler .....	228
2.3	Removing and installing temperature regulator for engine oil cooler .....	229

<b>3</b>	<b>Crankcase breather</b> .....	<b>232</b>
3.1	Assembly overview - crankcase breather system .....	232
3.2	Removing and installing oil separator .....	233
<b>4</b>	<b>Oil filter/oil pressure switch</b> .....	<b>234</b>
4.1	Assembly overview - oil filter .....	234
4.2	Removing and installing oil filter housing .....	236
4.3	Removing and installing oil pressure sender G10 .....	237
4.4	Checking oil pressure .....	238
4.5	Removing and installing valve for oil pressure control N428 .....	238
4.6	Removing and installing oil temperature sender 2 G664 .....	239
<b>19</b>	<b>- Cooling</b> .....	<b>243</b>
<b>1</b>	<b>Cooling system/coolant</b> .....	<b>243</b>
1.1	Connection diagram - coolant hoses .....	243
1.2	Checking cooling system for leaks .....	243
1.3	Draining and filling cooling system .....	247
<b>2</b>	<b>Coolant pump/thermostat assembly</b> .....	<b>250</b>
2.1	Assembly overview - coolant pump .....	250
2.2	Assembly overview - electric coolant pump .....	251
2.3	Assembly overview - thermostat .....	251
2.4	Assembly overview - coolant temperature senders .....	253
2.5	Removing and installing electric coolant pump .....	254
2.6	Removing and installing coolant pump .....	254
2.7	Removing and installing thermostat .....	257
2.8	Removing and installing thermostat housing .....	258
2.9	Removing and installing coolant temperature sender G62 .....	258
2.10	Removing and installing temperature sender for engine temperature regulation G694 .....	260
2.11	Removing and installing coolant valves .....	261
<b>3</b>	<b>Coolant pipes</b> .....	<b>263</b>
<b>4</b>	<b>Radiator/radiator fans</b> .....	<b>264</b>
<b>21</b>	<b>- Turbocharging/supercharging</b> .....	<b>265</b>
<b>1</b>	<b>Turbocharger</b> .....	<b>265</b>
1.1	Assembly overview - turbocharger .....	265
1.2	Removing and installing turbocharger .....	270
<b>2</b>	<b>Charge air system</b> .....	<b>276</b>
2.1	Assembly overview - charge air system .....	276
2.2	Assembly overview - hose connections for charge air system .....	276
2.3	Removing and installing charge air cooler .....	277
2.4	Removing and installing charge pressure sender G31 .....	277
2.5	Removing and installing charge air temperature sender .....	278
2.6	Checking charge air system for leaks .....	278
<b>23</b>	<b>- Mixture preparation - injection</b> .....	<b>283</b>
<b>1</b>	<b>Injection system</b> .....	<b>283</b>
1.1	Overview - fuel system .....	283
1.2	Overview of fitting locations - injection system .....	283
1.3	Filling and bleeding fuel system .....	283
1.4	Checking fuel system for leaks .....	284
<b>2</b>	<b>Vacuum system</b> .....	<b>285</b>
2.1	Connection diagram - vacuum system .....	285
2.2	Checking vacuum system .....	285
<b>3</b>	<b>Air filter</b> .....	<b>287</b>
<b>4</b>	<b>Intake manifold</b> .....	<b>288</b>



4.1	Assembly overview - intake manifold	288
4.2	Removing and installing upper part of intake manifold	295
4.3	Removing and installing lower part of intake manifold	301
4.4	Removing and installing intake manifold flap control unit GX14	303
4.5	Removing and installing throttle valve module GX3	305
<b>5</b>	<b>Injectors/high-pressure reservoir (rail)</b>	<b>307</b>
5.1	Assembly overview - injectors	307
5.2	Checking injectors	312
5.3	Performing adaption of correction values for injectors	312
5.4	Checking return flow rate of injectors with engine running	313
5.5	Checking return flow rate of injectors at starter cranking speed	318
5.6	Checking pressure retention valve in fuel return line	321
5.7	Checking for injectors sticking open	323
5.8	Removing and installing injectors	326
5.9	Installing high-pressure pipes	339
5.10	Removing and installing high-pressure reservoir (rail)	341
<b>6</b>	<b>Senders and sensors</b>	<b>347</b>
6.1	Removing and installing air mass meter G70	347
6.2	Removing and installing fuel temperature sender G81	347
6.3	Removing and installing fuel pressure sender G247	348
6.4	Removing and installing fuel pressure sender for low pressure G410	350
6.5	Checking fuel pressure regulating valve N276	351
6.6	Removing and installing fuel pressure regulating valve N276	351
6.7	Removing and installing pressure differential sender G505	357
<b>7</b>	<b>High-pressure pump</b>	<b>358</b>
7.1	Assembly overview - high-pressure pump	358
7.2	Removing and installing high-pressure pump	361
<b>8</b>	<b>Lambda probe</b>	<b>369</b>
8.1	Assembly overview - Lambda probe	369
8.2	Removing and installing Lambda probe	371
8.3	Removing and installing NOx senders	372
8.4	Removing and installing particulate sensor G784	372
<b>9</b>	<b>Engine control unit</b>	<b>373</b>
<b>26 - Exhaust system</b>		<b>374</b>
<b>1</b>	<b>Exhaust pipes/silencers</b>	<b>374</b>
1.1	Assembly overview - silencers	374
1.2	Removing and installing front exhaust pipe	374
1.3	Separating exhaust pipes/silencers	374
1.4	Removing and installing silencers	374
1.5	Stress-free alignment of exhaust system	374
1.6	Checking exhaust system for leaks	374
<b>2</b>	<b>Emission control system</b>	<b>376</b>
2.1	Assembly overview - emission control system	376
2.2	Removing and installing emission control module	382
2.3	Removing and installing ammonia trap	382
2.4	Removing and installing exhaust flap control unit J883	385
<b>3</b>	<b>SCR (selective catalytic reduction) system</b>	<b>387</b>
3.1	Assembly overview - reducing agent tank	387
3.2	Assembly overview - reducing agent supply line	387
3.3	Assembly overview - reducing agent supply line	389
3.4	Removing and installing front reducing agent supply line	390
3.5	Releasing pressure in SCR system	393
3.6	Draining reducing agent tank	394
3.7	Removing and installing reducing agent tank	394

3.8	Removing and installing injector for reducing agent N474 .....	394
3.9	Removing and installing control unit for reducing agent metering system J880 .....	396
<b>4</b>	<b>Exhaust gas temperature regulation .....</b>	<b>397</b>
4.1	Assembly overview - exhaust gas temperature regulation .....	397
4.2	Removing and installing exhaust gas temperature sender 1 G235 .....	398
4.3	Removing and installing exhaust gas temperature sender 2 G448 .....	400
4.4	Removing and installing exhaust gas temperature sender 3 G495 .....	401
4.5	Removing and installing exhaust gas temperature sender 4 G648 .....	403
<b>5</b>	<b>Exhaust gas recirculation .....</b>	<b>405</b>
5.1	Assembly overview - exhaust gas recirculation system .....	405
5.2	Removing and installing exhaust gas recirculation cooler .....	410
5.3	Installing repair kit for exhaust gas recirculation cooler .....	414
5.4	Removing and installing exhaust gas recirculation temperature sensor G98 .....	417
5.5	Removing and installing pressure sender for exhaust gas recirculation G691 .....	418
<b>6</b>	<b>Exhaust manifold .....</b>	<b>420</b>
6.1	Assembly overview - exhaust manifold .....	420
6.2	Removing and installing exhaust manifold .....	420
<b>28</b>	<b>Glow plug system .....</b>	<b>421</b>
<b>1</b>	<b>Glow plug system .....</b>	<b>421</b>
1.1	Assembly overview - glow plug system .....	421
1.2	Removing and installing glow plug .....	424
1.3	Removing and installing automatic glow period control unit J179 .....	427
1.4	Removing and installing Hall sender G40 .....	429
1.5	Removing and installing engine speed sender G28 .....	429