

Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety precautions when working on the fuel system | 1 |
| 1.2 Safety precautions when working on the high-voltage system | 2 |
| 1.3 Safety precautions when working in the vicinity of high-voltage components | 2 |
| 1.4 Safety precautions when working on vehicles with start/stop system | 3 |
| 1.5 Safety precautions when using testers and measuring instruments during a road test | 3 |
| 1.6 Safety precautions when working on the SCR system | 3 |
| 2 Repair instructions | 5 |
| 2.1 Rules for cleanliness | 5 |
| 2.2 Test conditions | 5 |
| 2.3 Contact corrosion | 6 |
| 2.4 Routing and attachment of pipes, hoses and wiring | 6 |
| 2.5 Identification plates | 6 |
| 2.6 Use of impact wrenches | 6 |
| 2.7 Nuts, bolts | 7 |
| 20 - Fuel supply system | 9 |
| 1 Safety information | 9 |
| 2 Fuel tank | 10 |
| 2.1 Assembly overview - fuel tank | 10 |
| 2.2 Draining fuel tank | 14 |
| 2.3 Removing and installing fuel tank | 21 |
| 2.4 Removing and installing misfuelling prevention device | 32 |
| 2.5 Deactivating misfuelling prevention device | 35 |
| 3 Fuel delivery unit/fuel gauge sender | 36 |
| 3.1 Assembly overview - fuel delivery unit/fuel gauge sender | 36 |
| 3.2 Removing and installing fuel delivery unit/fuel gauge sender | 42 |
| 3.3 Bleeding fuel line for metering pump | 54 |
| 3.4 Removing and installing fuel gauge sender G | 55 |
| 4 Plug-in connectors | 57 |
| 4.1 Disconnecting plug-in connectors | 57 |
| 5 Activated charcoal filter system | 63 |
| 5.1 Connection diagram - activated charcoal filter system | 63 |
| 5.2 Assembly overview - activated charcoal filter system | 66 |
| 5.3 Removing and installing activated charcoal filter | 71 |
| 5.4 Removing and installing vent line with filter | 72 |
| 5.5 Removing and installing fuel tank leak detection module GX36 | 73 |
| 5.6 Removing and installing fuel tank switch-off valve N288 | 74 |
| 5.7 Removing and installing tank pressure sensor G400 | 75 |
| 5.8 Removing and installing control unit for fuel tank leak detection J909 | 76 |
| 5.9 Fuel tank leak detection | 76 |
| 5.10 Checking fuel system for leaks - NAR, Korea and China versions | 77 |
| 6 Fuel filter | 84 |
| 6.1 Assembly overview - fuel filter | 84 |
| 6.2 Assembly overview - water separator | 84 |
| 6.3 Removing and installing water separator | 88 |
| 7 Accelerator mechanism | 91 |
| 7.1 Assembly overview - accelerator pedal module | 91 |
| 7.2 Removing and installing accelerator pedal module GX2 | 92 |
| 8 Fuel pump | 93 |
| 8.1 Checking fuel system pressurisation pump G6 | 93 |

| | | |
|-----|---|-----|
| 8.2 | Removing and installing suction-jet pump | 108 |
| 8.3 | Removing and installing fuel pump control unit J538 | 109 |