

## Contents

<b>1</b>	<b>General information</b>	<b>1</b>
1.1	--- Change history ---	1
1.2	Engine number	1
1.3	Vehicle identification number	3
1.4	Vehicle data sticker	4
<b>2</b>	<b>Preparations</b>	<b>5</b>
2.1	Vehicle: raising	5
2.2	Engine cover panel: removing and installing	6
2.3	Noise insulation: removing and installing	9
2.4	Window regulators: activating automatic open/close function	10
2.5	Vehicle diagnostic tester: connecting	10
<b>3</b>	<b>Maintenance</b>	<b>13</b>
3.1	Diesel particulate filter: reading out ash deposit volume	16
3.2	Event memory: reading out and erasing	17
3.3	Navigation system (MMI basic): releasing eject button	17
3.4	MMI navigation system: loading navigation CD/DVD	18
3.5	Service interval display: resetting service event	18
3.6	Transport mode: deactivating	18
3.7	Transport mode: checking activation and activating if necessary	19
3.8	Shipping mode: deactivating	19
3.9	Battery: reading out status and sending diagnostic log	20
3.10	Battery: checking electrolyte level	21
3.11	Battery: connecting stationary battery charging unit (min. 30A, charging voltage max. 14.8 V on IV characteristic curve)	26
3.12	Battery: determining and recording state of charge (SOC)	27
3.13	Mirror hanger indicating defective battery: renewing battery on affected vehicles	32
3.14	Brake fluid: changing	32
3.15	Brake fluid (vehicles older than 12 months): changing	37
3.16	Brake fluid: checking fluid level	37
3.17	Brake system: checking condition of brake hoses, and checking that caps are fitted on bleeder screws	37
3.18	Brake pads: checking thickness	38
3.19	Brake discs: checking for surface rust and operating brakes to clean if necessary	39
3.20	Parking brake: releasing	40
3.21	Tyres: checking condition and wear pattern, and checking and recording tread depth	40
3.22	Tyres: checking tyre pressures and adjusting if necessary	41
3.23	Tyres (except spare wheel): checking tyre pressures and adjusting to 3.5 bar if necessary	42
3.24	Tyre Pressure Loss Indicator: storing changed tyre pressures	43
3.25	Tyre repair kit: checking that set is complete, and checking and recording expiry date	44
3.26	Wheel bolts: tightening to specified torque	44
3.27	Axles (front and rear): checking components for play, secure attachment and damage, and checking protective boots	45
3.28	Engine, gearbox, final drive and steering: checking for leaks and damage	47
3.29	Vehicle (from below): checking for damage	48
3.30	Underbody: checking trim, wheel housing liners, side members and pipes/wiring for damage, and checking that they are properly secured	48
3.31	Roof insert - panorama sunroof: cleaning and lubricating	48
3.32	Water drains - sliding panoramic sunroof: checking	53
3.33	Bonnet arrester hook: lubricating	54
3.34	Door hinges with arresters and locking cylinders: lubricating	54
3.35	Suspension struts on front and rear axle: removing locking elements and correctly fitting bump stops	56
3.36	Windscreen/rear window washer system: checking spray pattern and adjusting if necessary	58



3.37	Wiper blades: checking for damage	59
3.38	Headlight washer system: checking operation	60
3.39	Headlights: checking for correct adjustment	61
3.40	Headlights and reversing lights, side lights, number plate lights, turn signals, hazard warning lights: checking operation	62
3.41	Luggage compartment lighting: checking operation	63
3.42	Luggage compartment: removing protective film and felt pieces	63
3.43	Glove box light, interior lighting and reading light: checking operation	63
3.44	Horn: checking operation	63
3.45	Passenger airbag: checking key switch on/off and setting to "on"	64
3.46	Owner's literature: checking that all documents are present	64
3.47	Service Schedule: affixing vehicle data sticker	64
3.48	Service Schedule: entering Delivery Inspection	64
3.49	Seat belts: checking that retaining rivets are fitted, and checking locking action of automatic belt retractor	65
3.50	Vehicle interior: removing protective covers for seats and carpet	65
3.51	Vehicle interior: checking that it is clean and cleaning if necessary	65
3.52	Vehicle interior: removing any objects other than those protecting interior surfaces	65
3.53	Vehicle interior and exterior: checking for and documenting any damage	65
3.54	Instrument cluster: checking warning lamps	66
3.55	Warning triangle: checking availability	66
3.56	First-aid kit: checking and recording expiry date	66
3.57	Vehicle keys: checking operation and recording number of keys given to customer	66
3.58	Vehicle key: removing from ignition lock	67
3.59	Vehicle key(s), wheel covers and owner's literature: checking availability and recording number present	67
3.60	Sun visors: checking that they are folded up and folding up if necessary	67
3.61	Luggage compartment cover and sun blind: checking that they are rolled up and rolling up if necessary	67
3.62	Engine oil: draining	67
3.63	Engine oil: renewing oil filter	75
3.64	Engine oil: filling up	82
3.65	Engine oil: checking oil level and correcting if necessary	83
3.66	Poly V-belts for ancillaries: checking	85
3.67	Spark plugs: renewing	89
3.68	Hydraulic system: checking fluid level	97
3.69	Coolant level: checking (coolant level must reach at least top marking on coolant expansion tank)	98
3.70	Air cleaner: renewing filter element and cleaning housing	101
3.71	Plenum chamber and water drains: checking for dirt	111
3.72	Dust and pollen filter: renewing	113
3.73	Fuel filter: renewing	114
3.74	Fuel filter: draining	118
3.75	Fuel tank: adding fuel additive	118
3.76	Reducing agent (AdBlue®): filling up tank completely	119
3.77	Vehicle doors: removing edge protection	124
3.78	Vehicle exterior: checking unprotected areas for dirt, and cleaning if necessary	124
3.79	Vehicle exterior: removing protective film	124
3.80	Vehicle cover: checking position and correcting if necessary	125
3.81	Vehicle cover: removing according to manufacturer's instructions	125
3.82	Paintwork, trims, side windows and wiper blades: checking cleanliness	125
3.83	Body: checking vehicle paintwork for damage and corrosion from below and with bonnet, rear lid and doors open	125
3.84	Vehicles parked outdoors: locking	125
3.85	Road test	125
3.86	Stock vehicles: observing measures specified in Maintenance table for stock vehicles (see "Before handing vehicle over to customer")	126

3.87	Accessories: installing .....	126
3.88	Checklist "Documentation of cleaning and care routine": checking that list is present .....	127
3.89	"Stock vehicle maintenance" checklist: signing and placing in vehicle wallet .....	127
3.90	Cleaning and care: checking that required measures have been carried out on time .....	127
3.91	Stock vehicle care management: deciding and recording date of next check .....	127
3.92	Display instruments: setting time and date .....	127
3.93	Manual gearbox/automatic gearbox: selecting 1st gear/park .....	128
3.94	Interior mirror: calibrating compass .....	128
3.95	Poly V-belt for supercharger with charge air coolers: renewing .....	128
3.96	Poly V-belt for ancillaries: renewing .....	128
3.97	Poly V-belt for ancillaries and pulleys for coolant pump and power steering pump: renewing .....	128
3.98	Instrument cluster: resetting driver information system .....	128
<b>4</b>	<b>Exhaust emissions test .....</b>	<b>129</b>
4.1	Petrol engines: performing exhaust emissions test .....	129
4.2	Diesel engines: performing exhaust emissions test .....	136