

Contents

00	Technical data	1
1	Allocation of PR number (factory code) to brake components	1
1.1	Vehicle data sticker (example)	1
1.2	Brakes, technical data	1
2	Assessment of ceramic brake discs	6
2.1	Visible features of ceramic brake discs	6
2.2	Superficial cracks in cooling channel lands	7
2.3	Cracks in area of bolted connection on ceramic brake discs	7
2.4	Edge fractures	8
2.5	Chipping on ceramic brake discs	8
2.6	Cracks extending into cooling channels	9
3	Assessing degree of wear on ceramic brake discs	10
3.1	Wear assessment by checking thickness of brake disc	14
3.2	Wear assessment by checking thickness of brake disc	14
3.3	Wear assessment according to wear indicators	15
3.4	Wear assessment by weighing brake disc	15
3.5	Wear assessment of ceramic brake disc with tester VAS 6813	16
4	Brake test	23
4.1	General notes	23
4.2	Test	23
45	Anti-lock brake system	24
1	General notes for anti-lock brake system (ABS)	24
1.1	Notes for repair work on the ABS	24
2	Connecting VAS 5051 B/VAS 5052 and selecting functions	25
3	ABS brake system components and fitting locations	26
4	Exploded view - hydraulic unit, brake servo/brake master cylinder	29
4.1	Removing and installing ABS control unit J104 and ABS hydraulic unit	31
5	Removing and installing parts of ABS system on front and rear axles	35
5.1	Front axle	35
5.2	Removing and installing front wheel speed sensor	35
5.3	Rear axle	36
5.4	Removing and installing rear wheel speed sensor	36
6	Removing and installing parts of ESP system	38
6.1	Removing and installing ESP sensor unit G419	38
6.2	Removing and installing steering angle sender G85	39
46	Brakes - mechanism	40
1	Servicing front brakes	40
1.1	Servicing front brakes - 18" Brembo brake caliper (1LF)	40
1.2	Removing and installing brake pads (1LF)	42
1.3	Removing and installing brake caliper (1LF)	45
2	Front brakes - Brembo 18" Plus (1LT/1LU)	48
2.1	Removing and installing brake pads - 18" Plus (1LT/1LU)	49
2.2	Removing and installing front brake caliper - 18" Plus (1LT/1LU)	53
2.3	Renewing front brake caliper - 18" Plus (1LT/1LU)	55
3	Ceramic front brakes (1LW/1LN)	58
3.1	Servicing ceramic front brakes (1LW/1LN)	58
3.2	Detaching and attaching front brake caliper - ceramic brakes (1LW/1LN)	61
3.3	Renewing front brake caliper - ceramic brakes (1LW/1LN)	63
3.4	Removing and installing front brake pads - ceramic brakes (1LW/1LN)	66



3.5	Detaching and attaching front brake disc - ceramic brakes (1LW/1LN)	71
3.6	Renewing front brake disc - ceramic brakes (1LW/1LN)	72
4	Servicing rear brakes (1KF/2EA)	74
4.1	Brembo brake caliper (1KF/2EA)	74
4.2	Removing and installing rear brake disc (1KF/2EA)	76
4.3	Removing and installing rear brake pads (1KF/2EA)	77
4.4	Removing and installing rear brake caliper (1KF/2EA)	79
5	Servicing rear brakes (1KD)	82
5.1	Removing and installing rear brake disc (1KD)	83
5.2	Removing and installing rear brake pads (1KD)	84
5.3	Removing and installing rear brake caliper (1KD)	86
5.4	Renewing rear brake caliper (1KD)	88
6	Servicing ceramic rear brakes (2EF/1KK)	91
6.1	Detaching rear brake disc - ceramic brakes (2EF/1KK)	93
6.2	Renewing rear brake disc - ceramic brakes (2EF/1KK)	94
6.3	Removing and installing rear brake pads - ceramic brakes (2EF/1KK)	95
6.4	Removing and installing rear brake caliper - ceramic brakes (2EF/1KK)	99
6.5	Renewing rear brake caliper - ceramic brakes (2EF/1KK)	102
7	Removing and installing brake shoes - all models and ceramic brakes	106
8	Adjusting parking brake (basic setting) - all models and ceramic brakes	110
9	Checking free travel at parking brake pedal - all models and ceramic brakes	111
10	Bedding in brake shoes on brake dynamometer - all models and ceramic brakes	112
11	Bedding in brake shoes on closed road - all models and ceramic brakes	113
12	Exploded view - foot-operated parking brake	114
12.1	Parking brake pedal	114
12.2	Removing and installing parking brake pedal	114
12.3	Removing and installing gas strut at parking brake pedal	116
12.4	Transfer module	117
13	Brake cables	118
13.1	Brake cable (rear)	118
13.2	Removing and installing brake cables (rear)	118
13.3	Unhooking brake cable from expander	119
13.4	Removing and installing brake cable (front)	120
14	Exploded view - brake pedal, left-hand drive vehicles	121
14.1	Removing and installing brake pedal	121
14.2	Removing and installing brake light switch	123
14.3	Removing and installing brake light switch (new generation)	124
14.4	Separating brake pedal from brake servo	126
14.5	Attaching brake pedal to brake servo	126
14.6	Removing and installing mounting for brake servo push rod	126
47 - Brakes - hydraulics		128
1	Servicing brake calipers (1LT/1LU)	128
1.1	Exploded view (1LT/1LU)	128
1.2	Removing and installing brake caliper pistons (1LT/1LU)	128
2	Servicing front brake calipers (1LF)	131
2.1	Exploded view (1LF)	131
2.2	Removing and installing brake caliper pistons (1LF)	132
3	Servicing front brake caliper - ceramic brakes (1LW/1LN)	134
3.1	Removing and installing front brake caliper pistons - ceramic brakes	135
4	Servicing rear brake calipers - all models	137
4.1	Servicing brake calipers - all models	137
4.2	Removing and installing rear brake caliper pistons - all models	138

5	Pressurised leak test	140
6	Bleeding brake system with brake filling and bleeding equipment	141
6.1	Pre-bleeding	144
6.2	Bleeding hydraulic system without brake filling and bleeding equipment	144
6.3	Changing brake fluid	146
7	Exploded view - brake servo / brake master cylinder	147
7.1	Removing and installing brake master cylinder	148
7.2	Removing and installing brake servo	149
7.3	Removing and installing potentiometer for brake servo diaphragm travel G420	151
8	Vacuum pumps for brake servo	153
8.1	Exploded view - vacuum pump, vehicles with diesel engine	153
8.2	Exploded view - vacuum pump, vehicles with 3.0 ltr. TFSI engine	155
8.3	Removing and installing vacuum pump - vehicles with 4.2 ltr. diesel engine	155
8.4	Removing and installing vacuum pump - vehicles with 3.0 ltr. TDI engine	158
8.5	Removing and installing vacuum pump - vehicles with 12-cyl. TDI engine	158
8.6	Removing and installing vacuum pump - vehicles with 3.0 ltr. TFSI engine	160
9	Electric vacuum pump for brakes V192	162
9.1	Exploded view - vacuum pump for brakes V192	162
9.2	Removing and installing vacuum pump for brakes V192	162
9.3	Removing and installing brake servo pressure sensor G294	163
9.4	Checking non-return valve	163
10	Repairing brake lines	164
10.1	Exploded view - flanging tool	164
10.2	Instructions	165