

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety information for handling gas discharge bulbs	1
2 Repair instructions	3
2.1 Rules for cleanliness	3
2.2 General notes	3
2.3 Contact corrosion	3
2.4 ESD (electrostatic discharge) workplace	4
2.5 Routing and attachment of lines and wiring	4
2.6 Identification plates	5
2.7 Use of impact wrenches	5
3 Battery	6
3.1 Battery - general notes	6
3.2 Battery types	6
27 - Starter, current supply, CCS	7
1 Contact corrosion	7
2 Battery	8
2.1 Battery - general notes	8
2.2 Maintenance-free batteries	8
2.3 Disconnecting and connecting battery	8
2.4 Removing and installing earth cable with battery monitor control unit J367 - vehicles from model year 2009 onwards	10
2.5 Removing and installing battery	14
2.6 Checking battery	19
2.7 Charging battery	19
2.8 Preparations before measuring open-circuit voltage	19
2.9 Preparations before charging battery	19
2.10 Preparations for back-up power supply of battery	21
2.11 Removing and installing energy management control unit J644 - vehicles up to model year 2008	21
2.12 Removing and installing battery isolation igniter N253	24
2.13 Removing and installing jump start socket U6	25
3 Start/stop system	27
3.1 Safety precautions for vehicles with start/stop system	27
3.2 Assembly overview - start/stop system	27
3.3 Removing and installing voltage stabiliser J532	28
3.4 Removing and installing bracket for voltage stabiliser J532	29
4 Removing and installing alternator	30
4.1 Vehicles with 3.0 ltr. TFSI engine	30
4.2 Vehicles with 3.6 ltr. FSI engine	35
4.3 Vehicles with 4.2 ltr. FSI engine	39
4.4 Vehicles with 3.0 ltr. TDI engine - alternator with air cooling	43
4.5 Vehicles with 3.0 ltr. TDI engine (generation II) - alternator with air cooling	47
4.6 Vehicles with 3.0 ltr. TDI engine - alternator with water cooling	52
4.7 Vehicles with 4.2 ltr. TDI engine	57
4.8 Vehicles with 6.0 ltr. TDI engine	61
5 Checking and servicing alternator	65
5.1 Checking alternator	65
6 Removing and installing starter	66



6.1	Vehicles with 3.0 ltr. TFSI engine	66
6.2	Vehicles with 3.6 ltr. FSI engine	68
6.3	Vehicles with 4.2 ltr. FSI engine	70
6.4	Vehicles with 3.0 ltr. TDI engine	72
6.5	Vehicles with 3.0 ltr. TDI engine (generation II)	75
6.6	Vehicles with 4.2 ltr. TDI engine	77
6.7	Vehicles with 6.0 ltr. TDI engine	78
7	Cruise control system (CCS)	80
90	- Gauges, instruments	81
1	Instrument cluster	81
1.1	Removing and installing instrument cluster	81
1.2	Pin assignment at multi-pin connectors on instrument cluster	85
1.3	Pin assignment on fuel gauge sender G	87
1.4	Pin assignment on fuel gauge sender 2 G169	87
1.5	Pin assignment at coolant temperature sender G62 - petrol engines	88
1.6	Pin assignment at coolant temperature senders G62/G83 - TDI engines	88
1.7	Removing and installing ambient temperature sensor G17	89
1.8	Removing and installing radio-controlled clock receiver J489	90
2	Cigarette lighter, 12 V electric socket	91
2.1	Assembly overview of cigarette lighter / 12 V electric socket	91
2.2	Removing and installing cigarette lighter U1	93
2.3	Removing and installing 12 V socket U5/U18	97
2.4	Removing and installing 12 V socket U19/U20	98
2.5	Removing and installing socket illumination bulb L42	100
2.6	Removing and installing 12 V socket 5 U26	101
2.7	Renewing 12 V socket 5 U26	101
3	Horns	104
3.1	Removing and installing horn and dual tone horn H1	104
4	Data bus diagnostic interface	105
4.1	Data bus diagnostic interface J533	105
4.2	Removing and installing data bus diagnostic interface J533	105
4.3	Connector at data bus diagnostic interface J533 - vehicles up to model year 2008	107
4.4	Connector at data bus diagnostic interface J533 - vehicles from model year 2009 onwards	108
92	- Windscreen wash/wipe system	110
1	Windscreen wiper system	110
1.1	Assembly overview - windscreen wiper system	110
1.2	Renewing wiper blade	112
1.3	Removing and installing wiper arms	113
1.4	Adjusting wiper arms	115
1.5	Removing and installing windscreen wiper motor V with wiper motor control unit J400	116
1.6	Renewing windscreen wiper motor V with wiper motor control unit J400	118
1.7	Removing and installing rain and light sensor	118
2	Windscreen washer system	124
2.1	Removing and installing filler neck for washer fluid reservoir	124
2.2	Removing and installing washer fluid reservoir	124
2.3	Removing and installing windscreen washer fluid level sender G33	126
2.4	Removing and installing windscreen and rear window washer pump V59	127
2.5	Removing and installing washer jets	128
2.6	Adjusting washer jets	128
3	Rear window wiper and washer system	130
3.1	Assembly overview - rear window wiper	130
3.2	Renewing wiper blade	131

3.3	Removing and installing wiper arm	131
3.4	Adjusting wiper arm	133
3.5	Removing and installing washer jet	133
3.6	Adjusting washer jet	134
3.7	Assembly overview - rear window wiper motor	134
3.8	Removing and installing rear window wiper motor V12	135
3.9	Removing and installing rubber seal	136
3.10	Removing and installing washer fluid reservoir	136
4	Headlight washer system	137
4.1	Removing and installing headlight washer jets	137
4.2	Adjusting washer jets	139
4.3	Removing and installing washer fluid reservoir	139
5	Washer fluid hoses	140
94	Lights, bulbs, switches - exterior	141
1	Mounting for headlight housing	141
1.1	Assembly overview of bracket, mounting for headlight housing	141
1.2	Removing and installing mounting for headlight housing - aligning mounting for headlight housing with contours of body	141
2	Halogen headlights	146
2.1	Assembly overview - halogen headlight	146
2.2	Removing and installing headlights	148
2.3	Renewing bulb for dipped beam headlights	149
2.4	Renewing main beam bulb - vehicles up to model year 2009	150
2.5	Renewing headlight main beam bulb M30/M32 or daytime running light bulb L174/L175 - vehicles from model year 2010 onwards	150
2.6	Removing and installing headlight range control motor V48/V49	151
2.7	Adapting headlights for driving on the left or right side of the road	154
3	Gas discharge headlights - vehicles up to model year 2009	156
3.1	Safety information for handling gas discharge bulbs	156
3.2	Assembly overview - gas discharge headlight	156
3.3	Removing and installing headlights	158
3.4	Renewing gas discharge bulb	159
3.5	Renewing bulb for daytime running light/turn signal	160
3.6	Removing and installing left/right headlight screen adjustment solenoid N395/N396	161
3.7	Removing and installing swivel module position sensor G474/G475	161
3.8	Removing and installing printed circuit for main and dip beam switch-over control	161
3.9	Removing and installing dynamic cornering light control motor V318/V319	162
3.10	Removing and installing headlight range control motor V48/V49	163
3.11	Removing and installing gas discharge bulb control unit J343/J344	165
3.12	Removing and installing control unit for cornering light and headlight range control J745	167
3.13	Adapting headlights for driving on the left or right side of the road	170
4	Gas discharge headlights - vehicles from model year 2010 onwards	171
4.1	Safety information for handling gas discharge bulbs	171
4.2	Assembly overview - gas discharge headlight	171
4.3	Removing and installing headlights	173
4.4	Renewing gas discharge bulb L13/L14	174
4.5	Renewing LED module for daytime running light and side light L176/L177	175
4.6	Renewing cornering light bulb L148/L149	176
4.7	Removing and installing headlight screen adjustment solenoid N395/N396 - vehicles with bi-xenon headlights	177
4.8	Removing and installing swivel module position sensor G474/G475	177
4.9	Removing and installing printed circuit for main and dip beam switch-over control	178
4.10	Removing and installing control motor for headlight V448/V449 - vehicles with tri-xenon headlights	179
4.11	Removing and installing headlight range control motor V48/V49	179

4.12	Removing and installing headlight starter for gaseous discharge light J426/J427	181
4.13	Removing and installing output module for headlight J667/J668	182
4.14	Removing and installing output module 2 for headlights J892/J893	183
4.15	Adapting headlights for driving on the left or right side of the road	184
5	Side lights/side marker light and turn signals	185
5.1	Removing and installing housing for side lights/turn signals - rest-of-the-world vehicles / removing and installing housing for side marker light/turn signals - USA vehicles	185
5.2	Renewing side light bulb - rest-of-the-world vehicles / renewing side marker light bulb - USA vehicles	187
5.3	Renewing bulb for turn signal	190
5.4	Removing and installing LED turn signal	192
6	Daytime running lights - 12-cyl. TDI engine	196
6.1	Removing and installing daytime running light	196
7	Fog lights - vehicles up to model year 2009	198
7.1	Removing and installing fog lights	198
7.2	Renewing fog light bulb	199
8	Fog lights - vehicles from model year 2010 onwards	201
8.1	Removing and installing fog lights	201
8.2	Renewing fog light bulb	202
9	Adjusting headlights	203
9.1	Adjusting headlights	203
9.2	Adjusting halogen headlights - rest-of-the-world vehicles	203
9.3	Adjusting gas discharge headlights - rest-of-the-world vehicles	207
9.4	Adjusting halogen headlights - USA vehicles	212
9.5	Adjusting gas discharge headlights - USA vehicles	215
9.6	Adjusting fog lights	220
9.7	Adjusting additional headlights	222
10	Turn signal repeater - vehicles up to model year 2009	223
10.1	Removing and installing turn signal repeater	223
11	Turn signal repeater - vehicles from model year 2010 onwards	226
11.1	Removing and installing exterior mirror turn signal bulb L131/L132	226
12	Entry light in exterior mirror - vehicles up to model year 2009	229
12.1	Removing and installing entry light in exterior mirror	229
13	Entry light in exterior mirror - vehicles from model year 2010 onwards	232
13.1	Removing and installing entry light in exterior mirror	232
14	Tail light cluster in rear lid	235
14.1	Assembly overview of tail light cluster	235
14.2	Removing and installing tail light cluster	235
14.3	Removing and installing outer bulb carrier	237
14.4	Removing and installing inner bulb carrier	239
15	Tail light cluster in bumper	240
15.1	Assembly overview of tail light cluster	240
15.2	Removing and installing tail light and bulb carrier	241
15.3	Removing and installing bulbs on tail light cluster in bumper cover	242
16	Exterior lights (rear)	243
16.1	Removing and installing high-level brake light bulb M25	243
16.2	Removing and installing number plate light	244
16.3	Removing and installing rear lid closed sender G525 and G526	244
17	Steering column switch module	245
17.1	Assembly overview - steering column switch module	245
17.2	Removing and installing steering column switch module	245
17.3	Removing and installing return ring with slip ring	248
17.4	Removing and installing steering angle sender G85	249
17.5	Removing and installing steering column electronics control unit J527	250

17.6	Pin assignment at steering column electronics control unit J527 (front)	251
17.7	Pin assignment at steering column electronics control unit J527 (reverse side)	253
17.8	Removing and installing turn signal switch E2	254
17.9	Removing and installing cruise control system switch E45	255
17.10	Removing and installing intermittent wiper switch E22	256
18	Entry and start authorisation switch E415	258
18.1	Removing and installing entry and start authorisation switch E415	258
18.2	Pin assignment at entry and start authorisation switch E415	260
19	Parking aid	261
19.1	Assembly overview - parking aid	261
19.2	Removing and installing parking aid control unit J446	262
19.3	Removing and installing front parking aid warning buzzer H22 - 8-channel parking aid	265
19.4	Removing and installing rear parking aid warning buzzer H15	267
19.5	Removing and installing front parking aid sender	267
19.6	Removing and installing rear parking aid sender	269
20	Automatic headlight range control	271
20.1	Assembly overview - automatic headlight range control	271
20.2	Removing and installing control unit for headlight range control J431	271
96	Lights, bulbs, switches - interior	273
1	Lights and switches in dash panel	273
1.1	Removing and installing light switch	273
1.2	Removing and installing steering column adjustment switch E167	274
1.3	Removing and installing switch panel for instrument cluster	275
1.4	Removing and installing switch panel for E316, E506, E536 and E693	276
1.5	Removing and installing warning lamp for airbag deactivated on front passenger side K145	278
1.6	Removing and installing switch panel in dash panel	278
1.7	Removing and installing front seat heating switches	279
1.8	Removing and installing glove compartment light	279
1.9	Removing and installing glove compartment light switch E26	280
1.10	Removing and installing footwell light (front)	280
2	Lights and switches in front doors	282
2.1	Removing and installing mirror adjustment switch E43	282
2.2	Removing and installing operating unit for window regulator in driver door E512	284
2.3	Removing and installing window regulator switch in front passenger door E107	286
2.4	Removing and installing interior locking switch E150/E198 (central locking button)	286
2.5	Removing and installing seat memory operating unit E97/E277	287
2.6	Removing and installing rear lid remote release button E233 and fuel tank flap release button E319	288
2.7	Removing and installing bulb for door opener light	289
2.8	Removing and installing light strip for bulb for door opener light	289
2.9	Removing and installing central locking SAFELOCK function warning lamp K133	290
2.10	Removing and installing door contact switch	290
2.11	Removing and installing door warning lamp and entry light (front)	291
3	Lights and switches in rear doors	293
3.1	Removing and installing rear left/rear right window regulator switch, in door E52/E54	293
3.2	Removing and installing rear interior locking switch E273/E274 (central locking button)	293
3.3	Removing and installing light strip for bulb for door opener light	294
3.4	Removing and installing bulb for door opener light	295
3.5	Removing and installing ashtray light in door (rear)	295
3.6	Removing and installing door contact switch	296
3.7	Removing and installing door warning lamp and entry light (rear)	296
4	Lights and switches in centre console	298

4.1	Removing and installing entry and start authorisation button E408 - vehicles up to model year 2009	298
4.2	Removing and installing entry and start authorisation button E408 - vehicles from model year 2010 onwards	300
4.3	Removing and installing selector lever position display Y26	303
4.4	Removing and installing seat heating switches (rear) - vehicles with individually adjustable air conditioning system (2 zones)	303
4.5	Removing and installing seat heating switches (rear) - vehicles with individually adjustable air conditioning system (4 zones)	304
4.6	Removing and installing ashtray light (front)	305
5	Lights and switches in front seats, luggage compartment	308
5.1	Removing and installing footwell light (rear)	308
5.2	Removing and installing loading height button E539/electric hinged tow coupling attachment button E474	308
5.3	Removing and installing button to close rear lid in luggage compartment E406	309
5.4	Removing and installing contact switch in lock cylinder for rear lid, anti-theft system and central locking system F124	309
5.5	Removing and installing small luggage compartment light in roof	310
5.6	Removing and installing bulb for small luggage compartment light in roof	310
5.7	Removing and installing large luggage compartment light in roof	312
5.8	Removing and installing bulb for large luggage compartment light in roof	313
5.9	Removing and installing large luggage compartment light in roof with switch	314
5.10	Removing and installing bulb for large luggage compartment light in roof with switch	315
5.11	Removing and installing luggage compartment lights and rear lid lights	316
6	Lights and switches in roof trim	318
6.1	Removing and installing vanity mirror light	318
6.2	Removing and installing front interior light/reading light	318
6.3	Removing and installing LED for background lighting	319
6.4	Renewing bulbs for interior light (front)	320
6.5	Renewing bulbs for reading light (front)	321
6.6	Removing and installing sliding sunroof adjustment regulator E139	322
6.7	Removing and installing sunroof switch E8 with button 1 for tilting roof E582 and button 1 for roof roller blind E584	322
6.8	Removing and installing garage door operating unit E284	323
6.9	Removing and installing garage door operation control unit J530	324
6.10	Removing and installing interior light/reading light (rear) - vehicles without panoramic sunroof	324
6.11	Renewing bulb for interior light/reading light (rear) - vehicles without panoramic sunroof	325
6.12	Removing and installing interior light/reading light (rear) - vehicles with panoramic sunroof	325
6.13	Renewing bulb for interior light/reading light (rear) - vehicles with panoramic sunroof	326
6.14	Removing and installing rear sliding sunroof switch E191 with button 2 for tilting roof E583 and button 2 for roof roller blind E585	327
7	Immobiliser	328
8	Entry and start authorisation system	329
8.1	Overview of entry and start authorisation system	329
8.2	Overview of keyless entry system	329
8.3	Assembly overview of exterior door handle for keyless entry system	330
8.4	Removing and installing front exterior door handle switches F272/F273	332
8.5	Removing and installing rear exterior door handle switches F274/F275	333
8.6	Removing and installing interior aerial 1 for entry and start system R138	334
8.7	Removing and installing driver side aerial for entry and start authorisation R134	336
8.8	Removing and installing front passenger side aerial for entry and start authorisation R135	337
8.9	Removing and installing luggage compartment aerial for entry and start authorisation R137	337
8.10	Removing and installing aerial reader unit for keyless entry system J723	338
9	Ultrasonic interior monitoring	342

9.1	Removing and installing interior monitoring deactivation switch E183 and alarm system off switch E217	342
9.2	Removing and installing interior monitoring sensor G273	343
9.3	Removing and installing alarm horn H12	343
9.4	Removing and installing vehicle inclination sender G384	344
10	Lane change assist	345
10.1	Assembly overview of lane change assist	345
10.2	Removing and installing button for lane change assist E530	345
10.3	Removing and installing lane change assist warning lamp in exterior mirror K233/K234	346
10.4	Removing and installing lane change assist control unit J769/J770	348
10.5	Calibrating lane change assist - test equipment layout	349
10.6	Calibrating lane change assist control unit J769/J770	350
11	Heated steering wheel	358
12	Towing bracket	359
12.1	Socket for towing bracket	359
12.2	Removing and installing trailer detector control unit J345	359
97 - Wiring		361
1	Component protection	361
2	Relay carriers, fuse carriers	362
2.1	Unplugging left door coupling point	362
2.2	Unplugging right door coupling point	362
2.3	Removing and installing plenum chamber electronics box (driver's side)	363
2.4	Removing and installing fuse and relay carrier in plenum chamber electronics box (driver's side)	365
3	Relay carriers, fuse carriers (vehicle interior)	367
3.1	Removing and installing bracket with fuse holder at dash panel (left-side)	367
3.2	Removing and installing fuse holder in dash panel (left-side)	368
3.3	Removing and installing CAN separating connector (left-side) T46a	370
3.4	Removing and installing onboard supply control unit J519	370
3.5	Removing and installing relay and fuse carrier in centre of dash panel	371
3.6	Removing and installing fuse carrier in centre of dash panel	372
3.7	Removing and installing main fuse holder in vehicle floor (driver's side)	373
3.8	Removing and installing bracket with fuse holder at dash panel (right-side)	377
3.9	Removing and installing fuse holder at dash panel (right-side)	379
3.10	Removing and installing CAN separating connector (right-side) T46b	380
3.11	Removing and installing onboard supply control unit 2 J520	381
4	Relay carriers, fuse carriers (luggage compartment)	383
4.1	Removing and installing relay and fuse holder in right side of luggage compartment	383
5	Repairing wiring harnesses and electrical connectors	385
6	Repairing connector housings and electrical connectors	386
7	Releasing and dismantling connector housings	387
8	Cleaning contact surfaces	388
9	Aerial wires	389
9.1	Repairing aerial wires	389
9.2	Renewing aerial wire for rear lid - vehicles up to model year 2009	389
9.3	Renewing aerial wire for rear lid - vehicles from model year 2010 onwards	397
10	Fibre optic cables	408
11	Vehicle diagnostic, testing and information systems	409