

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Working on vehicles with start/stop system	1
2 Routing and attaching pipes/hoses and wiring	2
3 Contact corrosion	3
68 - Interior equipment	4
1 Shelves / trim panels	4
1.1 Exploded view of dash panel covers (driver side)	5
1.2 Removing and installing dash panel cover (bottom) on driver side	6
1.3 Removing and installing dash panel cover (top) on driver side (knee bolster)	6
1.4 Exploded view of bracket for knee bolster on driver side (country-specific version)	8
1.5 Removing and installing bracket for knee bolster (left-side) on driver side (country-specific version)	10
1.6 Removing and installing bracket for knee bolster (right-side) on driver side (country-specific version)	10
1.7 Removing and installing support for bracket for knee bolster on driver side (country-specific version)	11
1.8 Exploded view of glove box and dash panel cover (passenger side)	11
1.9 Manually releasing glove box lid	13
1.10 Removing and installing glove box	14
1.11 Removing and installing glove box lid	14
1.12 Removing and installing cushioning element for glove box lid	15
1.13 Removing and installing glove compartment release motor V327	15
1.14 Adjusting cable for glove box lid	16
1.15 Removing and installing dash panel cover (passenger side)	16
1.16 Exploded view of bracket for knee bolster on passenger side (country-specific version) ..	17
1.17 Removing and installing bracket for knee bolster (left-side) on passenger side (country-specific version)	18
1.18 Removing and installing bracket for knee bolster (right-side) on passenger side (country-specific version)	18
1.19 Removing and installing support for bracket for knee bolster on passenger side (country-specific version)	18
2 Centre console	20
2.1 Exploded view of centre console	20
2.2 Removing and installing centre console	22
2.3 Removing and installing centre console vent	23
2.4 Removing and installing centre console storage compartment	24
2.5 Removing and installing drawer for control unit for front display and information control panel J523	24
2.6 Removing and installing spring for drawer for control unit for front display and information control panel J523	26
2.7 Removing and installing mounting frame for multimedia system operating unit E380	27
2.8 Removing and installing ashtray (front) / storage compartment (front)	28
2.9 Removing and installing trim for ashtray (front)	29
2.10 Removing and installing mounting bracket for centre console	29
3 Centre armrest (front) with hinged padding	30
3.1 Exploded view of centre armrest (front)	30
3.2 Removing and installing centre armrest (front)	32
3.3 Removing and installing padding for centre armrest (front)	33
3.4 Removing and installing storage compartment for centre armrest (front)	34
3.5 Removing and installing cup holders	34
3.6 Removing and installing support for centre armrest (front)	35

3.7	Removing and installing support bracket (top and bottom section) for centre armrest (front)	35
4	Centre armrest (front) with fixed padding	37
4.1	Exploded view of centre armrest (front)	37
4.2	Removing and installing centre armrest (front)	38
4.3	Removing and installing padding for centre armrest (front)	38
4.4	Removing and installing trim (top) for centre armrest (front)	39
4.5	Removing and installing cup holders	39
4.6	Removing and installing support for centre armrest (front)	40
5	Multibox	41
5.1	Exploded view of multibox components	41
5.2	Removing and installing multibox (exploded view)	44
5.3	Removing and installing multibox	44
5.4	Removing and installing trim panel for centre armrest	45
5.5	Removing and installing trim for support bracket 1 and 2 for centre armrest	46
5.6	Removing and installing padding for centre armrest	47
5.7	Removing and installing gas strut	48
5.8	Removing and installing Bowden cable	48
5.9	Adjusting Bowden cable	49
5.10	Removing and installing cup holder	49
5.11	Removing and installing cup holder insert	51
5.12	Removing and installing trim for cup holder lid	51
6	Interior mirror	53
6.1	Exploded view of interior mirror	53
6.2	Exploded view of interior mirror with lane departure warning (Audi lane assist)	55
6.3	Removing and installing interior mirror	55
6.4	Safety regulations for interior mirror	57
6.5	General notes on interior mirror	57
6.6	Switching automatic anti-dazzle function on and off	57
6.7	Switching compass display on and off	58
6.8	Setting magnetic deflection zone	58
6.9	Calibrating digital compass	58
6.10	Adjusting automatic anti-dazzle interior mirror Y7 for right-hand drive or left-hand drive vehicles	59
6.11	Selecting the applicable deflection zone from the map	59
6.12	Checking operation of automatic anti-dazzle interior mirror	65
69	Passenger protection	67
1	Safety regulations and test methods for pyrotechnic, electrical and mechanical components of the restraint system	67
1.1	General safety regulations	68
1.2	Storing, transporting and disposing of airbag units, belt tensioner units and battery isolation units (pyrotechnic components)	69
1.3	Additional safety regulations for side airbags	70
1.4	Additional safety regulations for curtain airbags	70
1.5	Safety regulations for crash sensors (pressure sensors) for side airbag (front)	71
1.6	Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version	71
1.7	Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	72
1.8	Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	72
1.9	Checking airbag mounting components following an accident	74
1.10	Accident in which no airbag was triggered	75
1.11	Checking seat belts	75
1.12	Checking belt	75
1.13	Checking automatic belt retractor (locking action)	76

1.14	Visual inspection of belt buckle	77
1.15	Functional check of belt buckle	77
1.16	Checking guide fittings and latch plate	77
1.17	Checking securing components and anchorage points following an accident	77
1.18	Checking child seat restraint function for additional child seats (not for driver's seat belt) - country-specific version	78
1.19	Checking child seat anchors following an accident (ISOFIX, Top Tether)	78
2	Seat belts	79
2.1	Overview of seat belts and anchorage points: 2nd row of seats with 2/3 seat bench and one individual seat	79
2.2	Overview of seat belts and anchorage points: 2nd row of seats with individual seats and multibox	81
2.3	Removing and installing belt end fitting	82
2.4	Exploded view of three-point seat belt (front)	83
2.5	Removing and installing three-point seat belt (front)	85
2.6	Removing and installing anchorage point (belt buckle)	88
2.7	Renewing belt buckle for seat occupied recognition system controlling deactivation of front passenger airbag (country-specific version)	88
2.8	Removing and installing belt guide (front)	90
2.9	Exploded view of belt height adjuster (front)	90
2.10	Removing and installing belt height adjuster (front)	91
2.11	Exploded view of outer three-point seat belt (2nd row)	93
2.12	Removing and installing outer three-point seat belt (2nd row)	95
2.13	Removing and installing rear belt guide (2nd row)	97
2.14	Removing and installing rear belt height adjuster (2nd row)	98
2.15	Removing and installing outer belt buckle anchorage point (2nd row)	99
2.16	Exploded view of centre three-point seat belt (2nd row)	99
2.17	Removing and installing centre three-point seat belt (2nd row)	100
2.18	Removing and installing centre belt buckle anchorage point (2nd row)	103
2.19	Exploded view of seat belt (3rd row)	103
2.20	Removing and installing seat belt (3rd row)	104
2.21	Removing and installing centre belt buckle (3rd row)	105
2.22	Removing and installing outer belt buckle (3rd row)	106
2.23	Releasing and locking belt buckle/belt end fitting	106
3	ISOFIX child seat anchors	108
3.1	Removing and installing ISOFIX caps	108
3.2	Removing and installing ISOFIX caps - 2nd row (3 seats)	108
3.3	Checking ISOFIX child seat anchors following an accident	109
4	Servicing airbags	110
4.1	Overview of airbags	110
4.2	Removing and installing airbag control unit J234	111
4.3	Removing and installing battery isolation igniter N253	112
5	Servicing airbag (driver's side) up to approx. 05.2011	115
5.1	Exploded view of airbag unit (driver side)	115
5.2	Removing and installing airbag igniter on driver side N95 and airbag igniter 2 on driver side N250	116
5.3	Renewing connector at airbag unit	118
6	Servicing airbag (driver's side) from approx. 06.2011 onwards	120
6.1	Exploded view of airbag unit (driver side)	120
6.2	Removing and installing airbag igniter on driver side N95	121
6.3	Renewing connector at airbag unit	124
7	Servicing airbag (front passenger side)	126
7.1	Exploded view of airbag unit (front passenger side)	126
7.2	Removing and installing airbag unit (front passenger side)	127
7.3	Removing and installing key operated switch to deactivate front passenger side airbag E224	129

7.4	Removing and installing brackets for airbag unit (front passenger side)	131
7.5	Removing and installing warning lamp for airbag deactivated on front passenger side K145	131
8	Servicing side airbags	132
8.1	Removing and installing side airbag igniter on driver side N199 and side airbag igniter on front passenger side N200 (standard seats, seats with electric seat adjustment)	132
8.2	Rear side airbag igniter on driver side N201 and rear side airbag igniter on front passenger side N202	134
9	Belt-fastened recognition system	137
10	Seat occupied recognition controlling front passenger airbag deactivation (country-specific version)	139
11	Deactivating side airbag (rear)	142
11.1	Deactivating	142
11.2	Sticker for deactivated side airbag (rear)	143
11.3	Activating	143
12	Servicing curtain airbags	146
12.1	Exploded view of curtain airbag with driver side curtain airbag igniter N251 and front passenger side curtain airbag igniter N252	146
12.2	Removing and installing curtain airbag with driver side curtain airbag igniter N251 and front passenger side curtain airbag igniter N252	146
13	Servicing crash sensors for airbags	150
13.1	Overview of fitting locations	150
13.2	Removing and installing front airbag crash sensor for driver side G283 and front airbag crash sensor for front passenger side G284	150
13.3	Removing and installing front side airbag crash sensor on driver side G179 and side airbag crash sensor on front passenger side G180	152
13.4	Removing and installing rear side airbag crash sensor on driver side G256 and rear side airbag crash sensor on front passenger side G257	154
70 - Trim, insulation		157
1	Door trim (front)	157
1.1	Exploded view of door trim (door side)	157
1.2	Exploded view of door trim (vehicle interior side)	159
1.3	Removing and installing door trim (front)	160
1.4	Removing and installing trim panel	163
1.5	Removing and installing door puller (front passenger side)	164
1.6	Removing and installing interior door handle	165
1.7	Removing and installing trim/mounting for seat memory operating unit	165
1.8	Removing and installing armrest	166
1.9	Removing and installing switch mounting	166
1.10	Removing and installing air duct	167
1.11	Removing and installing air intake grille for air duct	167
1.12	Removing and installing vent grille for air duct	168
1.13	Removing and installing trim panel for BOSE sound system	168
1.14	Removing and installing door pocket	168
1.15	Removing and installing trim for window frame	169
2	Door trim (rear)	172
2.1	Exploded view of door trim (door side)	172
2.2	Exploded view of door trim (vehicle interior side)	174
2.3	Removing and installing door trim (rear)	175
2.4	Removing and installing trim panel	177
2.5	Removing and installing door puller	178
2.6	Removing and installing interior door handle	178
2.7	Removing and installing ashtray	179
2.8	Removing and installing armrest	179
2.9	Removing and installing switch mounting	180

2.10	Removing and installing loudspeaker trim	180
2.11	Removing and installing trim panel for BOSE sound system	181
2.12	Removing and installing door pocket	181
2.13	Removing and installing trim for window frame	182
2.14	Exploded view of sun blind	183
2.15	Removing and installing sun blind	184
2.16	Removing and installing retainer for sun blind	185
3	Dash panel	186
3.1	Overview of dash panel	186
3.2	Exploded view of dash panel	187
3.3	Removing and installing dash panel	189
3.4	Removing and installing dash panel cover (side)	192
3.5	Removing and installing trim for indirect ventilation	192
3.6	Removing and installing dash panel vent (side)	193
3.7	Removing and installing dash panel vent (centre)	194
3.8	Removing and installing release handle for parking brake	195
3.9	Removing and installing centre air duct (top)	195
3.10	Removing and installing centre air duct	195
3.11	Removing and installing mounting frame	196
4	Central tube for dash panel	197
4.1	Exploded view of central tube for dash panel	197
4.2	Removing and installing central tube for dash panel	198
4.3	Removing and installing retaining brackets for central tube	205
5	Trim panels	206
5.1	Overview of trim panels	206
5.2	Exploded view of A-pillar trim (top)	207
5.3	Removing and installing A-pillar trim (top)	207
5.4	Exploded view of A-pillar trim (bottom)	210
5.5	Removing and installing A-pillar trim (bottom)	210
5.6	Exploded view of connecting piece	212
5.7	Removing and installing connecting piece	213
5.8	Exploded view of foot rest cover and bracket	213
5.9	Removing and installing foot rest cover and bracket	214
5.10	Exploded view of B-pillar trim	215
5.11	Removing and installing B-pillar trim	215
5.12	Removing and installing coat hook	218
5.13	Exploded view of sill panel trim	218
5.14	Removing and installing sill panel trim	219
5.15	Exploded view of C-pillar trim	220
5.16	Removing and installing C-pillar trim	221
5.17	Exploded view of sill/pillar trim	223
5.18	Removing and installing sill/pillar trim	224
5.19	Detaching (not removing) and attaching sill/pillar trim from C-pillar	226
5.20	Exploded view of D-pillar trim	227
5.21	Removing and installing D-pillar trim	227
5.22	Removing and installing belt exit point trim	229
5.23	Exploded view of roof end trim	229
5.24	Removing and installing roof end trim	230
5.25	Exploded view of floor covering	231
5.26	Removing and installing floor covering (rear)	232
5.27	Removing and installing floor covering (front)	233
5.28	Inserting floor covering frame for access to tank	234
5.29	Exploded view of rear lid trim	234
5.30	Removing and installing rear lid trim	236
5.31	Making opening for button to close rear lid in luggage compartment E406 in rear lid trim (bottom)	238



5.32	Exploded view of rear cross panel trim	238
5.33	Removing and installing rear cross panel trim	239
5.34	Exploded view of luggage compartment side trim	240
5.35	Removing and installing luggage compartment side trim	241
5.36	Exploded view of cover for luggage compartment floor	242
5.37	Removing and installing retaining rail for fastening rings	244
5.38	Removing and installing trim cover	244
5.39	Removing and installing fastening ring with trim cover	245
5.40	Removing and installing luggage compartment floor / cover for luggage compartment floor	246
5.41	Removing and installing handle for luggage compartment floor	246
6	Roof trim	247
6.1	Exploded view of moulded headliner	247
6.2	Removing and installing moulded headliner	249
6.3	Attaching roof reinforcement to body - vehicles without sliding sunroof	252
6.4	Removing and installing mounting for load guard	253
6.5	Removing and installing sun visor (exploded view)	254
6.6	Removing and installing sun visor	255
6.7	Removing and installing grab handle	256
72	Seat frames	258
1	Overview of seat versions	258
1.1	Overview of 5/7-seat vehicle	258
1.2	Overview of 4/6-seat vehicle	259
1.3	Setting driver seat to service position	260
2	Console, mounting elements and brackets	263
2.1	Exploded view of console, mounting elements and brackets	263
2.2	Exploded view of console (driver's seat)	264
2.3	Removing and installing console (driver's seat)	264
2.4	Removing and installing trim for console (front), driver's seat	265
2.5	Removing and installing trim for console (left-side), driver's seat	266
2.6	Exploded view of console (front passenger's seat with drawer)	267
2.7	Removing and installing console (front passenger's seat)	267
2.8	Removing and installing trim for console (front), front passenger's seat	268
2.9	Removing and installing trim for console (right-side), front passenger's seat	269
2.10	Removing and installing drawer	269
2.11	Exploded view of console and mounting element, 2nd row for 5 and 7-seat vehicles	270
2.12	Removing and installing console	271
2.13	Removing and installing mounting element	271
2.14	Exploded view of console and mounting elements, 2nd row for 6-seat vehicles	272
2.15	Exploded view of brackets for multibox, 2nd row for 6-seat vehicles	274
2.16	Removing and installing brackets for multibox	274
3	Front seats with manual adjustment	276
3.1	Exploded view of driver's seat	277
3.2	Exploded view of front passenger's seat	278
3.3	Removing and installing front seat	279
3.4	Unplugging connectors	282
3.5	Connecting airbag adapter	284
3.6	Connector point connectors	288
3.7	Removing and installing seat rail covers	288
3.8	Removing and installing backrest adjuster	289
3.9	Removing and installing seat height adjuster	290
3.10	Removing and installing trim (sill side)	291
3.11	Removing and installing trim (tunnel side)	292
3.12	Removing and installing seat height adjustment unit	294
3.13	Removing and installing seat longitudinal adjustment handle	297

3.14	Exploded view of front seat backrest	297
3.15	Removing and installing front seat backrest	298
3.16	Removing and installing retaining plate for DVD player	301
3.17	Riveting pop rivet nut for retaining plate for DVD player to outer backrest frame (retrofit)	302
3.18	Exploded view of backrest cover panel	302
3.19	Removing and installing backrest cover panel	303
3.20	Removing and installing head restraints with slide-in locking mechanism	307
3.21	Removing and installing head restraints with Rear Seat Entertainment screen	307
3.22	Removing and installing rear footwell light	308
3.23	Exploded view of front seat (standard seat) without active head restraint system - vehicles from 07.06 onwards	308
3.24	Backrest without active head restraint system - removing and installing head restraint	308
3.25	Backrest without active head restraint system - removing and installing four-way lumbar support	308
3.26	Backrest without active head restraint system - removing and installing lumbar support adjustment motors	309
3.27	Backrest without active head restraint system - removing and installing head restraint guides	309
3.28	Backrest without active head restraint system - removing and installing cover with padding	309
3.29	Backrest without active head restraint system - detaching cover from padding	309
3.30	Exploded view of seat pan	309
3.31	Renewing seat pan	310
3.32	Spring mat with wiring harness for seat pan	312
3.33	Removing and installing spring mat with wiring harness for seat pan	313
4	Front seats with electric adjustment (memory seats, electrically operated seats)	316
4.1	Exploded view of driver's seat	318
4.2	Exploded view of front passenger's seat	320
4.3	Removing and installing front seat	321
4.4	Removing front seat if control unit or seat longitudinal adjustment motor are defective	325
4.5	Unplugging connectors	328
4.6	Connecting airbag adapter	330
4.7	Connector point connectors	334
4.8	Removing and installing seat rail covers	334
4.9	Trim (sill side and tunnel side)	335
4.10	Removing and installing assembly cover	336
4.11	Removing and installing trim (sill side)	337
4.12	Removing and installing trim	338
4.13	Removing and installing trim (tunnel side)	339
4.14	Seat and backrest adjustment buttons	340
4.15	Removing and installing seat adjustment buttons	341
4.16	Removing and installing backrest adjustment button	342
4.17	Front seat backrest	342
4.18	Removing and installing front seat backrest	343
4.19	Removing and installing retaining plate for DVD player	346
4.20	Riveting pop rivet nut for retaining plate for DVD player to outer backrest frame (retrofit)	346
4.21	Exploded view of backrest cover panel	347
4.22	Removing and installing backrest cover panel	348
4.23	Exploded view of four-way lumbar support - vehicles up to 07.06	350
4.24	Removing and installing four-way lumbar support - vehicles up to 07.06	351
4.25	Removing and installing head restraints with slide-in locking mechanism	355
4.26	Removing and installing head restraints with Rear Seat Entertainment screen	355
4.27	Removing and installing rear footwell light	356
4.28	Exploded view of seat pan	356
4.29	Dismantling and assembling seat pan	357



4.30	Exploded view of front seat (memory seat, seat with electric adjustment) without active head restraint system - vehicles from 07.06 onwards	361
4.31	Backrest without active head restraint system - removing and installing head restraint	362
4.32	Backrest without active head restraint system - removing and installing backrest cover panel	362
4.33	Backrest without active head restraint system - removing and installing four-way lumbar support	362
4.34	Backrest without active head restraint system - removing and installing lumbar support adjustment motors	365
4.35	Backrest without active head restraint system - removing and installing head restraint guides	366
4.36	Backrest without active head restraint system - removing and installing cover with padding	366
4.37	Backrest without active head restraint system - detaching cover from padding	366
4.38	Exploded view of seat rake adjustment motor V243 / V244	366
4.39	Removing and installing seat rake adjustment motor V243 / V244	367
4.40	Exploded view of seat longitudinal adjustment motor V288	368
4.41	Removing and installing seat longitudinal adjustment motor V288	369
4.42	Exploded view of backrest adjustment motor V45 / V46	371
4.43	Removing and installing backrest adjustment motor V45 / V46	371
4.44	Lumbar support longitudinal and height adjustment motors	374
4.45	Removing and installing lumbar support longitudinal adjustment motor V125 / V126	375
4.46	Removing and installing lumbar support height adjustment motor V129 / V130	376
4.47	Exploded view of seat height adjustment motor	377
4.48	Removing and installing seat height adjustment motor V245 / V246	377
4.49	Lumbar support adjustment switch E176 / E177	381
4.50	Removing and installing lumbar support adjustment switch E176 / E177	383
4.51	Seat longitudinal adjustment button, rake adjustment button, seat height adjustment button and backrest adjustment button (E418 , E421 , E424 , E425)	383
4.52	Removing and installing seat longitudinal adjustment button, rake adjustment button, seat height adjustment button and backrest adjustment button (E418 , E421 , E424 , E425)	385
4.53	Exploded view of seat and steering column adjustment control unit with memory J136 / front passenger seat adjustment control unit with memory J521	386
4.54	Removing and installing seat and steering column adjustment control unit with memory J136 / J521	386
4.55	Spring mat with wiring harness for seat pan	389
4.56	Removing and installing spring mat with wiring harness for seat pan	390
5	Front seats with electric adjustment (convenience seats with/without memory function)	395
5.1	Exploded view of front convenience seat	397
5.2	Removing and installing front seat with electric adjustment (convenience seat)	401
5.3	Removing front seat if seat longitudinal adjustment motor or control unit are defective	401
5.4	Unplugging and plugging in connectors	401
5.5	Connecting airbag adapter	401
5.6	Connector point connectors	401
5.7	Removing and installing cover for seat rail	402
5.8	Exploded view of trim (sill side and tunnel side)	402
5.9	Removing and installing assembly cover	402
5.10	Removing and installing trim (sill side)	402
5.11	Removing and installing trim	402
5.12	Removing and installing trim (tunnel side)	402
5.13	Exploded view of bracket and retaining bracket for trim	402
5.14	Removing and installing retaining bracket for trim	403
5.15	Removing and installing bracket for trim	404
5.16	Exploded view of front seat backrest	404
5.17	Removing and installing front seat backrest	404
5.18	Removing and installing retaining plate for DVD player	404

5.19	Riveting pop rivet nut for retaining plate for DVD player to outer backrest frame (retrofit)	404
5.20	Exploded view of backrest cover panel	404
5.21	Removing and installing backrest cover panel	405
5.22	Exploded view of seat pan frame	405
5.23	Removing and installing upper seat pan frame	406
5.24	Removing and installing lower seat pan frame	406
5.25	Exploded view of head restraint	407
5.26	Removing and installing head restraint with slide-in locking mechanism	407
5.27	Removing and installing head restraint guide	408
5.28	Exploded view of control unit for seat ventilation (seat heating integrated)	408
5.29	Removing and installing control unit for seat ventilation J799 / J800 (seat heating integrated)	408
5.30	Exploded view of seat adjustment control unit with memory function	410
5.31	Removing and installing seat adjustment control unit with memory function	411
5.32	Removing and installing bracket for seat adjustment control unit with memory function	411
5.33	Overview of seat cushion and backrest fans	411
5.34	Removing and installing backrest fan (top)	412
5.35	Removing and installing backrest fan (bottom)	412
5.36	Exploded view of seat cushion fan	413
5.37	Removing and installing seat cushion fan	413
5.38	Exploded view of seat longitudinal adjustment motor	414
5.39	Removing and installing seat longitudinal adjustment motor	414
5.40	Exploded view of backrest adjustment motor	414
5.41	Removing and installing backrest adjustment motor	414
5.42	Exploded view of seat height adjustment motor	414
5.43	Removing and installing seat height adjustment motor	415
5.44	Exploded view of seat rake adjustment motor	415
5.45	Removing and installing seat rake adjustment motor	415
5.46	Exploded view of seat adjustment operating unit and switches	415
5.47	Removing and installing seat adjustment actuator	415
5.48	Removing and installing backrest adjustment actuator	415
5.49	Removing and installing seat adjustment operating unit	416
5.50	Removing and installing lumbar support adjustment switch	416
5.51	Exploded view of four-way lumbar support	416
5.52	Removing and installing four-way lumbar support	417
6	Front seats (sports seats)	420
6.1	Exploded view of seat depth adjuster	420
6.2	Removing and installing seat depth adjuster	421
6.3	Removing and installing trim	422
6.4	Removing and installing handle	424
7	2nd row (3 seats)	427
7.1	Exploded view of 2nd row (3 seats)	428
7.2	Removing and installing seat bench in 2nd row of seats	431
7.3	Removing and installing seat cushion of seat bench	435
7.4	Unplugging connectors	436
7.5	Connecting airbag adapter	438
7.6	Connector assignment at connector point	441
7.7	Removing and installing seat rail cap (rear)	441
7.8	Removing and installing seat rail cap (front)	442
7.9	Removing and installing cover for seat rail	442
7.10	Exploded view of seat rails	443
7.11	Renewing seat rails	444
7.12	Exploded view of outer head restraint	447
7.13	Removing and installing outer head restraint	448
7.14	Removing and installing cover of outer head restraint	449



7.15	Removing and installing head restraint (centre)	449
7.16	Removing and installing centre armrest	450
7.17	Trim panels - 2nd row of seats: seat bench (front)	450
7.18	Removing and installing trim panel around button for folding down centre seat	451
7.19	Removing and installing trim panel for centre seat belt	452
7.20	Removing and installing handle (Easy Entry system)	453
7.21	Removing and installing trim (Easy Entry system)	453
7.22	Removing and installing trim panel on side (left-side, outer section)	454
7.23	Removing and installing trim panel on side (left-side, inner section)	455
7.24	Removing and installing trim panel on side (right-side)	455
7.25	Trim panels - 2nd row of seats: seat bench (reverse side)	455
7.26	Removing and installing trim panel for locking mechanism (centre seat)	456
7.27	Removing and installing trim (tunnel side)	457
7.28	Removing and installing trim panel on reverse side (bottom left)	457
7.29	Components of backrest of centre seat	458
7.30	Removing and installing cup holder	459
7.31	Exploded view of cable of backrest adjuster lever	460
7.32	Removing and installing backrest adjuster lever	460
7.33	Removing and installing cable for backrest adjuster lever	461
7.34	Adjusting cable of backrest adjuster lever	462
7.35	Exploded view of cables and housing for Easy Entry system	463
7.36	Removing and installing cables and housing for Easy Entry system	464
7.37	Adjusting cables for Easy Entry system	466
8	2nd row (2 seats)	467
8.1	Exploded view of 2nd row (2 seats)	467
8.2	Removing and installing individual seat in 2nd row of seats	469
8.3	Removing and installing seat cushion	472
8.4	Unplugging connectors	473
8.5	Connecting airbag adapter	475
8.6	Connector assignment at connector point	478
8.7	Removing and installing seat rail cap (rear)	478
8.8	Removing and installing seat rail cap (front)	479
8.9	Removing and installing cover for seat rail	479
8.10	Head restraint	479
8.11	Trim panels - 2nd row of seats: individual seat (right-side)	481
8.12	Exploded view of cable of backrest adjuster lever	482
8.13	Exploded view of cables and housing for Easy Entry system	483
9	3rd row of seats	484
9.1	Exploded view of 3rd row of seats	484
9.2	Removing and installing 3rd row seats	485
9.3	Removing and installing seat cushion in 3rd row of seats	487
9.4	Removing and installing retainer	487
9.5	Removing and installing trim	488
9.6	Removing and installing handle	488
9.7	Removing and installing cover	489
9.8	Removing and installing cover for centre mounting	490
9.9	Exploded view of head restraint	490
9.10	Removing and installing head restraint	491
9.11	Removing and installing cover for head restraint	492
9.12	Removing and installing control cam mechanism for head restraint	493
9.13	Exploded view of backrest (left and right)	493
9.14	Removing and installing backrest (left/right)	495
9.15	Removing and installing cable and housing for backrest release mechanism	497
9.16	Adjusting cable for backrest release mechanism	498

74 - Seat - padding, covers **500**

1	Covers and padding for front seats with manual adjustment	500
1.1	Cover and padding for seat pan	500
1.2	Removing and installing seat pan cover and padding	501
1.3	Cover and padding for backrest	504
1.4	Removing and installing backrest cover and padding	505
1.5	Removing and installing seat heating element	508
1.6	Removing and installing backrest heating element	509
1.7	Removing and installing cover and padding for head restraint with slide-in locking mechanism	509
1.8	Head restraint guides	510
1.9	Removing and installing head restraint guides	511
2	Covers and padding for front seats with electric adjustment (memory seats, electrically operated seats)	513
2.1	Cover and padding for seat pan	513
2.2	Removing and installing seat pan cover and padding	514
2.3	Cover and padding for backrest	517
2.4	Removing and installing backrest cover and padding	518
2.5	Removing and installing seat heating element	521
2.6	Removing and installing backrest heating element	521
2.7	Removing and installing cover and padding for head restraint with slide-in locking mechanism	521
2.8	Removing and installing head restraint guides	521
3	Covers and padding for front seats with electric adjustment (convenience seats with or without memory function)	522
3.1	Exploded view of seat pan cover and padding	522
3.2	Removing and installing seat pan cover and padding	522
3.3	Detaching cover from padding for seat pan	522
3.4	Exploded view of backrest cover and padding	523
3.5	Removing and installing backrest cover and padding	523
3.6	Detaching cover from padding for backrest	523
3.7	Overview of seat heating elements	523
3.8	Removing and installing seat heating element	525
3.9	Overview of backrest heating element	525
3.10	Removing and installing backrest heating element	527
3.11	Removing and installing cover and padding for head restraint with slide-in locking mechanism	527
3.12	Removing and installing head restraint guides	527
4	Covers and padding for sports seats	528
4.1	Removing and installing cover and padding for seat cushion extension (seat depth adjustment)	528
4.2	Removing and installing seat heating element	528
5	Covers and padding for 2nd row of seats - individual seat	530
5.1	Cover and padding for seat pan	530
5.2	Removing and installing seat pan cover and padding	531
5.3	Cover and padding for backrest	533
5.4	Removing and installing backrest cover and padding	534
5.5	Removing and installing seat heating element	536
5.6	Removing and installing backrest heating element	537
5.7	Removing and installing head restraint cover and padding	537
6	Covers and padding for 2nd row of seats - 2/3 seat bench (without centre seat)	539
6.1	Cover and padding for seat pan	539
6.2	Removing and installing seat pan cover and padding	540
6.3	Cover and padding for backrest	542
6.4	Removing and installing backrest cover and padding	543
6.5	Removing and installing seat heating element	545
6.6	Removing and installing backrest heating element	545



6.7	Removing and installing head restraint cover and padding	546
7	Covers and padding for 2nd row of seats - centre seat	547
7.1	Backrest of centre seat	547
7.2	Removing and installing centre seat backrest	548
7.3	Components of backrest of centre seat	549
7.4	Removing and installing head restraint guides	550
7.5	Removing and installing backrest cover and padding	550
7.6	Removing and installing release mechanism	552
7.7	Removing and installing locking mechanism	552
7.8	Removing and installing head restraint cover and padding	553
8	Covers and padding for 3rd row of seats	554
8.1	Cover and padding for seat pan	554
8.2	Removing and installing seat pan cover and padding	555
8.3	Cover and padding for backrest	557
8.4	Removing and installing backrest cover and padding	557
8.5	Removing and installing head restraint cover and padding	559
76	Gas, water, electricity	561
1	Servicing refrigerator box	561
1.1	Exploded view of refrigerator box	561
1.2	Removing and installing lid for refrigerator box J698	563
1.3	Removing and installing refrigerator box J698	564
1.4	Removing and installing fan	567
1.5	Removing and installing printed circuit	567
1.6	Removing and installing connector mounting	568
1.7	Removing and installing switch for compressor of refrigerator box	568
1.8	Renewing LED for refrigerating capacity display	569
1.9	Removing and installing control unit for compressor of refrigerator box	569