

Contents

00 - Technical data	1
1 Repair instructions	1
1.1 Routing and attachment of pipes, hoses and wiring	1
1.2 Contact corrosion	1
1.3 Bonding surfaces for adhesive strips	1
1.4 Self-locking bolts	1
50 - Body - front	2
1 Body - front	2
1.1 Lock carrier service position	2
1.2 Exploded view - lock carrier with attachments	4
1.3 Removing and installing cowl panel trim	5
1.4 Removing and installing plenum chamber partition panel	6
1.5 Removing and installing wing	7
1.6 Exploded view - noise insulation	9
55 - Bonnet, rear lid	11
1 Bonnet	11
1.1 Removing and installing bonnet	11
1.2 Adjusting bonnet	13
1.3 Removing and installing gas strut	15
1.4 Removing and installing seal for bonnet	16
1.5 Exploded view - cable for bonnet	17
2 Rear lid	21
2.1 Removing and installing rear lid	21
2.2 Adjusting rear lid	22
2.3 Removing and installing rear lid hinge	27
2.4 Removing and installing rear lid control unit J605	30
2.5 Removing and installing gas strut	33
2.6 Removing and installing rear lid lock	34
2.7 Removing and installing handle trim	34
2.8 Removing and installing rear lid seal	35
3 Tank flap	38
3.1 Removing and installing tank flap	38
3.2 Installation position of tank flap unit	40
57 - Front doors, door components, central locking	42
1 Front door	42
1.1 Removing and installing door	42
1.2 Adjusting door	43
1.3 Removing and installing inner door seal	46
1.4 Renewing outer door seal	47
1.5 Removing and installing seal for side member	50
2 Door components	51
2.1 Removing and installing window regulator motor	51
2.2 Removing and installing window guide	51
2.3 Removing and installing window slot trim strip	53
2.4 Removing and installing door handle and door lock	54
2.5 Removing and installing door handle	55
2.6 Removing and installing door lock	57
2.7 Removing and installing striker	59
3 Central locking system	60



3.1	Overview	60
3.2	Removing and installing driver door control unit J386 / front passenger door control unit J387	62
3.3	Removing and installing rear left door control unit J388 / rear right door control unit J389	62
3.4	Removing and installing convenience system central control unit J393	62
3.5	Removing and installing convenience system central control unit 2 J773	63
3.6	Removing and installing interface control unit for vehicle location system J843	64
3.7	Removing tank filler flap locking motor V155 up to vehicle identification number 4L 9-014 900	64
3.8	Removing tank filler flap locking motor V155 from vehicle identification number 4L 9-014 901 onwards	66
58	- Rear doors, door components	67
1	Rear door	67
1.1	Removing and installing door	67
1.2	Adjusting door	68
1.3	Removing and installing inner door seal	71
1.4	Renewing outer door seal	72
2	Door components	76
2.1	Removing and installing window regulator motor	76
2.2	Removing and installing window guide	76
2.3	Removing and installing window slot trim strip	78
2.4	Removing and installing door handle and door lock	79
2.5	Removing and installing door handle	80
2.6	Removing and installing door lock	82
2.7	Removing and installing striker	83
60	- Sunroof	84
1	Sliding sunroof	84
1.1	Exploded view - sliding sunroof	84
1.2	Removing and installing glass panel	88
1.3	Adjusting glass panel	94
1.4	Adaption for motor	95
1.5	Removing and installing wind deflector	95
1.6	Removing and installing sun blind	96
1.7	Removing and installing tilt mechanism with cable	102
1.8	Removing and installing sliding sunroof motor	107
2	Water drain hoses	109
2.1	Overview - water drain hoses	109
2.2	Exploded view - water drain hose (front)	110
2.3	Exploded view - water drain hose (rear)	111
2.4	Cleaning water drain hoses	111
2.5	Removing and installing water drain hose (front)	112
2.6	Installing replacement piece for water drain hose (front)	114
2.7	Removing and installing water drain hose (rear)	116
63	- Bumpers	117
1	Bumper (front)	117
1.1	Removing and installing bumper (front)	117
2	Bumper (rear)	125
2.1	Exploded view - bumper (rear)	125
2.2	Removing and installing bumper (rear)	126
64	- Glazing	134
1	Flush-bonded windows	134

1.1	Removing and installing flush-bonded windows	134
1.2	Materials	136
1.3	Repairing windscreen using windscreen repair kit VAS 6092 and resin, Talon VAS 1993/2	137
1.4	Minimum drying times	138
1.5	Re-sealing windows	138
2	Windscreen	139
2.1	Exploded view - windscreen	139
2.2	Removing and installing rain sensor	140
2.3	Removing and installing windscreen	143
3	Side window	151
3.1	Exploded view - side window	151
3.2	Removing side window	153
3.3	Installing side window	155
4	Rear window	157
4.1	Exploded view - rear window	157
4.2	Removing and installing rear window	157
5	Windows secured by threaded fasteners	166
5.1	Exploded view - front door window and window regulator	166
5.2	Removing and installing door window	167
5.3	Exploded view - rear door window and window regulator	168
5.4	Removing and installing door window	169
66	Exterior equipment	171
1	Strips and panels	171
1.1	Renewing trim strip for front and rear doors	171
1.2	Renewing trim panel for B-pillar on front door	173
1.3	Renewing trim panels for B-pillar and C-pillar on rear door	174
1.4	Removing and installing window slot trim strips	175
1.5	Renewing window slot trim strip	175
1.6	Renewing door handle trim	176
1.7	Removing and installing trim cover for door	177
1.8	Removing and installing trim strip for side window	179
1.9	Renewing outer sill panel trim	181
2	Trim strips and panels for Offroad Style Package	182
2.1	Exploded view - protective strip for bumper	182
2.2	Exploded view - wing and side panel trim	184
2.3	Removing and installing trim cover for door	185
2.4	Exploded view - footboard	188
3	Roof rail	190
3.1	Removing and installing roof rail	190
4	Exterior mirrors	192
4.1	Exploded view - exterior mirror	192
4.2	Removing and installing exterior mirror	192
4.3	Removing and installing mirror housing	194
5	Radiator grille	197
6	Spoilers	198
6.1	Exploded view - spoiler for rear lid	198
6.2	Exploded view - wheel spoiler (front)	199
6.3	Exploded view - wheel spoiler (rear)	200
7	Underbody trim	201
7.1	Removing and installing noise insulation	201
7.2	Exploded view - noise insulation for Offroad Style Package	203
7.3	Exploded view - underbody trim	204



7.4	Exploded view - underbody trim for Offroad Style Package	205
7.5	Exploded view - heat shield for rear silencer	207
8	Wheel housing liners	208
8.1	Removing and installing wheel housing liners (front)	208
8.2	Removing and installing wheel housing liners (rear)	208
9	Brand emblems and model badges	210
9.1	Dimensions for emblems	210