

Contents

00 - Technical data	1
1 Safety briefing/employee qualification	1
1.1 Qualification	1
2 Safety precautions	2
2.1 Safety precautions	2
2.2 Safety precautions when working on the cooling system	4
2.3 Safety precautions when using testers and measuring instruments during a road test	4
3 Repair instructions	5
3.1 Important notes	5
3.2 General notes	5
3.3 Information on handling fine dust, aluminium dust and steel dust	6
3.4 Routing and attachment of pipes, hoses and wiring	7
3.5 Contact corrosion	7
3.6 Bonding surfaces for adhesive strips	7
3.7 Self-locking bolts	7
3.8 Identification plates	7
3.9 Impact wrenches	7
3.10 Matching the surface contour	8
3.11 Moulded foam inserts	8
3.12 Aluminium panels	10
3.13 Extra-high-strength body panels	11
3.14 Matching the surface contour	13
3.15 Bonded joints	14
4 Vehicle identification data	17
4.1 Vehicle data sticker	17
5 Body panel gaps/shut lines	19
5.1 Body - front and centre	19
5.2 Body - rear	20
6 Body dimensions	21
6.1 Floor group, front	21
6.2 Floor group, centre	22
6.3 Floor group, rear	23
6.4 Body - front	24
6.5 Body - centre	26
6.6 Body - rear	28
7 Overview of rivets and tools	30
7.1 Overview of rivets used for repair measures	34
7.2 Renewing studs	35
7.3 Thread repair for M6 pop rivet nut	36
7.4 Inserting pop rivet bolts WHT 005 180	36
8 Extraction systems for steel/aluminium body repair station ("multi-material-mix" workplace)	37
9 Using edge milling unit -VAS 882 005-	39
9.1 General information	39
9.2 Assembling unit/changing milling tool	42
9.3 Separating flanged edges	52
9.4 Separating panels at corners and along surfaces	58
9.5 Separating outer edges	61
9.6 Roof - Renewal	64
9.7 Separating laser weld seams using round head milling unit	66
9.8 Aluminium panels	68



10	Processing body structure adhesive D 180 004 M2	71
10.1	Preparing bonding surfaces	72
11	Tools	86
12	Straightening jig	90
12.1	Procedure for repairing structural body damage on Audi vehicles	90
12.2	Setting up straightening jig	91
12.3	Portal gauge	101
50	- Body - front	104
1	Safety precautions	104
2	Wing mounting flange (bolted component) - Renewal	105
2.1	Tools	105
2.2	Procedure	106
3	Wing mounting flange - Renewal	110
3.1	Tools	110
3.2	Procedure	111
4	Front longitudinal member - Renewal	115
4.1	Tools	115
4.2	Procedure	116
5	Upper longitudinal member (front section) - Renewal	123
5.1	Tools	123
5.2	Procedure	124
6	Impact damper plate - Renewal	127
6.1	Tools	127
6.2	Procedure	127
7	Front suspension strut mounting - Renewal	130
7.1	Tools	130
7.2	Procedure	130
8	Front longitudinal member - Partial renewal	135
8.1	Tools	135
8.2	Procedure	135
51	- Body - centre	138
1	Safety precautions	138
2	Permitted separating cuts on complete side frame	139
3	Roof - Renewal	140
3.1	Tools	140
3.2	Procedure	141
4	Roof cross member (front) - Renewal	155
4.1	Tools	155
4.2	Procedure	156
5	Roof cross member (rear) - Renewal	160
5.1	Tools	160
5.2	Procedure	160
6	Outer A-pillar - Renewal	166
6.1	Tools	166
6.2	Procedure	167
7	A-pillar reinforcement - Renewal	171
7.1	Tools	171
7.2	Procedure	172
8	Outer B-pillar - Renewal	176
8.1	Tools	176
8.2	Procedure	177

9	Inner B-pillar - Renewal	181
9.1	Tools	181
9.2	Procedure	182
10	Outer side member - Renewal	186
10.1	Tools	186
10.2	Procedure	187
11	Inner side member - Renewal	191
11.1	Tools	191
11.2	Procedure	192
12	Side member reinforcement (reinforcement tube) - Renewal	195
12.1	Tools	195
12.2	Procedure	195
13	Front floor panel - Partial renewal	199
13.1	Tools	199
13.2	Procedure	199
53 - Body - rear		204
1	Safety precautions	204
2	Permitted separating cuts on complete side frame	205
3	Outer cross panel - Renewal	206
3.1	Tools	206
3.2	Procedure	207
4	Rear cross panel - Renewal	211
4.1	Tools	211
4.2	Procedure	212
5	Tail light mounting - Renewal	216
5.1	Tools	216
5.2	Procedure	217
6	Rear longitudinal member - Partial renewal	221
6.1	Tools	221
6.2	Procedure	222
7	Side panel - Renewal	227
7.1	Tools	227
7.2	Procedure	228
8	Outer wheel housing liner - Renewal	234
8.1	Tools	234
8.2	Procedure	235
9	Spare wheel well - Renewal	239
9.1	Tools	239
9.2	Procedure	240