

## Contents

<b>80</b>	<b>Heating</b> .....	<b>1</b>
1	<b>Servicing heater</b> .....	1
<b>87</b>	<b>Air conditioning system</b> .....	<b>2</b>
1	<b>Safety measures for working on vehicles with air conditioning and for handling refrigerant</b> .....	<b>2</b>
1.1	Safety measures .....	2
1.2	Safety measures for vehicles with start/stop system .....	3
1.3	Discharging refrigerant circuit .....	3
1.4	Working on refrigerant circuit .....	4
1.5	Paint repairs on vehicles with air conditioning system .....	4
1.6	Further information .....	4
2	<b>Notes on general repairs</b> .....	<b>6</b>
2.1	Note on vehicles with and without auxiliary/supplementary heater (poor heat output) .....	6
2.2	Notes on self-diagnosis and electrical check of air conditioner .....	9
2.3	Notes on vehicles with a start/stop system .....	10
3	<b>Servicing refrigerant circuit</b> .....	<b>12</b>
3.1	Overview of components .....	12
3.2	Removing and installing high-pressure sender G65 for air conditioning system .....	18
3.3	Checking pressure signal from high-pressure sender G65 .....	19
3.4	Operation and signal utilisation of refrigerant temperature sender G454 .....	22
3.5	O-rings for refrigerant circuit .....	25
3.6	Detaching and attaching compressor at bracket .....	26
3.7	Checking cut-in signal for air conditioner compressor regulating valve N280 .....	29
4	<b>Renewing compressor pulley</b> .....	<b>33</b>
4.1	Renewing compressor pulley (version "1") .....	33
4.2	Detaching and attaching pulley at compressor (version "1") .....	35
4.3	Renewing compressor pulley (version "2") .....	38
4.4	Detaching and attaching pulley at compressor (version "2") .....	40
4.5	Exploded view of air conditioner compressor pulley - version "3" .....	41
4.6	Removing and installing pulley on air conditioner compressor - version "3" .....	43
5	<b>Controlling and regulating components of air conditioner (not located in passenger compartment)</b> .....	<b>46</b>
5.1	Components of air conditioner not located in passenger compartment .....	46
5.2	Removing and installing fresh-air intake duct of air conditioner .....	53
5.3	Removing and installing air quality sensor G238 .....	54
5.4	Operation of air quality sensor G238 .....	55
5.5	Checking air quality sensor G238 .....	57
5.6	Checking ventilation frame .....	61
5.7	Checking and cleaning plenum chamber water drain .....	61
6	<b>Incorporation of air conditioner into vehicle's coolant circuit</b> .....	<b>63</b>
6.1	Incorporation on vehicles without fuel-driven supplementary heater .....	63
6.2	Incorporation on vehicles with fuel-driven supplementary heater .....	66
6.3	Removing and installing coolant circulation pump V50 .....	69
6.4	Removing and installing coolant shut-off valve N82 .....	72
7	<b>Bleeding coolant circuit</b> .....	<b>74</b>
7.1	Bleeding part of air conditioner coolant circuit .....	74
8	<b>Checking electrical components actuated by air conditioning system</b> .....	<b>76</b>
8.1	Checking heated rear window Z1 .....	76
8.2	Checking seat heating and seat ventilation .....	77
8.3	Checking auxiliary air heater element Z35 .....	81
8.4	Checking fuel-driven supplementary heater .....	86

<b>9</b>	<b>Controlling and regulating components of air conditioner (in passenger compartment) . .</b>	<b>87</b>
9.1	Air conditioner components located at front in passenger compartment (viewed from left side) . . . . .	89
9.2	Removing and installing sunlight penetration photosensor G107 . . . . .	96
9.3	Removing and installing temperature sensor blower V42 . . . . .	96
9.4	Notes on and removing and installing front operating and display unit, Climatronic control unit J255 . . . . .	97
9.5	Removing and installing left footwell vent temperature sender G261 . . . . .	103
9.6	Removing and installing left footwell flap control motor V108 (with "Deluxe" type) . . . . .	104
9.7	Removing and installing left temperature flap control motor V158 ("deluxe" version) . . . . .	105
9.8	Removing and installing retaining plate with left footwell flap control motor V108 and left temperature flap control motor V158 . . . . .	106
9.9	Detaching and attaching covers (left-side) at heat exchanger with air conditioning unit (front) installed . . . . .	108
9.10	Preparing adapter cables for activation of control motor . . . . .	109
9.11	Removing and installing defroster flap control motor V107 . . . . .	110
9.12	Removing and installing left centre vent control motor V110 ("deluxe" version only) . . . . .	112
9.13	Removing and installing left side vent control motor V299 . . . . .	114
9.14	Removing and installing retaining plate with defroster flap control motor V107 , left side vent control motor V299 (and left centre vent control motor V110 ) . . . . .	117
9.15	Removing and installing front left chest vent temperature sensor G385 . . . . .	120
9.16	Removing and installing indirect ventilation flap control motor V213 . . . . .	121
9.17	Removing and installing front heat exchanger with air conditioning unit fitted . . . . .	122
9.18	Removing and installing auxiliary air heater element Z35 . . . . .	128
9.19	Front air conditioner components located in passenger compartment (viewed from right side) . . . . .	131
9.20	Removing and installing right temperature flap control motor V159 (or left temperature flap control motor V158 ) . . . . .	138
9.21	Removing and installing right footwell flap control motor V109 (or left footwell flap control motor V108 ) . . . . .	139
9.22	Removing and installing retaining plate with control motors V158 ( V159 ) and V109 ( V108 ) . . . . .	140
9.23	Detaching and attaching covers (right-side) at heat exchanger with air conditioning unit (front) installed . . . . .	142
9.24	Removing and installing right centre vent control motor V111 . . . . .	143
9.25	Removing and installing right side vent control motor V300 . . . . .	144
9.26	Removing and installing retaining plate with control motors V111 and V300 . . . . .	145
9.27	Removing and installing front right chest vent temperature sensor G386 . . . . .	148
9.28	Removing and installing evaporator output temperature sender G263 . . . . .	148
9.29	Removing and installing fresh air blower V2 . . . . .	149
9.30	Removing and installing fresh air blower control unit J126 . . . . .	150
9.31	Removing and installing air recirculation flap control motor V113 . . . . .	152
9.32	Removing and installing fresh air intake duct temperature sensor G89 . . . . .	153
9.33	Removing and installing right footwell vent temperature sender G262 . . . . .	154
9.34	Removing and installing dust and pollen filter . . . . .	155
9.35	Dust and pollen filter with activated charcoal filter insert . . . . .	156
9.36	Checking, removing and installing condensation drain hose (front) . . . . .	157
9.37	Components of air conditioner (rear) . . . . .	161
9.38	Moving air conditioning unit (rear) to service position . . . . .	165
9.39	Removing and installing heat exchanger with air conditioning unit (rear) installed . . . . .	167
9.40	Removing and installing rear fresh air blower V80 . . . . .	169
9.41	Removing and installing rear fresh air blower control unit J391 . . . . .	170
9.42	Removing and installing rear right temperature flap control motor V314 . . . . .	171
9.43	Removing and installing rear right air quantity flap control motor V240 . . . . .	171
9.44	Removing and installing rear left air quantity flap control motor V239 . . . . .	172
9.45	Removing and installing rear left temperature flap control motor V313 . . . . .	173
9.46	Removing and installing rear right vent temperature sender G406 / rear left vent temperature sender G405 . . . . .	174

9.47	Removing and installing rear Climatronic operating and display unit E265	175
9.48	Removing and installing vent in rear centre console	176
9.49	Removing and installing left B-pillar and footwell shut-off flap control motor V212	177
9.50	Removing and installing rear left chest vent control motor V315	177
9.51	Removing and installing rear right chest vent control motor V316	179
9.52	Removing and installing right B-pillar and footwell shut-off flap control motor V211	180
9.53	Checking, removing and installing condensation drain (rear)	181
<b>10</b>	<b>Cleaning air conditioner evaporator</b>	<b>183</b>
10.1	Possible cause of build-up of odours	183
10.2	Cleaning evaporator of front (and rear) air conditioner with ultrasonic A/C cleaner VAS 6189A	185
<b>11</b>	<b>Incorporation of air conditioner (rear) into refrigerant and coolant circuit</b>	<b>188</b>
11.1	Incorporation of air conditioner (rear) into vehicle's refrigerant and coolant circuit	188
<b>12</b>	<b>Air ducts in and to air conditioning units (front and rear)</b>	<b>190</b>
12.1	Air routing to and from air conditioning unit (front)	190
12.2	Air routing in air conditioning unit (front)	191
12.3	Dash panel vents and air ducts in passenger compartment at front (and rear)	193
12.4	Routing of air flow in air conditioning unit (rear)	196
12.5	Rear air ducts and vents (vehicles with rear air conditioning unit)	197
<b>13</b>	<b>Checking cooling output of air conditioner</b>	<b>199</b>
13.1	Checking cooling output of air conditioner (front)	199
13.2	Checking cooling output of air conditioner (rear)	211
<b>14</b>	<b>Checking heating output of air conditioner</b>	<b>215</b>
14.1	Checking operation of coolant circulation pump V50 ( coolant pump V36 )	217
<b>15</b>	<b>Servicing refrigerant circuit</b>	<b>223</b>
15.1	Servicing refrigerant circuit	224
15.2	Removing and installing refrigerant lines at compressor	231
15.3	Removing and installing compressor	233
15.4	Removing and installing refrigerant temperature sender G454	235
15.5	Detaching and attaching refrigerant lines at condenser	236
15.6	Removing and installing condenser	238
15.7	Unfastening and assembling connection points in refrigerant lines	242
15.8	Removing and installing dryer cartridge	244
15.9	Removing and installing expansion valve (front)	249
15.10	Detaching and attaching refrigerant lines at expansion valve (rear)	252
15.11	Removing and installing rear expansion valve	255
<b>16</b>	<b>Removing and installing compressor (vehicles with 8-cyl. engine and 12-cyl. TDI engine)</b>	<b>257</b>
16.1	Removing and installing compressor (vehicles with 8-cyl. TDI engine)	257
16.2	Removing and installing compressor (vehicles with 12-cyl. TDI engine)	260
16.3	Removing and installing compressor (on vehicles with 8-cyl. FSI engine)	263
16.4	Checking and renewing compressor drive unit (vehicles with 8-cyl. FSI engine)	269
16.5	Slackening and tightening compressor drive shaft (vehicles with 8-cyl. FSI engine)	270
16.6	Removing and installing compressor drive shaft (on vehicles with 8-cyl. FSI engine)	271
16.7	Removing and installing drive plate with overload protection device (on vehicles with 8-cyl. FSI engine)	272
16.8	Checking concentricity of drive plate with overload protection device and adjusting (on vehicles with 8-cyl. FSI engine)	272
16.9	Detaching drive plate from compressor and bolting back on (on vehicles with 8-cyl. FSI engine)	272
16.10	Removing and installing drive plate with roller bearing (on vehicles with 8-cyl. FSI engine)	273
<b>17</b>	<b>Removing and installing air conditioning unit (front)</b>	<b>275</b>
17.1	Removing and installing air conditioning unit (front)	275
17.2	Removing and installing heat exchanger with air conditioning unit (front) removed	281
17.3	Removing and installing evaporator of air conditioning unit (front)	284



<b>18</b>	<b>Dismantling and assembling air conditioning unit (front)</b> .....	<b>285</b>
18.1	Detaching and attaching add-on components of air conditioning unit (front) .....	285
18.2	Dismantling and assembling air conditioning unit (front) .....	290
18.3	Dismantling and assembling air distribution housing of air conditioning unit (front) .....	293
18.4	Dismantling and assembling evaporator housing of air conditioning unit (front) .....	293
<b>19</b>	<b>Air conditioning unit (rear)</b> .....	<b>297</b>
19.1	Removing and installing evaporator (rear )with air conditioning unit installed .....	297
19.2	Removing and installing leadthrough for coolant hoses and refrigerant lines to wheel housing (rear) .....	298
19.3	Removing and installing air conditioning unit (rear) .....	301
<b>20</b>	<b>Dismantling and assembling air conditioning unit (rear)</b> .....	<b>303</b>
20.1	Detaching and attaching add-on components of air conditioning unit (rear) .....	303
20.2	Dismantling and assembling air conditioning unit (rear) .....	305
<b>21</b>	<b>Starting up air conditioner after charging refrigerant circuit</b> .....	<b>308</b>
<b>22</b>	<b>Refrigerant and refrigeration oil capacities</b> .....	<b>310</b>