

Contents

00 - Technical data	1
1 Gearbox identification	1
1.1 Location on gearbox	1
1.2 Code letters, allocation, transmission ratios, capacities	1
2 Transmission layout	3
3 Calculating ratio "i"	5
4 Repair instructions	6
4.1 General repair instructions	6
30 - Clutch	9
1 Servicing clutch mechanism	9
1.1 Overview	9
1.2 Pedal cluster - exploded view	10
1.3 Removing and installing, adjusting clutch pedal switch F36	11
1.4 Removing and installing clutch pedal switch F194 (interlock switch)	13
1.5 Removing and installing over-centre spring	14
1.6 Removing and installing clutch pedal	14
1.7 Hydraulic system (LHD vehicles) - exploded view	15
1.8 Hydraulics (RHD vehicles) - exploded view	17
1.9 Removing and installing clutch master cylinder	19
1.10 Bleeding clutch system	20
2 Servicing clutch release mechanism	22
2.1 Removing and installing clutch slave cylinder	23
3 Servicing clutch	25
3.1 Exploded view - clutch with SAC pressure plate	25
3.2 Removing and installing clutch with SAC pressure plate	27
3.3 Checking adjuster ring of self-adjusting pressure plate and resetting if necessary (new clutches only)	29
34 - Controls, housing	32
1 Servicing selector mechanism	32
1.1 Installation position of selector mechanism	32
1.2 I - Removing and installing gear knob and boot	34
1.3 II - Servicing gear lever and selector housing	35
1.4 III - Removing and installing selector cables - exploded view	36
1.5 Removing and installing selector mechanism	38
1.6 Adjusting selector mechanism	41
2 Removing and installing gearbox	47
2.1 Removing gearbox - vehicles with 6-cylinder fuel injection engine	47
2.2 Installing gearbox	54
2.3 Transporting gearbox	56
3 Checking gearbox oil	58
4 Gearbox	59
4.1 Exploded view - components on gearbox	59
4.2 Securing to engine and gearbox support	61
4.3 Renewing locking pin	62
5 Exploded view - selector unit	63
5.1 Removing and installing selector unit	63
6 Renewing oil seals and cover	66
6.1 Renewing input shaft oil seal	66
6.2 Renewing oil seal for output shaft	68



6.3	Renewing oil seals for rotary gear and gate selector shafts	69
6.4	Renewing sealing cap for layshaft	71
35 - Gears, shafts	73
1	Input and output shafts	73