

Contents

00	Technical data	1
1	Gearbox identification	1
2	Notes on 6-speed automatic gearbox 0BQ	2
3	Transmission layout	4
4	Code letters, gearbox allocation, ratios, equipment	5
5	Capacities	6
6	Safety precautions	7
7	Notes on tow-starting and towing	8
8	Repair instructions	9
9	Rules for cleanliness when working on the gearbox	12
10	Contact corrosion!	13
32	Torque converter	14
1	Exploded view - torque converter	14
1.1	Identification of torque converter	15
1.2	Removing and installing torque converter	15
1.3	Renewing oil seal for torque converter	17
1.4	Draining torque converter	18
1.5	Checking torque converter	19
37	Controls, housing	20
1	Electrical/electronic components and fitting locations	20
2	Exploded view - selector mechanism	23
2.1	Checking selector mechanism	24
2.2	Manual release for selector mechanism	27
2.3	Removing and installing selector lever sensors control unit J587 and tiptronic switch F189	27
2.4	Removing and installing shift unit	28
2.5	Removing and installing cover for shift unit	33
3	Exploded view - shift unit	35
3.1	Removing and installing gearshift gate	36
3.2	Removing and installing locking lever for selector position "P"	40
3.3	Removing and installing selector lever lock solenoid N110	41
3.4	Removing and installing gear selector position P switch F305	45
4	Exploded view - selector lever handle, selector lever position display Y26	48
4.1	Removing and installing selector lever handle	48
4.2	Detaching selector lever boot from selector lever handle	51
4.3	Removing and installing selector lever position display Y26	51
5	Selector lever cable - exploded view	52
5.1	Removing and installing selector lever cable	53
5.2	Adjusting selector lever cable	54
6	Removing and installing gearbox selector lever	57
7	Removing and installing gearbox	59
8	Transporting gearbox	62
9	Exploded view - drain and inspection plugs in gearbox	63
9.1	Checking and topping up ATF level	64
9.2	Draining ATF and filling up after repairs	68
10	Exploded view - ATF pipes, ATF thermostat and ATF coolers	72
10.1	Removing and installing cooler for engine oil and ATF	75
10.2	Removing and installing water cooler for ATF	75



10.3	Removing and installing ATF cooler (rear)	76
10.4	Cleaning ATF pipes and ATF coolers	79
38	Gears, control	81
1	Exploded view - oil pan, mechatronic unit	81
1.1	Removing and installing ATF oil pan	82
1.2	Removing and installing ATF filter	84
1.3	Removing and installing mechatronic unit	85
2	Exploded view - renewing oil seals	88
2.1	Renewing oil seal for output shaft	88
2.2	Renewing oil seal for selector shaft	89