

Contents

00 - Technical data	1
1 Gearbox identification	1
2 Notes on 8-speed automatic gearbox 0C8	2
3 Transmission layout	3
4 Code letters, gearbox allocation, transmission ratios, equipment	4
5 Capacities	5
6 Safety precautions	6
6.1 When working on the automatic gearbox	6
6.2 When working on vehicles with start/stop system	6
6.3 When using test equipment while road-testing the vehicle	7
7 Notes on tow-starting and towing	8
8 Repair instructions	9
8.1 Contact corrosion	9
8.2 General repair instructions	9
8.3 Rules for cleanliness when working on the gearbox	12
8.4 Gearbox adaption	12
32 - Torque converter	14
1 Exploded view - torque converter	14
1.1 Draining torque converter	15
1.2 Renewing oil seal for torque converter	16
1.3 Checking torque converter	17
1.4 Installing torque converter	17
37 - Controls, housing	20
1 Electrical/electronic components and fitting locations	20
1.1 Removing and installing automatic gearbox control unit J217	23
1.2 Removing and installing control unit for auxiliary hydraulic pump J922	25
2 Exploded view - selector mechanism	26
2.1 Checking selector mechanism	27
2.2 Operating manual release for selector mechanism	29
3 Selector lever handle	31
3.1 Exploded view - selector lever handle	31
3.2 Removing and installing selector lever handle	32
3.3 Detaching selector lever boot from selector lever handle	38
3.4 Removing and installing selector lever position display Y26	39
3.5 Removing and installing selector lever sensors control unit J587 and tiptronic switch F189	39
4 Exploded view - shift unit	41
4.1 Removing and installing shift unit	42
4.2 Removing and installing base for shift unit	46
4.3 Removing and installing gearshift gate	47
4.4 Removing and installing locking lever for selector position "P"	51
4.5 Removing and installing selector lever lock solenoid N110	52
4.6 Removing and installing gear selector position P switch F305	56
5 Exploded view - selector lever cable	59
5.1 Removing and installing selector lever cable	60
5.2 Adjusting selector lever cable	63
6 Removing and installing gearbox	66
6.1 Removing gearbox - vehicles with 6-cylinder 3.0 ltr. TFSI engine	66
6.2 Removing gearbox - vehicles with 6-cylinder 3.0 ltr. TDI engine	73



6.3	Installing gearbox - vehicles with 6-cylinder engine	81
6.4	Removing and installing gearbox - vehicles with 8-cylinder 4.2 ltr. TDI engine	84
7	Transporting gearbox	86
8	ATF level in gearbox	87
8.1	Checking and topping up ATF level	87
8.2	Draining ATF	93
8.3	Filling up ATF	95
9	ATF circuit	99
9.1	Exploded view - ATF lines, ATF cooler and ATF preheater	99
9.2	Removing and installing ATF preheater	104
9.3	Removing and installing ATF lines and ATF cooler	108
9.4	Modifying ATF lines for ATF cooler with clamp connections	111
9.5	Cleaning ATF lines and ATF cooler	113
10	Renewing oil seal for output shaft	115
38 - Gears, control		117
1	Oil pan, ATF strainer and valve body	117
1.1	Removing and installing oil pan	117
1.2	Removing and installing ATF strainer	118
1.3	Removing and installing valve body	119
1.4	Removing and installing gearbox output speed sender G195	120
1.5	Removing and installing auxiliary hydraulic pump 2 for gearbox oil V476 - vehicles with start/stop system	120
2	Exploded view - gearbox selector lever and multifunction switch F125	122
2.1	Removing and installing gearbox selector lever	123
2.2	Removing, installing and adjusting multifunction switch F125	124
2.3	Renewing oil seal for selector shaft (left-side)	128
2.4	Renewing oil seal for selector shaft (right-side)	129