

## Contents

<b>24 - Mixture preparation - injection</b> .....	<b>1</b>
1 <b>Servicing Motronic injection system</b> .....	1
1.1     Safety precautions .....	1
1.2     Rules for cleanliness when working on the injection system .....	2
1.3     Procedure before opening high-pressure section of injection system .....	2
1.4     Test data .....	5
1.5     Overview of fitting locations .....	5
1.6     Air cleaner - exploded view .....	15
1.7     Removing and installing air filter element .....	16
1.8     Removing and installing air cleaner housing .....	17
1.9     Removing and installing intake air temperature sender G42 and air mass meter G70 .....	20
1.10    Intake manifold - exploded view .....	20
1.11    Removing and installing throttle valve module J338 .....	22
1.12    Checking vacuum unit for intake manifold flaps .....	22
1.13    Removing and installing vacuum unit for intake manifold flaps .....	24
1.14    Checking for leaks in vacuum reservoir in intake manifold .....	24
1.15    Removing and installing intake manifold .....	25
1.16    Fuel rail and injectors - exploded view .....	28
1.17    Removing and installing fuel rail and injectors for cylinders 2, 4, 6 .....	32
1.18    Removing and installing fuel rail and injectors for cylinders 1, 3, 5 .....	35
1.19    Renewing combustion chamber ring seal and support ring for injector .....	38
1.20    High-pressure pump - exploded view .....	40
1.21    Checking fuel pressure and residual pressure (up to high-pressure pump) .....	42
1.22    Removing and installing high-pressure pump .....	45
1.23    Wiring and component check with test box V.A.G 1598/42 .....	46
1.24    Removing and installing engine control unit J623 .....	48
1.25    Removing and installing Lambda probes .....	51
<b>28 - Ignition system</b> .....	<b>53</b>
1 <b>Servicing ignition system</b> .....	53
1.1     Safety precautions .....	53
1.2     Test data .....	53
1.3     Ignition system - exploded view .....	54
1.4     Removing and installing ignition coils .....	55
1.5     Removing and installing knock sensors G61 / G66 .....	57
1.6     Removing and installing engine speed sender G28 .....	58