

Contents

24 - Mixture preparation - injection	1
1 Servicing Motronic injection system	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety precautions when working on vehicles with start/stop system	1
1.3 Safety precautions when working on the fuel system	2
1.4 Important: Required procedure prior to opening high-pressure injection system	2
1.5 Checking vacuum system	4
1.6 Technical data	4
1.7 Overview of fitting locations - injection system	4
1.8 Air cleaner - exploded view	15
1.9 Removing and installing air filter element	16
1.10 Removing and installing air cleaner housing	18
1.11 Removing and installing air mass meter G70	20
1.12 Intake manifold (magnesium) - exploded view	20
1.13 Intake manifold (plastic - gradual introduction in model year 2009) - exploded view	38
1.14 Checking fuel pressure and residual pressure (up to high-pressure pump)	55
1.15 High-pressure pump - exploded view	58
1.16 Removing and installing high-pressure pump	60
1.17 Wiring and component check with test box V.A.G 1598/42	62
1.18 Removing and installing engine control unit J623	63
1.19 Removing and installing Lambda probes	66
28 - Ignition system	72
1 Servicing ignition system	72
1.1 Technical data	72
1.2 Removing and installing ignition coils	72