

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions	3
3.1 Working on the fuel system	3
3.2 Procedure before opening high-pressure section of injection system	3
3.3 Working on the cooling system	4
3.4 Working on vehicles with start/stop system	4
3.5 Using testers and measuring instruments during a road test	4
3.6 Working on the exhaust system	5
4 General repair instructions	6
4.1 Rules for cleanliness when working on fuel supply system and injection system	6
4.2 Checking fuel system for leaks	6
4.3 Foreign particles in engine	6
4.4 Contact corrosion	6
4.5 Checking vacuum system	7
4.6 Routing and attachment of pipes, hoses and wiring	7
10 - Removing and installing engine	8
1 Removing engine	8
2 Separating engine and gearbox	25
3 Securing engine to engine and gearbox support	33
4 Installing engine	36
5 Assembly mountings	42
5.1 Exploded view - assembly mountings	42
5.2 Removing and installing engine mountings	43
13 - Crankshaft group	48
1 Cylinder block (pulley end)	48
1.1 Poly V-belt drive for alternator - exploded view	48
1.2 Removing and installing poly V-belt	49
1.3 Removing and installing vibration damper	50
1.4 Renewing crankshaft oil seal (pulley end)	51
2 Cylinder block (gearbox end)	53
2.1 Exploded view - drive plate	53
2.2 Removing and installing drive plate	53
2.3 Renewing crankshaft oil seal (gearbox end)	54
3 Crankshaft	56
3.1 Exploded view - crankshaft	56
3.2 Allocation of main bearing shells for new crankshafts	59
3.3 Allocation of main bearing shells on used and machined crankshafts	60
3.4 Bearing bush for torque converter	61
3.5 Crankshaft dimensions	61
3.6 Measuring axial clearance	61
3.7 Measuring radial clearance	62
4 Pistons and conrods	63
4.1 Exploded view - pistons and conrods	63
4.2 Piston and cylinder dimensions	66
4.3 Measuring radial clearance of conrods	66
15 - Cylinder head, valve gear	67

1	Chain drive	67
1.1	Exploded view - timing chain covers	67
1.2	Removing and installing timing chain covers (left and right)	68
1.3	Removing and installing timing chain cover (bottom)	72
1.4	Camshaft timing chains - exploded view	76
1.5	Removing camshaft timing chains from camshafts	79
1.6	Removing and installing camshaft timing chains	87
1.7	Exploded view - drive chain for valve gear	89
1.8	Removing and installing drive chain for valve gear	91
1.9	Exploded view - drive chain for auxiliary drives	92
1.10	Removing and installing drive chain for auxiliary drives	93
1.11	Exploded view - auxiliary drives	94
1.12	Renewing oil seals for auxiliary drives	95
1.13	Removing and installing spur gear drive	98
2	Cylinder head	102
2.1	Exploded view - cylinder head	102
2.2	Removing and installing cylinder head cover (left-side)	104
2.3	Removing and installing cylinder head cover (right-side)	106
2.4	Removing and installing cylinder head	108
2.5	Checking compression	114
3	Valve gear	118
3.1	Exploded view - valve gear	118
3.2	Checking axial clearance of camshafts	121
3.3	Removing and installing camshafts	121
3.4	Checking hydraulic valve compensation elements	129
3.5	Renewing valve stem oil seals with cylinder head installed	130
3.6	Renewing valve stem oil seals with cylinder head removed	134
3.7	Valve dimensions	138
3.8	Checking valve guides	138
3.9	Checking valves	139
17 - Lubrication		140
1	Oil pump, sump (bottom section), sump (top section)	140
1.1	Exploded view - oil pump, sump (bottom section)	140
1.2	Removing and installing oil level and oil temperature sender G266	143
1.3	Removing and installing sump (bottom section)	143
1.4	Removing and installing oil pump	149
1.5	Exploded view - sump (top section)	152
1.6	Removing and installing sump (top section)	153
1.7	Exploded view - oil retention valve and spray nozzle valve	157
1.8	Removing and installing oil retention valve and spray nozzle valve	158
2	Oil filter housing, oil cooler, oil pressure switch	160
2.1	Exploded view - oil filter housing	160
2.2	Removing and installing oil filter housing	161
2.3	Removing and installing oil cooler	161
2.4	Removing and installing oil pressure switch F1	162
2.5	Checking oil pressure and oil pressure switch F1	163
2.6	Engine oil	164
2.7	Checking engine oil level	164
19 - Cooling		165
1	Cooling system	165
1.1	Connection diagram - coolant hoses	165
1.2	Draining and filling cooling system	167
2	Coolant pump, thermostat, coolant pipes	174

2.1	Exploded view - coolant pump and thermostat	174
2.2	Removing and installing coolant pump	175
2.3	Removing and installing map-controlled engine cooling system thermostat F265	176
2.4	Thermostat opening values	177
2.5	Exploded view - coolant pipes	177
2.6	Removing and installing coolant temperature sender G62	179
2.7	Removing and installing coolant pipe (front)	182
2.8	Removing and installing coolant pipe (rear)	183
2.9	Removing and installing coolant pipe (left-side)	188
2.10	Removing and installing coolant pipes (rear left)	195
2.11	Removing and installing coolant pipe (right-side)	197
2.12	Removing and installing coolant pipe (rear right)	199
3	Radiator, radiator cowl and radiator fans	205
3.1	Exploded view - radiator	205
3.2	Removing and installing radiator	206
3.3	Exploded view - radiator cowl and radiator fans	210
3.4	Removing and installing radiator cowl	211
3.5	Removing and installing radiator fan	213
3.6	Checking cooling system for leaks	213
26 - Exhaust system	216
1	Silencers	216
1.1	Exhaust system - exploded view	216
1.2	Separating centre and rear silencers	220
1.3	Renewing tailpipes	222
1.4	Removing and installing starter catalytic converter (left-side)	222
1.5	Removing and installing starter catalytic converter (right-side)	227
1.6	Removing and installing main catalytic converter (left-side)	232
1.7	Removing and installing main catalytic converter (right-side)	233
1.8	Stress-free alignment of exhaust system	234
1.9	Checking exhaust system for leaks	234
2	Exhaust manifolds	235
2.1	Exploded view - exhaust manifold	235
2.2	Removing and installing exhaust manifold (left-side)	236
2.3	Removing and installing exhaust manifold (right-side)	237
3	Secondary air system	239
4	Secondary air system - country-specific version 1	240
4.1	Exploded view - secondary air system	240
4.2	Removing and installing secondary air pump	241
4.3	Checking combination valve for secondary air system for proper operation and leakage ..	242
4.4	Removing and installing combination valve for secondary air system	242
5	Secondary air system - country-specific version 2	243
5.1	Exploded view - secondary air system	243
5.2	Removing and installing secondary air pump	245
5.3	Checking combination valves for secondary air system for correct operation and leakage ..	245
5.4	Removing and installing combination valve for secondary air system (left-side)	247
5.5	Removing and installing combination valve for secondary air system (right-side)	247
5.6	Removing and installing sender 1 for secondary air pressure G609	248