

Contents

23 - Mixture preparation - injection	1
1 Safety precautions and rules for cleanliness	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety precautions when working on the fuel system	2
1.3 Safety precautions when working on the injection and glow plug system	3
1.4 Checking vacuum system	3
2 Injection system	5
2.1 Overview of fitting locations - vehicles with engine codes BUG and BUN	5
2.2 Overview of fitting locations - vehicles with engine codes CASA and CASB	13
2.3 System layout - vehicles with engine codes BUG and BUN	22
2.4 Overview - fuel system, vehicles with engine codes CASA and CASB up to autumn 2009	24
2.5 Overview - fuel system, vehicles with engine codes CASA and CASB from autumn 2009 onwards	27
2.6 Exploded view - fuel system, vehicles with engine codes BUG and BUN	30
2.7 Exploded view - fuel system, vehicles with engine codes CASA and CASB	33
2.8 Exploded view - air cleaner	37
2.9 Removing and installing engine cover panel	38
2.10 Removing and installing air filter element	38
2.11 Removing and installing air cleaner housing	40
2.12 Removing and installing air mass meter G70	41
2.13 Exploded view - intake manifold, vehicles with engine codes BUG and BUN	42
2.14 Removing and installing intake manifold (top section) - vehicles with engine codes BUG and BUN	44
2.15 Removing and installing intake manifold (bottom section, left-side) - vehicles with engine codes BUG and BUN	46
2.16 Removing and installing intake manifold (bottom section, right-side) - vehicles with engine codes BUG and BUN	49
2.17 Exploded view - intake manifold, vehicles with engine codes CASA and CASB	52
2.18 Removing and installing intake manifold (top section) - vehicles with engine codes CASA and CASB	54
2.19 Removing and installing intake manifold (bottom section, left-side) - vehicles with engine codes CASA and CASB	56
2.20 Removing and installing intake manifold (bottom section, right-side) - vehicles with engine codes CASA and CASB	58
2.21 Installing high-pressure pipes	59
2.22 Removing and installing intake manifold flap motor V157 / intake manifold flap 2 motor V275 , performing adaption - vehicles with engine codes BUG and BUN only	62
2.23 Checking injectors	69
2.24 Performing adaption of correction values for injectors	69
2.25 Checking for injectors sticking open	69
2.26 Checking return flow rate of injectors with engine running	72
2.27 Checking return flow rate of injectors at starter cranking speed	75
2.28 Checking pressure retention valve in fuel return line	78
2.29 Checking restrictor in fuel return line	79
2.30 Exploded view - injectors and high-pressure pipes	80
2.31 Removing and installing injectors	82
2.32 Exploded view - toothed belt for high-pressure pump, vehicles with engine codes BUG and BUN	91
2.33 Removing and installing toothed belt for high-pressure pump - vehicles with engine codes BUG and BUN	93
2.34 Exploded view - toothed belt for high-pressure pump, vehicles with engine codes CASA and CASB	96
2.35 Removing and installing toothed belt for high-pressure pump - vehicles with engine codes CASA and CASB	99



2.36	Exploded view - high-pressure pump, vehicles with engine codes BUG and BUN	107
2.37	Removing and installing high-pressure pump - vehicles with engine codes BUG and BUN	109
2.38	Bleeding fuel system after installing high-pressure pump - vehicles with engine codes BUG and BUN	111
2.39	Exploded view - high-pressure pump, vehicles with engine codes CASA and CASB	113
2.40	Removing and installing high-pressure pump - vehicles with engine codes CASA and CASB	116
2.41	Performing first fuel filling after installing high-pressure pump - vehicles with engine codes CASA and CASB	118
2.42	Bleeding fuel system and checking for leaks	119
2.43	Checking fuel pressure regulating valve N276	120
2.44	Removing and installing fuel pressure regulating valve N276	122
2.45	Removing and installing fuel pressure sender G247	125
2.46	Exploded view - Lambda probes and exhaust gas temperature control	127
2.47	Removing and installing Lambda probe G39 with Lambda probe heater Z19	128
2.48	Removing and installing exhaust gas pressure sensor 1 G450	129
3	Engine control unit	130
3.1	Checking wiring and components with test box V.A.G 1598/42 (154-pin)	130
3.2	Renewing engine control unit J623	132
28	Glow plug system	135
1	135
1.1	Exploded view - glow plugs, Hall sender, engine speed sender	135
1.2	Removing and installing glow plugs	136
1.3	Removing and installing engine speed sender G28	138
1.4	Removing and installing Hall sender G40	138