

## Contents

<b>23 - Mixture preparation - injection</b> .....	<b>1</b>
<b>1 Safety precautions and rules for cleanliness</b> .....	<b>1</b>
1.1 Safety precautions when working on the SCR system .....	1
1.2 Adapting learnt value after draining reducing agent or renewing components .....	2
1.3 Safety precautions when working on the cooling system .....	2
1.4 Safety precautions when working on the fuel supply system .....	2
1.5 Safety precautions when working on vehicles with start/stop system .....	4
1.6 Safety precautions when using testers and measuring instruments during a road test .....	4
1.7 Safety precautions when working on the exhaust system .....	5
1.8 Checking vacuum system .....	5
<b>2 Overview of fitting locations - injection system</b> .....	<b>7</b>
<b>3 Overview - fuel system</b> .....	<b>21</b>
3.1 Checking fuel system for leaks .....	24
<b>4 Exploded view - fuel rail, high-pressure pipes and injectors</b> .....	<b>25</b>
<b>5 Filling and bleeding fuel system</b> .....	<b>29</b>
<b>6 Connection diagram - vacuum system</b> .....	<b>30</b>
<b>7 Air cleaner</b> .....	<b>31</b>
7.1 Exploded view - air cleaner .....	31
7.2 Removing and installing engine cover panel .....	32
7.3 Removing and installing air filter element .....	32
7.4 Removing and installing air cleaner housing .....	34
<b>8 Intake manifold</b> .....	<b>37</b>
8.1 Exploded view - intake manifold .....	37
8.2 Removing and installing intake manifold .....	39
8.3 Removing and installing throttle valve module J338 .....	45
8.4 Removing and installing intake manifold flap motor V157 .....	46
<b>9 High-pressure pump</b> .....	<b>49</b>
9.1 Exploded view - high-pressure pump .....	49
9.2 Removing and installing high-pressure pump .....	51
9.3 Performing first fuel filling after installing high-pressure pump .....	57
<b>10 Injectors</b> .....	<b>59</b>
10.1 Exploded view - injectors .....	59
10.2 Checking injectors .....	62
10.3 Performing adaption of correction values for injectors .....	63
10.4 Checking for injectors sticking open .....	63
10.5 Measuring return flow rate of injectors with engine running .....	65
10.6 Checking return flow rate of injectors at starter cranking speed .....	69
10.7 Checking restrictor in fuel return line .....	72
10.8 Removing and installing injectors .....	73
10.9 Removing and installing fuel rail .....	78
10.10 Installing high-pressure pipes .....	82
<b>11 Senders and sensors</b> .....	<b>85</b>
11.1 Removing and installing air mass meter G70 .....	85
11.2 Checking fuel pressure regulating valve N276 .....	86
11.3 Removing and installing fuel pressure regulating valve N276 .....	89
11.4 Removing and installing fuel pressure sender G247 .....	91
11.5 Removing and installing pressure differential sender G505 .....	93
<b>12 Lambda probes</b> .....	<b>95</b>
12.1 Exploded view - Lambda probe, vehicles with engine codes CJGA, CJGC, CJMA, CRCA ..	95
12.2 Exploded view - Lambda probe, vehicles with engine code CLZB .....	96
12.3 Exploded view - Lambda probe, vehicles with engine code CNRB .....	98



12.4	Removing and installing Lambda probe G39 with Lambda probe heater Z19	100
12.5	Removing and installing control unit for NOx sender J583 with NOx sender G295	102
12.6	Removing and installing control unit for NOx sender 2 J881 with NOx sender 2 G687	103
<b>13</b>	<b>Engine control unit</b>	<b>105</b>
13.1	Wiring and component check with isolator boxes VAS 6606	105
13.2	Removing and installing engine control unit J623	107
<b>28</b>	<b>Glow plug system</b>	<b>111</b>
<b>1</b>	<b>Glow plug system</b>	<b>111</b>
1.1	Checking glow plug system	111
1.2	Exploded view - glow plug system	111
1.3	Removing and installing glow plugs	113
1.4	Removing and installing engine speed sender G28	115
1.5	Removing and installing Hall sender G40	116