

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions	3
4 General repair instructions	5
4.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	5
4.2 Checking for leaks in the fuel system	5
4.3 Contact corrosion!	5
4.4 Installing radiators, condensers and charge air coolers	6
4.5 Checking vacuum system	6
4.6 Routing and attachment of pipes, hoses and wiring	6
10 - Removing and installing engine	7
1 Removing engine	7
2 Separating engine and gearbox	24
3 Securing engine to engine and gearbox support	32
4 Installing engine	36
5 Assembly mountings	42
5.1 Assembly mountings - exploded view	42
5.2 Removing and installing engine mountings	43
5.3 Removing and installing engine cross member	46
13 - Crankshaft group	49
1 Cylinder block (pulley end)	49
1.1 Poly V-belt drive - exploded view	49
1.2 Removing and installing poly V-belt	52
1.3 Removing and installing tensioner for poly V-belt	54
1.4 Removing and installing idler roller for poly V-belt	54
1.5 Removing and installing vibration damper	55
1.6 Oil seal and sealing flange (pulley end) - exploded view	55
1.7 Renewing crankshaft oil seal (pulley end)	57
1.8 Removing and installing sealing flange (pulley end)	58
2 Cylinder block (gearbox end)	61
2.1 Vacuum pump - exploded view	61
2.2 Removing and installing vacuum pump	61
2.3 Drive plate - exploded view	62
2.4 Removing and installing drive plate	63
2.5 Renewing crankshaft oil seal (gearbox end)	64
3 Crankshaft	67
3.1 Crankshaft - exploded view	67
3.2 Crankshaft dimensions	69
3.3 Measuring axial clearance	69
3.4 Measuring radial clearance	70
4 Pistons and conrods	71
4.1 Pistons and conrods - exploded view	71
4.2 Checking piston projection at "TDC"	74
4.3 Piston and cylinder dimensions	76
4.4 Checking radial clearance of conrod bearings	76
15 - Cylinder head, valve gear	77



1	Timing chain covers	77
1.1	Timing chain covers - exploded view	77
1.2	Removing and installing timing chain covers	78
2	Chain drive on vehicles with engine code letters BUG, BUN	84
2.1	Camshaft timing chains - exploded view	84
2.2	Removing timing chains from camshafts	86
2.3	Removing and installing camshaft timing chains	94
2.4	Drive chain for valve gear - exploded view	102
2.5	Removing and installing drive chain for valve gear	104
2.6	Drive chain for auxiliary drives - exploded view	105
2.7	Removing and installing drive chain for auxiliary drives	106
2.8	Balance shaft - exploded view	109
2.9	Removing and installing balance shaft	109
3	Chain drive on vehicles with engine code letters CASA, CASB	112
3.1	Camshaft timing chains - exploded view	112
3.2	Removing timing chains from camshafts	114
3.3	Removing and installing camshaft timing chains	122
3.4	Drive chain for valve gear - exploded view	130
3.5	Removing and installing drive chain for valve gear	132
3.6	Drive chain for auxiliary drives - exploded view	133
3.7	Removing and installing chain for auxiliary drives	134
3.8	Balance shaft - exploded view	137
3.9	Removing and installing balance shaft	138
4	Cylinder head on vehicles with engine code letters BUG, BUN	141
4.1	Cylinder head cover - exploded view	141
4.2	Removing and installing cylinder head cover	142
4.3	Cylinder head - exploded view	143
4.4	Removing and installing cylinder head	145
4.5	Checking compression	153
5	Cylinder head on vehicles with engine code letters CASA, CASB	155
5.1	Cylinder head cover - exploded view	155
5.2	Removing and installing cylinder head cover	156
5.3	Cylinder head - exploded view	157
5.4	Removing and installing cylinder head	159
5.5	Checking compression	170
6	Valve gear	172
6.1	Valve gear - exploded view	172
6.2	Checking axial clearance of camshafts	174
6.3	Renewing camshaft oil seal	175
6.4	Removing and installing camshafts - vehicles with engine code letters BUG, BUN	176
6.5	Removing and installing camshafts - vehicles with engine code letters CASA, CASB	186
6.6	Checking hydraulic valve compensation elements	198
6.7	Renewing valve stem oil seals with cylinder head installed	199
6.8	Renewing valve stem oil seals with cylinder head removed	203
6.9	Valve dimensions	207
6.10	Machining valve seats	207
6.11	Checking valve guides	207
6.12	Checking valves	208
17 - Lubrication	209	
1	Oil pump and sump (bottom section)	209
1.1	Oil pump, sump (bottom section) - exploded view	209
1.2	Removing and installing sump (bottom section)	211
1.3	Removing and installing oil pump	216
2	Sump (top section)	218

2.1	Sump (top section) - exploded view	218
2.2	Removing and installing sump (top section)	219
3	Engine oil cooler, pressure control valve and oil filter housing on vehicles with engine code letters BUG, BUN	222
3.1	Engine oil cooler, pressure control valve and oil filter housing - exploded view	222
3.2	Removing and installing engine oil cooler	223
3.3	Removing and installing oil filter housing	224
3.4	Removing and installing pressure control valve for crankcase breather system	226
3.5	Removing and installing mounting plate for engine oil cooler, pressure control valve and oil filter housing	226
3.6	Removing and installing oil pressure switch F1	227
4	Engine oil cooler, pressure control valve and oil filter housing on vehicles with engine code letters CASA, CASB	229
4.1	Engine oil cooler, pressure control valve and oil filter housing - exploded view	229
4.2	Removing and installing engine oil cooler	230
4.3	Removing and installing oil filter housing	231
4.4	Removing and installing pressure control valve for crankcase breather system	233
4.5	Removing and installing mounting plate for engine oil cooler, pressure control valve for crankcase breather system and oil filter housing	234
4.6	Removing and installing oil pressure switch F1	235
5	Engine oil	237
5.1	Engine oil	237
5.2	Checking oil level	237
5.3	Checking oil pressure	237
19	Cooling	239
1	Cooling system	239
1.1	Connection diagram - coolant hoses	239
1.2	Draining and filling cooling system	242
2	Coolant pumps, thermostat, coolant pipes	249
2.1	Coolant pump and thermostat - exploded view	249
2.2	Removing and installing coolant pump	249
2.3	Removing and installing fuel cooling pump V166	250
2.4	Removing and installing hose connection with thermostat	252
2.5	Removing and installing pump for exhaust gas recirculation cooler V400 - vehicles with engine code letters CASA, CASB	253
2.6	Removing and installing coolant temperature sender G62	254
2.7	Removing and installing radiator outlet coolant temperature sender G83	255
2.8	Removing and installing coolant pipe (front) - vehicles with engine code letters BUG, BUN	256
2.9	Removing and installing coolant pipe (front) - vehicles with engine code letters CASA, CASB	258
2.10	Removing and installing coolant pipe (left-side)	258
2.11	Removing and installing coolant pipes (rear left) - all vehicles	260
2.12	Removing and installing coolant pipe (rear left) - vehicles with engine code letters CASA, CASB	261
2.13	Removing and installing coolant pipe (right-side)	262
2.14	Removing and installing coolant pipe (rear right)	267
2.15	Removing and installing coolant pipe (top right) - vehicles with engine code letters CASA, CASB	269
3	Radiator and radiator fans	271
3.1	Removing and installing radiator	271
3.2	Removing and installing cooler for fuel cooling system	275
3.3	Checking cooling system for leaks	275
3.4	Removing and installing radiator cowl	277
3.5	Removing and installing radiator fans V7 and V177	279

21 - Turbocharging/supercharging	281
1 Turbocharger on vehicles with engine code letters BUG, BUN	281
1.1 Turbocharger - exploded view	281
1.2 Removing and installing turbocharger	283
1.3 Removing and installing turbocharger 1 control unit J724	284
1.4 Removing and installing intermediate flange	294
2 Turbocharger on vehicles with engine code letters CASA, CASB	295
2.1 Turbocharger - exploded view	295
2.2 Removing and installing turbocharger	298
2.3 Removing and installing turbocharger 1 control unit J724	302
2.4 Removing and installing intermediate flange	313
3 Charge air cooling	314
3.1 Charge air cooling - exploded view	314
3.2 Removing and installing charge air cooler	315
3.3 Removing and installing charge pressure sender G31	318
26 - Exhaust system	319
1 Silencer	319
1.1 Silencer - exploded view	319
1.2 Removing and installing starter catalytic converter	321
1.3 Removing and installing particulate filter	324
1.4 Renewing tailpipes	326
1.5 Stress-free alignment of exhaust system	326
1.6 Checking exhaust system for leaks	327
2 Exhaust manifolds	328
2.1 Exhaust manifold - exploded view	328
2.2 Removing and installing exhaust manifold (left-side)	329
2.3 Removing and installing exhaust manifold (right-side)	331
2.4 Removing and installing intermediate pipe (left-side)	333
2.5 Removing and installing intermediate pipe (right-side)	334
3 Exhaust gas temperature control	336
3.1 Removing and installing exhaust gas temperature sender 1 G235	336
3.2 Removing and installing temperature sender before particulate filter G506 or exhaust gas temperature sender 3 G495	337
4 Exhaust gas recirculation on vehicles with engine code letters BUG, BUN	339
4.1 Exhaust gas recirculation system - exploded view	339
4.2 Removing and installing mechanical exhaust gas recirculation valve	340
4.3 Removing and installing exhaust gas recirculation cooler	341
5 Exhaust gas recirculation on vehicles with engine code letters CASA, CASB	343
5.1 Exhaust gas recirculation system - exploded view	343
5.2 Removing and installing exhaust gas recirculation control motor V338	344
5.3 Removing and installing exhaust gas recirculation cooler	345
5.4 Removing and installing exhaust gas recirculation temperature sensor G98	348