

Contents

00 - Technical data	1
1 Engine number	1
2 Engine data	2
3 Safety precautions	3
3.1 Working on the fuel system	3
3.2 Working on the cooling system	4
3.3 Working on vehicles with start/stop system	4
3.4 Using testers and measuring instruments during a road test	5
3.5 Working on the exhaust system	5
4 General repair instructions	6
4.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	6
4.2 Checking fuel system for leaks	6
4.3 Foreign particles in engine	7
4.4 Contact corrosion	7
4.5 Routing and attachment of pipes, hoses and wiring	7
4.6 Installing radiators, condensers and charge air coolers	7
4.7 Checking vacuum system	7
10 - Removing and installing engine	9
1 Removing engine	9
2 Separating engine and gearbox	36
3 Securing engine to engine and gearbox support	49
4 Installing engine	53
5 Assembly mountings	59
5.1 Exploded view - assembly mountings	59
5.2 Removing and installing engine mounting (left-side)	60
5.3 Removing and installing engine mounting (right-side)	63
5.4 Removing and installing engine cross member	67
13 - Crankshaft group	72
1 Cylinder block (pulley end) - engine code BTR	72
1.1 Exploded view - poly V-belt drive	72
1.2 Removing and installing poly V-belt	74
1.3 Removing and installing tensioner for poly V-belt	76
1.4 Removing and installing idler roller (left and right) for poly V-belt	76
1.5 Removing and installing vibration damper	77
1.6 Exploded view - oil seal and sealing flange (pulley end)	78
1.7 Renewing crankshaft oil seal (pulley end)	80
1.8 Removing and installing sealing flange (pulley end)	82
2 Cylinder block (pulley end) - engine code CCFA/CCFC	88
2.1 Exploded view - poly V-belt drive	88
2.2 Removing and installing poly V-belt	90
2.3 Removing and installing tensioner for poly V-belt	92
2.4 Removing and installing vibration damper	93
2.5 Exploded view - oil seal and sealing flange (pulley end)	94
2.6 Renewing crankshaft oil seal (pulley end)	96
2.7 Removing and installing sealing flange (pulley end)	98
3 Cylinder block (gearbox end)	104
3.1 Exploded view - drive plate	104
3.2 Removing and installing drive plate	105
3.3 Renewing crankshaft oil seal (gearbox end)	107



4	Crankshaft	110
4.1	Exploded view - crankshaft	110
4.2	Allocation of crankshaft bearing shells for new crankshaft	112
4.3	Allocation of crankshaft bearing shells for retaining frame without visible colour coding	115
4.4	Crankshaft dimensions	116
4.5	Measuring axial clearance of crankshaft	116
4.6	Measuring radial clearance of crankshaft	117
4.7	Removing and installing sender wheel	117
4.8	Checking sender wheel	118
5	Pistons and conrods	120
5.1	Exploded view - pistons and conrods	120
5.2	Measuring piston projection at "TDC"	125
5.3	Piston and cylinder dimensions	128
5.4	Measuring radial clearance of conrods	128
5.5	Allocation of conrod bearing shells	128
15	Cylinder head, valve gear	129
1	Timing chain covers - engine code BTR	129
1.1	Exploded view - timing chain covers	129
1.2	Renewing oil seal for toothed belt drive sprocket	132
1.3	Removing and installing timing chain cover (left-side)	135
1.4	Removing and installing timing chain cover (right-side)	138
1.5	Removing and installing timing chain cover (bottom)	141
2	Timing chain covers - engine code CCFA/CCFC	147
2.1	Exploded view - timing chain covers	147
2.2	Renewing oil seal for toothed belt drive sprocket	150
2.3	Removing and installing timing chain cover (left-side)	152
2.4	Removing and installing timing chain cover (right-side)	155
2.5	Removing and installing timing chain cover (bottom)	159
3	Chain drive	166
3.1	Exploded view - camshaft timing chains	166
3.2	Removing timing chains from camshafts	168
3.3	Removing and installing camshaft timing chains	181
3.4	Exploded view - drive chain for valve gear, engine code BTR	194
3.5	Removing and installing drive chain for valve gear - engine code BTR	196
3.6	Exploded view - drive chain for valve gear, engine code CCFA/CCFC	197
3.7	Removing and installing drive chain for valve gear - engine code CCFA/CCFC	199
3.8	Exploded view - drive chain for auxiliary drives	200
3.9	Removing and installing drive chain for auxiliary drives	201
3.10	Exploded view - auxiliary drives	203
3.11	Renewing oil seal for power steering pump drive	205
3.12	Removing and installing spur gear drive	206
4	Cylinder head	211
4.1	Exploded view - cylinder head cover	211
4.2	Removing and installing cylinder head cover	216
4.3	Exploded view - cylinder head	218
4.4	Removing cylinder head - engine code BTR	221
4.5	Removing cylinder head - engine code CCFA/CCFC	224
4.6	Installing cylinder head	228
4.7	Checking compression	235
5	Valve gear	238
5.1	Exploded view - valve gear	238
5.2	Measuring axial clearance of camshafts	240
5.3	Measuring radial clearance of camshafts	241
5.4	Removing and installing camshafts	242

5.5	Renewing valve stem oil seals with cylinder head installed	249
5.6	Renewing valve stem oil seals with cylinder head removed	254
5.7	Valve dimensions	259
5.8	Machining valve seats	259
5.9	Checking valve guides	259
5.10	Checking valves	261
17	- Lubrication	262
1	Oil pump, sump (bottom section), sump (top section) - engine code BTR	262
1.1	Exploded view - oil pump, sump (bottom section), sump (top section)	262
1.2	Removing and installing oil level and oil temperature sender G266	265
1.3	Removing and installing sump (bottom section)	268
1.4	Removing and installing oil pump up to engine number BTR 004 506	280
1.5	Removing and installing oil pump from engine number BTR 004 507 onwards	283
1.6	Removing and installing sump (top section)	285
2	Oil pump, sump (bottom section), sump (top section) - engine code CCFA/CCFC	290
2.1	Exploded view - oil pump, sump (bottom section), sump (top section)	290
2.2	Removing and installing oil level and oil temperature sender G266	294
2.3	Removing and installing sump (bottom section)	294
2.4	Removing and installing oil pump	307
2.5	Removing and installing sump (top section)	309
3	Engine oil cooler, pressure control valve for crankcase breather system, oil filter housing - engine code BTR	314
3.1	Exploded view - engine oil cooler, pressure control valve for crankcase breather system, oil filter housing	314
3.2	Removing and installing engine oil cooler	316
3.3	Removing and installing oil filter housing	319
3.4	Removing and installing pressure control valve for crankcase breather system	320
3.5	Removing and installing mounting plate for engine oil cooler, pressure control valve for crankcase breather system and oil filter housing	321
3.6	Removing and installing oil pressure switch F1	323
3.7	Removing and installing oil temperature sender G8	324
4	Engine oil cooler, pressure control valve for crankcase breather system, oil filter housing - engine code CCFA/CCFC	325
4.1	Exploded view - engine oil cooler, pressure control valve for crankcase breather system, oil filter housing	325
4.2	Removing and installing engine oil cooler	327
4.3	Removing and installing oil filter housing	330
4.4	Removing and installing pressure control valve for crankcase breather system	331
4.5	Removing and installing mounting plate for engine oil cooler, pressure control valve for crankcase breather system and oil filter housing	331
4.6	Removing and installing oil pressure switch F22	333
4.7	Removing and installing oil pressure switch for reduced oil pressure F378	334
4.8	Removing and installing oil temperature sender G8	335
4.9	Removing and installing valve for oil pressure control N428	336
5	Engine oil	338
5.1	Checking oil pressure	338
5.2	Engine oil	338
5.3	Checking oil level	338
19	- Cooling	339
1	Cooling system	339
1.1	Connection diagram - coolant hoses	339
1.2	Draining and filling cooling system	343
1.3	Checking cooling system for leaks	353
2	Coolant pump, thermostat	356



2.1	Exploded view - coolant pump and thermostat	356
2.2	Removing and installing coolant pump	359
2.3	Removing and installing thermostat	362
2.4	Checking thermostat	364
3	Coolant pipes - engine code BTR	365
3.1	Exploded view - coolant pipes	365
3.2	Removing and installing coolant temperature sender G62	368
3.3	Removing and installing coolant pipe (top front)	369
3.4	Removing and installing coolant pipe (front centre)	371
3.5	Removing and installing coolant pipe (bottom front)	373
3.6	Removing and installing coolant pipe (left-side)	374
3.7	Removing and installing coolant pipe (rear left)	376
3.8	Removing and installing coolant pipes (rear left) - vehicles with 4-zone air conditioning	377
3.9	Removing and installing coolant pipe (right-side)	379
3.10	Removing and installing coolant pipe (rear right)	379
3.11	Removing and installing coolant pipe leading to auxiliary radiator	380
3.12	Exploded view - fuel cooling pump V166	381
3.13	Removing and installing fuel cooling pump V166	382
4	Coolant pipes - engine code CCFA/CCFC	385
4.1	Exploded view - coolant pipes	385
4.2	Removing and installing coolant temperature sender G62	389
4.3	Removing and installing coolant pipe (top)	390
4.4	Removing and installing coolant pipe (top front)	392
4.5	Removing and installing coolant pipe (front centre)	394
4.6	Removing and installing coolant pipe (bottom front)	396
4.7	Removing and installing coolant pipes (bottom front)	396
4.8	Removing and installing coolant pipe (left-side)	397
4.9	Removing and installing coolant pipe (top) for exhaust gas recirculation	400
4.10	Removing and installing coolant pipe (left-side) for exhaust gas recirculation	401
4.11	Removing and installing coolant pipe (right-side) for exhaust gas recirculation	402
4.12	Removing and installing coolant pipe (rear left)	402
4.13	Removing and installing coolant pipes (rear left) - vehicles with 4-zone air conditioning	404
4.14	Removing and installing coolant pipe (right-side)	405
4.15	Removing and installing coolant pipe (rear right)	406
4.16	Exploded view - pump for exhaust gas recirculation cooler V400	407
4.17	Removing and installing pump for exhaust gas recirculation cooler V400	407
4.18	Exploded view - fuel cooling pump V166, engine code CCFA	409
4.19	Removing and installing fuel cooling pump V166 - engine code CCFA	409
5	Radiator and radiator fans	412
5.1	Exploded view - radiator	412
5.2	Removing and installing radiator outlet coolant temperature sender G83	415
5.3	Removing and installing temperature sender for engine temperature regulation G694	416
5.4	Removing and installing radiator	417
5.5	Removing and installing cooler for fuel cooling system - vehicles with engine code BTR/ CCFA	425
5.6	Exploded view - radiator cowl and radiator fans	427
5.7	Removing and installing radiator cowl	428
5.8	Removing and installing radiator fan V7 and radiator fan 2 V177	432
21	Turbocharging/supercharging	433
1	Turbochargers	433
1.1	Exploded view - turbocharger	433
1.2	Removing and installing turbocharger (left-side)	436
1.3	Removing and installing turbocharger (right-side)	441
1.4	Removing and installing rotational speed sender 1 G653	446
1.5	Removing and installing rotational speed sender 2 G654	449

2	Charge air cooling	452
2.1	Exploded view - air duct system	452
2.2	Exploded view - charge air cooling	453
2.3	Removing and installing charge air cooler	454
2.4	Removing and installing charge pressure sender G31	458
26	Exhaust system	459
1	Silencers	459
1.1	Exploded view - silencers	459
1.2	Removing and installing catalytic converter (left-side)	465
1.3	Removing and installing catalytic converter (right-side)	467
1.4	Removing and installing particulate filter (left-side)	469
1.5	Removing and installing particulate filter (right-side)	472
1.6	Separating intermediate pipes and rear silencer	473
1.7	Renewing tailpipes	475
1.8	Stress-free alignment of exhaust system	476
1.9	Checking exhaust system for leaks	478
2	Exhaust manifolds	479
2.1	Exploded view - exhaust manifold	479
2.2	Removing and installing exhaust manifold (left-side)	481
2.3	Removing and installing exhaust manifold (right-side)	482
3	Exhaust gas temperature control	484
3.1	Exploded view - Lambda probe, exhaust gas temperature senders and pressure senders	484
3.2	Removing and installing exhaust gas temperature sender 1 G235	486
3.3	Removing and installing exhaust gas temperature sender 1 for bank 2 G236	488
3.4	Removing and installing temperature sender before particulate filter G506 and G498	489
4	Exhaust gas recirculation	494
4.1	Exploded view - exhaust gas recirculation system	494
4.2	Removing and installing exhaust gas recirculation control motor V338	498
4.3	Removing and installing exhaust gas recirculation control motor 2 V339	499
5	Exhaust gas recirculation cooler - engine code BTR	500
5.1	Exploded view - exhaust gas recirculation cooler with change-over flap	500
5.2	Removing and installing exhaust gas recirculation cooler with change-over flap	502
5.3	Removing and installing exhaust gas recirculation cooler	504
6	Exhaust gas recirculation cooler - engine code CCFA/CCFC	505
6.1	Exploded view - exhaust gas recirculation cooler	505
6.2	Removing and installing exhaust gas recirculation cooler	507
6.3	Removing and installing exhaust gas recirculation temperature sensor G98	509
6.4	Cleaning exhaust gas recirculation system	509