

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Engine number</b>	<b>1</b>
<b>2 Engine data</b>	<b>2</b>
<b>3 Safety precautions</b>	<b>3</b>
3.1 Working on the fuel system	3
3.2 Working on the cooling system	4
3.3 Working on vehicles with start/stop system	4
3.4 Using testers and measuring instruments during a road test	5
3.5 Working on the exhaust system	5
<b>4 General repair instructions</b>	<b>6</b>
4.1 Rules for cleanliness when working on fuel supply system, injection system and turbocharger	6
4.2 Checking for leaks in the fuel system	6
4.3 Foreign particles in engine	7
4.4 Contact corrosion!	7
4.5 Routing and attachment of pipes, hoses and wiring	7
4.6 Installing radiators, condensers and charge air coolers	7
4.7 Renewing turbocharger	8
4.8 Checking vacuum system	8
<b>10 - Removing and installing engine</b>	<b>9</b>
<b>1 Removing engine</b>	<b>9</b>
<b>2 Separating engine and gearbox</b>	<b>30</b>
<b>3 Securing engine to engine and gearbox support</b>	<b>39</b>
<b>4 Installing engine</b>	<b>44</b>
<b>5 Assembly mountings</b>	<b>50</b>
5.1 Exploded view - assembly mountings	50
5.2 Removing and installing engine mountings	50
5.3 Removing and installing engine cross member	52
<b>13 - Crankshaft group</b>	<b>62</b>
<b>1 Cylinder block (pulley end)</b>	<b>62</b>
1.1 Exploded view - poly V-belt drive	62
1.2 Removing and installing poly V-belt and poly V-belt tensioner	64
1.3 Removing and installing vibration damper with poly V-belt pulley	66
1.4 Exploded view - bracket for air conditioner compressor	67
1.5 Removing and installing bracket for air conditioner compressor	68
1.6 Exploded view - oil seal and sealing flange (pulley end)	69
1.7 Renewing crankshaft oil seal (pulley end)	71
1.8 Removing and installing sealing flange (pulley end)	72
<b>2 Cylinder block (gearbox end)</b>	<b>76</b>
2.1 Exploded view - drive plate	76
2.2 Removing and installing drive plate	76
2.3 Renewing crankshaft oil seal (gearbox end)	77
<b>3 Crankshaft</b>	<b>80</b>
3.1 Exploded view - crankshaft	80
3.2 Allocation of main bearing shells for new crankshaft	82
3.3 Allocation of crankshaft bearing shells for retaining frame without visible colour coding	83
3.4 Crankshaft dimensions	83
3.5 Measuring axial clearance of crankshaft	83
3.6 Measuring radial clearance of crankshaft	84

<b>4</b>	<b>Pistons and conrods</b> .....	<b>85</b>
4.1	Exploded view - pistons and conrods .....	85
4.2	Checking piston projection at "TDC" .....	88
4.3	Piston and cylinder dimensions .....	90
4.4	Measuring radial clearance of conrods .....	90
4.5	Allocation of conrod bearing shells .....	90
<b>15</b>	<b>- Cylinder head, valve gear</b> .....	<b>91</b>
<b>1</b>	<b>Chain drive</b> .....	<b>91</b>
1.1	Exploded view - timing chain covers .....	91
1.2	Removing and installing timing chain cover (left-side) .....	94
1.3	Removing and installing timing chain cover (right-side) .....	96
1.4	Removing and installing timing chain cover (bottom) .....	101
1.5	Exploded view - camshaft timing chains .....	103
1.6	Removing timing chains from camshafts .....	106
1.7	Removing and installing camshaft timing chains .....	114
1.8	Exploded view - drive chain for high-pressure pump (left-side) and oil pump .....	114
1.9	Removing and installing drive chain for high-pressure pump (left-side) and oil pump .....	116
1.10	Exploded view - drive chain for high-pressure pump (right-side) .....	119
1.11	Removing and installing drive chain for high-pressure pump (right-side) .....	120
1.12	Exploded view - intermediate gear and shaft for intermediate gear .....	123
1.13	Removing and installing intermediate gear and shaft for intermediate gear .....	124
<b>2</b>	<b>Cylinder head</b> .....	<b>127</b>
2.1	Exploded view - cylinder head cover .....	127
2.2	Removing and installing cylinder head cover .....	129
2.3	Exploded view - camshaft housing and cylinder head .....	131
2.4	Removing and installing camshaft housing .....	134
2.5	Removing and installing cylinder head .....	138
2.6	Checking compression .....	143
<b>3</b>	<b>Valve gear</b> .....	<b>146</b>
3.1	Exploded view - valve gear .....	146
3.2	Measuring axial clearance of camshafts .....	149
3.3	Measuring radial clearance of camshafts .....	150
3.4	Removing and installing camshafts .....	150
3.5	Checking hydraulic compensation elements .....	157
3.6	Renewing valve stem oil seals with cylinder head installed .....	158
3.7	Renewing valve stem oil seals with cylinder head removed .....	161
3.8	Valve dimensions .....	164
3.9	Machining valve seats .....	165
3.10	Checking valve guides .....	165
3.11	Checking valves .....	166
<b>17</b>	<b>- Lubrication</b> .....	<b>167</b>
<b>1</b>	<b>Oil pump, sump (bottom section), sump (top section)</b> .....	<b>167</b>
1.1	Exploded view - oil pump, sump (bottom section) .....	167
1.2	Removing and installing oil level and oil temperature sender G266 .....	169
1.3	Removing and installing sump (bottom section) .....	171
1.4	Removing and installing oil pump .....	174
1.5	Exploded view - sump (top section) .....	175
1.6	Removing and installing sump (top section) .....	177
<b>2</b>	<b>Engine oil cooler, oil temperature sender, oil filter housing, pressure control valve</b> .....	<b>180</b>
2.1	Exploded view - engine oil cooler (left-side), oil temperature sender .....	180
2.2	Removing and installing oil temperature sender G8 .....	181
2.3	Removing and installing engine oil cooler (left-side) .....	182
2.4	Exploded view - cooler for engine oil and ATF .....	184

2.5	Removing and installing cooler for engine oil and ATF	186
2.6	Exploded view - oil filter housing	187
2.7	Removing and installing oil filter housing	188
2.8	Exploded view - pressure control valve for crankcase breather system, oil pressure switch	189
2.9	Removing and installing pressure control valve for crankcase breather system	190
2.10	Removing and installing oil pressure switch F1	191
<b>3</b>	<b>Engine oil</b>	<b>193</b>
3.1	Checking oil level	193
3.2	Checking oil pressure	193
<b>19</b>	<b>Cooling</b>	<b>196</b>
<b>1</b>	<b>Cooling system</b>	<b>196</b>
1.1	Connection diagram - coolant hoses	196
1.2	Draining and filling cooling system	198
1.3	Checking cooling system for leaks	206
<b>2</b>	<b>Coolant pumps and thermostat</b>	<b>208</b>
2.1	Exploded view - coolant pump and thermostat	208
2.2	Removing and installing coolant pump	210
2.3	Removing and installing coolant pump housing	211
2.4	Removing and installing thermostat with hose connection	211
2.5	Checking thermostat	213
2.6	Removing and installing pump for exhaust gas recirculation cooler V400	213
2.7	Exploded view - continued coolant circulation pump V51	215
2.8	Removing and installing continued coolant circulation pump V51	216
2.9	Exploded view - fuel cooling pump V166	218
2.10	Removing and installing fuel cooling pump V166	219
<b>3</b>	<b>Coolant pipes</b>	<b>222</b>
3.1	Exploded view - coolant pipes	222
3.2	Removing and installing coolant temperature sender G62	224
3.3	Removing and installing radiator outlet coolant temperature sender G83	225
3.4	Removing and installing coolant pipe (top)	226
3.5	Removing and installing coolant pipe (front right)	227
3.6	Removing and installing coolant pipes (top right)	228
3.7	Removing and installing long coolant pipe (right-side)	229
3.8	Removing and installing coolant pipe (rear right)	230
3.9	Removing and installing coolant pipe (bottom right)	231
3.10	Removing and installing coolant pipe (right-side) with bracket for pump for exhaust gas recirculation cooler	231
3.11	Removing and installing coolant pipe (rear)	232
<b>4</b>	<b>Radiator and radiator fans</b>	<b>234</b>
4.1	Exploded view - radiator	234
4.2	Removing and installing radiator	237
4.3	Removing and installing cooler for fuel cooling system	241
4.4	Removing and installing auxiliary radiator (centre)	242
4.5	Exploded view - auxiliary radiator	244
4.6	Removing and installing auxiliary radiator	245
4.7	Exploded view - radiator cowl and radiator fans	247
4.8	Removing and installing radiator cowl	248
4.9	Removing and installing radiator fans V7 / V177	253
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>254</b>
<b>1</b>	<b>Turbocharger</b>	<b>254</b>
1.1	Exploded view - turbocharger	254
1.2	Removing and installing turbocharger (left-side)	257
1.3	Removing and installing turbocharger (right-side)	260



<b>2</b>	<b>Charge air cooling</b> .....	<b>264</b>
2.1	Exploded view - air duct system .....	264
2.2	Removing and installing charge pressure sender G31 .....	265
2.3	Exploded view - charge air cooler .....	266
2.4	Removing and installing charge air cooler .....	267
<b>26</b>	<b>- Exhaust system</b> .....	<b>271</b>
<b>1</b>	<b>Silencers</b> .....	<b>271</b>
1.1	Exploded view - silencer .....	271
1.2	Removing and installing starter catalytic converter .....	275
1.3	Removing and installing particulate filter .....	276
1.4	Separating intermediate pipes and rear silencer .....	277
1.5	Renewing tailpipes .....	279
1.6	Stress-free alignment of exhaust system .....	279
1.7	Checking exhaust system for leaks .....	280
<b>2</b>	<b>Exhaust manifold</b> .....	<b>281</b>
2.1	Exploded view - exhaust manifold .....	281
2.2	Removing and installing exhaust manifold .....	282
<b>3</b>	<b>Exhaust gas temperature control</b> .....	<b>285</b>
3.1	Exploded view - exhaust gas temperature control .....	285
3.2	Removing and installing exhaust gas temperature sender 1 G235 .....	286
3.3	Removing and installing exhaust gas temperature sender 1 for bank 2 G236 .....	287
3.4	Removing and installing exhaust gas temperature sender G498 / G506 .....	288
<b>4</b>	<b>Exhaust gas recirculation</b> .....	<b>290</b>
4.1	Exploded view - exhaust gas recirculation system .....	290
4.2	Removing and installing pressure sender for exhaust gas recirculation G691 / G692 .....	292
4.3	Removing and installing exhaust gas recirculation control motor V338 .....	292
4.4	Removing and installing exhaust gas recirculation control motor 2 V339 .....	294
4.5	Removing and installing connections for exhaust gas recirculation .....	294
4.6	Exploded view - exhaust gas recirculation cooler .....	296
4.7	Removing and installing exhaust gas recirculation temperature sensor G98 .....	298
4.8	Removing and installing exhaust gas recirculation cooler .....	298
4.9	Removing and installing actuator for deflecting flap .....	301
4.10	Removing and installing actuator for bypass flap .....	301