

Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Working on the fuel system	1
1.2 Using testers and measuring instruments during a road test	2
1.3 Removing and installing components from a full or partly full fuel tank	2
1.4 Removing and installing fuel tank	2
2 General repair instructions	3
2.1 Rules for cleanliness when working on fuel supply system and injection system	3
2.2 Test conditions	3
2.3 Contact corrosion	3
20 - Fuel supply system	5
1 Fuel tank with attached components - rest-of-world vehicles	5
1.1 Exploded view - fuel tank with attached components	5
1.2 Draining fuel tank	7
1.3 Removing and installing fuel tank with attached components	10
2 Fuel tank with attached components - USA vehicles	17
2.1 Exploded view - fuel tank with attached components	17
2.2 Draining fuel tank	19
2.3 Removing and installing fuel tank with attached components	22
3 Fuel pump, fuel delivery unit and fuel gauge senders	29
3.1 Exploded view - fuel delivery unit and fuel gauge senders	29
3.2 Checking fuel pump (electrical test)	31
3.3 Checking fuel pump control unit J538	34
3.4 Removing and installing fuel pump control unit J538 - vehicles up to 10.2006	34
3.5 Removing and installing fuel pump control unit J538 - vehicles from 11.2006 onwards ..	34
3.6 Checking fuel pump delivery rate - vehicles with 3.0 ltr. engine	35
3.7 Checking fuel pump delivery rate - vehicles with 3.6 ltr. engine	38
3.8 Checking fuel pump delivery rate - vehicles with 4.2 ltr. engine	42
3.9 Removing and installing fuel delivery unit	46
3.10 Checking fuel gauge sender G	53
3.11 Removing and installing fuel gauge sender G	55
3.12 Checking fuel gauge sender 2 G169	59
3.13 Removing and installing fuel gauge sender 2 G169	61
3.14 Suction-jet pumps: operation	62
3.15 Removing and installing suction-jet pumps	63
4 Fuel filter	71
4.1 Exploded view - fuel filter	71
4.2 Removing and installing fuel filter	71
5 Activated charcoal filter system - rest-of-world vehicles	75
5.1 Exploded view - activated charcoal filter system	75
5.2 Removing and installing activated charcoal filter	75
6 Activated charcoal filter system and tank leak diagnostic system - USA vehicles	77
6.1 Exploded view - activated charcoal filter system	77
6.2 Removing and installing activated charcoal filter	78
6.3 Routing of pipes/hoses for activated charcoal filter system and tank leak diagnostic system	78
6.4 Tank leak diagnostic system	79
6.5 Performing tank leak diagnosis	80
6.6 Removing and installing fuel system diagnostic pump V144	82
7 Accelerator mechanism	83
7.1 Exploded view - accelerator pedal module	83



7.2 Removing and installing accelerator pedal module with accelerator position sender 84