

001 - Basic equipment	1-40
1. Basic equipment	1
2. Battery, terminal 15 voltage supply relay, energy management control unit, battery isolation igniter, fuses	2
3. Terminal 75x voltage supply relay	3
4. Entry and start authorisation control unit, entry and start authorisation switch, fuses	4
5. Entry and start authorisation control unit, entry and start authorisation button, entry and start authorisation switch, aerial reader unit for keyless entry system	5
6. Entry and start authorisation control unit, entry and start authorisation switch, gear selector position P switch	6
7. Steering column electronics control unit, turn signal switch headlight flasher switch, intermittent wiper switch, horn plate	7
8. Steering column electronics control unit, cruise control system switch, steering column adjustment switch, steering angle sender	8
9. Onboard power supply control unit, fuses	9
10. Onboard supply control unit, light switch, headlight range control regulator	10
11. Onboard supply control unit, TCS and ESP button, hazard warning lights button	11
12. Onboard supply control unit, left side light bulb, front left turn signal bulb, left dipped beam bulb, left main beam bulb, left headlight range control motor	12
13. Onboard supply control unit, front passenger side exterior mirror turn signal bulb, right headlight	13
14. Onboard supply control unit, headlight washer system relay, bonnet contact switch, fog light bulb, footwell light	14
15. Onboard supply control unit, dual tone horn relay, reversing light switch, treble tone horn, bass tone horn, fuses	15
16. Rain and light detector sensor, wiper motor control unit, windscreen wiper motor, rear window wiper motor, windscreen and rear window washer pump	16
17. Glove compartment light switch, glove compartment light, washer jet heater element	17
18. Diagnostic connector, fuses	18
19. Convenience system central control unit, 12 V socket 5, fuses	19
20. Convenience system central control unit, left tail light	20
21. Convenience system central control unit, right tail light	21
22. Convenience system central control unit, left tail lights USA	22
23. Convenience system central control unit, right tail light USA	23
24. Release button for rear lid lock cylinder, high level brake light bulb, number plate light, tank filler flap locking motor	24
25. Convenience system central control unit, heated rear window relay, heated rear window, rear footwell light	25
26. Convenience system central control unit, brake light suppression relay, brake light switch, brake pedal switch	26
27. Convenience system central control unit, convenience system central control unit 2, luggage compartment light, rear lid light	27
28. Convenience system central control unit 2, rear interior light, rear lid closed sender 1	28
29. Onboard supply control unit 2, servotronic solenoid valve, fuses	29
30. Onboard supply control unit 2, glove compartment button, display unit button, operating unit in front of centre console, parking aid button, parking aid warning lamp, glove compartment release motor	30
31. Control unit in dash panel insert, data bus diagnostic interface	31
32. Control unit in dash panel insert, data bus diagnostic interface	32
33. Control unit in dash panel insert, brake fluid level warning contact, brake pad wear sender	33
34. Control unit in dash panel insert, oil pressure switch, windscreen washer fluid level sender, coolant shortage indicator sender, oil pressure warning lamp, ambient temperature sensor	34
35. Control unit in dash panel insert, radio controlled clock receiver, oil level and oil temperature sender, parking brake contact switch, radio controlled clock	35
36. Control unit in dash panel insert, ashtray illumination bulb, cup holder illumination bulb, fuel gauge sender, fuel gauge, fuel system pressurisation pump, fuel pump	36
37. Cigarette lighter, 12 V socket	37
38. Vanity mirror contact switch, illuminated vanity mirror	38
39. Interior light rear switch, front interior light button, driver side reading light button, driver side reading light, interior light	39
40. Sliding sunroof adjustment regulator, front passenger side reading light button, front passenger side reading light, automatic anti-dazzle interior mirror	40
002 - Trailer towing attachment	41-46
1. Trailer towing attachment	41
2. Trailer detector control unit, fuses	42
3. Trailer detector control unit	43

4. Trailer detector control unit, trailer socket, hinged tow attachment ball head motor	44
5. Trailer detector control unit, electric hinged tow coupling attachment button, tow ball coupling warning lamp, switch illumination bulb	45
6. Trailer detector control unit, electric hinged tow coupling attachment button, loading height button	46
003 - 4.2l petrol engine , BAR	47-72
1. 4.2l petrol engine , BAR	47
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Energy management control unit, Battery isolation igniter	48
3. Starter, Alternator, Starter motor relay, Starter motor relay 2, Jump start socket	49
4. Main relay, Engine control unit	50
5. Engine control unit	51
6. Engine control unit, Ignition coil 1 with output stage, Ignition coil 4 with output stage	52
7. Engine control unit	53
8. Engine control unit, Injector, cylinder 1	54
9. Engine control unit	55
10. Knock sensor 1, Knock sensor 3, Engine control unit	56
11. Engine speed sender, Hall sender, Hall sender 3, Engine control unit	57
12. Coolant temperature sender, Fuel pressure sender, Intake manifold flap potentiometer, Throttle valve module, Engine control unit	58
13. Intake air temperature sender, Hall sender 2, Air mass meter 2, Hall sender 4, Engine control unit	59
14. Radiator outlet coolant temperature sender, Brake servo pressure sensor, Fuel pressure sender for low-pressure, Sender 1 for secondary air pressure, Engine control unit	60
15. Engine control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Secondary air inlet valve 2, Fuel metering valve 2	61
16. High-pressure sender, Accelerator position sender, Secondary air pump relay, Engine control unit, Secondary air pump motor, Fuel system diagnostic pump	62
17. Engine control unit, Camshaft control valve 1, Intake manifold flap valve, Exhaust camshaft control valve 1	63
18. Engine control unit, Intake manifold flap motor, Variable intake manifold motor	64
19. Lambda probe, Engine control unit, Engine component current supply relay	65
20. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Engine control unit	66
21. Brake servo relay, Engine control unit, Vacuum pump for brakes	67
22. Brake light switch, Brake pedal switch, Brake light suppression relay, Engine control unit	68
23. Radiator fan control unit, Engine control unit, Radiator fan, Radiator fan 2	69
24. Continued coolant circulation relay, Coolant circulation pump	70
25. Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	71
26. Oil pressure switch, Coolant shortage indicator switch, Control unit in dash panel insert	72
004 - Audi Q7 3.0 l - TDI, Common Rail (155 kW / 171 kW - 6-cylinder), engine codes BUN, BUG	73-90
1. Audi Q7 3.0 l - TDI, Common Rail (155 kW / 171 kW - 6-cylinder), engine codes BUN, BUG	73
2. Battery, terminal 15 voltage supply relay, energy management control unit, battery isolation igniter, fuses	74
3. Starter, alternator, starter motor relay, starter motor relay 2, slave start socket	75
4. Automatic glow period control unit, glow plugs	76
5. Engine control unit, terminal 30 voltage supply relay	77
6. Engine control unit	78
7. Engine control unit, coolant temperature sender, fuel temperature sender, fuel pressure sender, injector, cylinder 1 - 6	79
8. Engine control unit, air mass meter, fuel pressure regulating valve, fuel metering valve, charge air pressure sender, intake air temperature sender, accelerator position sender	80
9. Engine control unit, throttle valve module, exhaust gas recirculation valve, exhaust gas recirculation cooler change-over valve	81
10. Engine control unit, turbocharger 1 control unit, intake manifold flap motor	82
11. Engine control unit, engine speed sender, Hall sender, radiator outlet coolant temperature sender	83
12. Engine control unit, brake light switch, clutch pedal switch, brake pedal switch	84
13. Engine control unit, lambda probe, exhaust gas temperature sender 1, exhaust gas pressure sensor 1, temperature sender before particulate filter	85
14. Engine control unit, fuel cooling pump relay, high pressure sender, fuel cooling pump relay	86
15. Engine control unit, continued coolant circulation relay, coolant circulation pump, fuel pump relay for auxiliary heater	87
16. Engine control unit, fuel pump relay, radiator fan control unit, radiator fan	88
17. Control unit in dash panel insert. fuel gauge sender. fuel gauge. fuel system pressurisation	89

pump, fuel gauge sender 2	
18. Control unit in dash panel insert, oil pressure switch, coolant shortage indicator switch, oil level and oil temperature sender, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp	90
005 - Airbag	91-98
1. Airbag	91
2. Airbag control unit, battery isolation igniter	92
3. Airbag control unit, airbag coil connector and return spring with slip ring, airbag igniter	93
4. Airbag control unit, side airbag igniter	94
5. Airbag control unit, belt tensioner igniter 1, rear belt tensioner igniter, curtain airbag igniter	95
6. Airbag control unit, side airbag crash sensor, rear side airbag crash sensor, crash sensor for front airbag	96
7. Airbag control unit, belt switch, key operated switch to deactivate front passenger side airbag, front passenger side airbag deactivated warning lamp	97
8. USA, airbag control unit, seat occupied recognition control unit, pressure sensor for seat occupied recognition, belt switch	98
006 - Adaptive cruise control	99-100
1. Adaptive cruise control	99
2. Adaptive cruise control unit, Data bus diagnostic interface, Sensor heater for adaptive cruise control system	100
007 - Electronic steering column lock	101-104
1. Electronic steering column lock	101
2. Onboard power supply control unit, fuses	102
3. Onboard supply control unit, steering column vertical adjustment sender, steering column axial adjustment sender, steering column vertical adjustment motor, steering column axial adjustment motor	103
4. Steering column electronics control unit, steering column adjustment switch	104
008 - Auxiliary heater	105-112
1. Auxiliary heater	105
2. Auxiliary heater control unit, temperature sensor, heater overheating fuse in air conditioning system compressor, metering pump	106
3. Auxiliary heater control unit, heater coolant shut-off valve, remote control receiver for auxiliary heating	107
4. Auxiliary heater 3.0 l diesel engine BUN / BUG / CASA / CASB / CCMA	108
5. Auxiliary heater 4.2 l BAR, continued coolant circulation relay, coolant circulation pump	109
6. Auxiliary heater 3.6 l engine BHK, continued coolant circulation relay, circulation pump relay	110
7. Auxiliary heater 4.2 l diesel engine BTR	111
8. Auxiliary heater 4.2 l diesel engine BTR, continued coolant circulation relay, coolant circulation pump	112
009 - Parking aid front and rear	113-117
1. Parking aid front and rear	113
2. Parking aid control unit, fuses	114
3. Parking aid control unit, parking aid button, parking aid warning lamp	115
4. Parking aid control unit, front parking aid sender, parking aid warning buzzer	116
5. Parking aid control unit, rear parking aid sender	117
010 - Electric tyre pressure monitor	118-120
1. Electric tyre pressure monitor	118
2. Tyre pressure monitor control unit	119
3. Tyre pressure monitor control unit, tyre pressure sensor, rear tyre pressure monitor aerial, tyre pressure monitor sender unit in wheel housing	120
011 - Adaptive suspension	121-128
1. Adaptive suspension	121
2. Adaptive suspension control unit	122
3. Compressor temperature sender for adaptive suspension, Adaptive suspension control unit, Adaptive suspension compressor relay, Adaptive suspension drain valve, Levelling system fuse, Adaptive suspension compressor motor	123
4. Pressure sender for adaptive suspension, Adaptive suspension control unit, Adaptive suspension pressure accumulator valve	124
5. Electric hinged tow coupling attachment button, Loading height button, Adaptive suspension control unit	125
6. Rear left vehicle level sender, Front left vehicle level sender, Adaptive suspension control unit	126
7. Front left body acceleration sender, Front right body acceleration sender, Rear body acceleration sender, Adaptive suspension control unit	127
8. Adaptive suspension control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve, Rear left shock absorber damping adjustment valve	128
012 - Anti-locking brake system (ABS) with traction control system (TCS) and electronic stability	129-136

program (ESP)	
1. Anti-locking brake system (ABS) with traction control system (TCS) and electronic stability program (ESP)	129
2. Fuses	130
3. ABS control unit, ABS control unit fuse 1, ABS hydraulic pump	131
4. ABS control unit, brake light suppression relay, brake light switch, brake pedal switch	132
5. ABS control unit, speed sensor	133
6. ABS control unit, brake pressure solenoid trip switch, potentiometer for brake servo diaphragm movement, brake pressure solenoid valve	134
7. ABS control unit, TCS and ESP button, lateral acceleration sender, yaw rate sender, longitudinal acceleration sender, ESP sensor unit	135
8. ABS control unit, clutch pedal switch, ABS inlet valve, ABS outlet valve, vehicle stabilization program switch valve, vehicle stabilization program high pressure valve	136
013 - Air conditioning system basis	137-144
1. Air conditioning system basis	137
2. Climatronic control unit, fuses	138
3. Climatronic control unit, high pressure sender, refrigerant temperature sender, air conditioning system compressor regulating valve	139
4. Climatronic control unit, front seat temperature sender, front seat heating, heated driver seat regulator	140
5. Climatronic control unit, continued coolant circulation relay, coolant circulation pump, evaporator output temperature	141
6. Climatronic control unit, defroster flap control motor potentiometer, potentiometer for left footwell flap control motor, defroster flap control motor, air recirculation flap control motor, left footwell flap control motor	142
7. Climatronic control unit, potentiometer for left side vent control motor, potentiometer for left temperature flap control motor, left temperature flap control motor, left side vent control motor	143
8. Climatronic control unit, fresh air blower control unit, fresh air blower, fresh air blower fuse 1	144
014 - Automatic air conditioning system, luxury Climatronic	145-166
1. Automatic air conditioning system, luxury Climatronic	145
2. Fuse carrier 1	146
3. Fresh air blower control unit, Climatronic control unit	147
4. Fresh air blower control unit, Climatronic control unit, Fresh air blower fuse 1, Fresh air blower fuse 2, Fresh air blower	148
5. Front left seat temperature sender, Front right seat temperature sender, Climatronic control unit	149
6. Sunlight penetration photosensor, Air quality sensor, Refrigerant temperature sender, Climatronic control unit, Air conditioner compressor regulating valve	150
7. High-pressure sender, Climatronic control unit	151
8. Continued coolant circulation relay, Climatronic control unit, Coolant circulation pump	152
9. Climatronic control unit, Coolant shut-off valve relay, Coolant shut-off valve	153
10. Fresh air intake duct temperature sensor, Left footwell vent temperature sender, Evaporator output temperature sender, Front left chest vent temperature sensor, Climatronic control unit	154
11. Climatronic control unit, Defroster flap control motor, Air recirculation flap control motor, Right temperature flap control motor	155
12. Climatronic control unit, Right centre vent control motor, Indirect ventilation flap control motor	156
13. Climatronic control unit, Right footwell flap control motor, Left side vent control motor, Right side vent control motor	157
14. Climatronic control unit, Left footwell flap control motor, Left centre vent control motor, Left temperature flap control motor	158
15. Operating and display unit for rear air conditioning system	159
16. Operating and display unit for rear air conditioning system, Rear seat occupied sensor on driver side, Heated bench seat cushion for rear left seat, Heated backrest for rear left seat	160
17. Operating and display unit for rear air conditioning system, Rear seat occupied sensor on passenger side, Heated bench seat cushion for rear right seat, Heated backrest for rear right seat	161
18. Operating and display unit for rear air conditioning system, Rear left vent temperature sender, Rear right vent temperature sender, Rear fresh air blower control unit, Rear fresh air blower	162
19. Operating and display unit for rear air conditioning system, Rear left air quantity flap control motor, Rear right air quantity flap control motor, Rear left temperature flap control motor	163
20. Operating and display unit for rear air conditioning system, Rear right temperature flap control motor, Rear left chest vent control motor	164
21. Operating and display unit for rear air conditioning system, Right B-pillar and footwell shut-off flap control motor, Left B-pillar and footwell shut-off flap control motor, Rear right chest vent control motor	165
22. Dash panel left vent illumination bulb. Dash panel central vent illumination. Dash panel right	166

vent illumination bulb, Central rear vent illumination bulb	
015 - Garage door opener	167-169
1. Garage door opener	167
2. Garage door operation control unit, garage door operating unit	168
3. Garage door operating unit, garage door opener button	169
016 - Automatic gearbox 09D	170-175
1. Automatic gearbox 09D	170
2. Automatic gearbox control unit, fuses	171
3. Automatic gearbox control unit, gearbox oil temperature sender, gearbox input speed sender, gearbox output speed sender	172
4. Automatic gearbox control unit, solenoid valves	173
5. Automatic gearbox control unit, multifunction switch, gear selector position P switch, selector lever lock solenoid, reversing switch	174
6. Automatic gearbox control unit, selector lever sensors control unit, Tiptronic switch, selector lever position display	175
017 - Convenience system	176-209
1. Convenience system	176
2. Driver door control unit	177
3. Driver door exterior handle switch, Driver door exterior handle contact sensor, Driver door control unit, Aerial reader unit for keyless entry system	178
4. Driver side central locking lock unit, Driver door control unit	179
5. Operating unit for window regulator in driver door, Driver door control unit	180
6. Childproof lock button, Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	181
7. Mirror adjustment switch, Alarm system off switch, Driver door control unit	182
8. Driver door control unit, Driver side mirror adjustment motor	183
9. Button for lane change assist, Driver door control unit, Lane change assist warning lamp in driver side exterior mirror	184
10. Driver side interior locking switch, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver door opener illumination bulb	185
11. Rear lid remote release button, Fuel tank flap release button, Driver door control unit, Driver side door warning lamp, Front left entry light	186
12. Driver seat memory operating unit, Emergency-off button, Seat memory position button 1, Driver seat memory function button, Driver door control unit	187
13. Front passenger door control unit	188
14. Front passenger door exterior handle switch, Front passenger door exterior handle contact sensor, Front passenger door control unit	189
15. Front passenger side central locking lock unit, Front passenger door control unit	190
16. Window regulator switch in front passenger door, Front passenger side interior locking switch, Front passenger door control unit	191
17. Front passenger door control unit, Front passenger door opener illumination bulb, Front passenger side window regulator motor, Front right entry light, Front passenger side door warning lamp	192
18. Front passenger door control unit, Front passenger side mirror adjustment motor, Heated exterior mirror on front passenger side	193
19. Front passenger door control unit, Front passenger side turn signal repeater bulb, Front passenger side automatic anti-dazzle exterior mirror	194
20. Front passenger seat memory operating unit, Front passenger door control unit	195
21. Contact sensor for rear left exterior door handle, Rear left door control unit	196
22. Rear left central locking lock unit, Rear left door exterior handle switch, Rear left door control unit	197
23. Rear left window regulator switch, in door, Rear left door control unit, Rear left ashtray illumination bulb, Rear left window regulator motor	198
24. Rear left interior locking switch, Rear left door control unit, Rear left door opener illumination bulb, Rear left entry light, Rear left door warning lamp	199
25. Rear right door exterior handle central locking button, Contact sensor for rear right exterior door handle, Rear right door control unit	200
26. Rear right central locking lock unit, Rear right door exterior handle switch, Rear right door control unit	201
27. Rear right window regulator switch, in door, Rear right door control unit, Rear right ashtray illumination bulb, Rear right window regulator motor	202
28. Rear right interior locking switch, Rear right door control unit, Rear right door opener illumination bulb, Rear right door warning lamp	203
29. Convenience system central control unit	204
30. Interior monitoring sensor, Alarm horn, Convenience system central control unit	205
31. Release button for rear lid lock cylinder. Rear right side window glass breakage sensor.	206



Convenience system central control unit, Rear lid central locking motor	
32. Convenience system central control unit, Power latching control unit	207
33. Button to close rear lid in luggage compartment, Rear lid control unit, Rear lid control unit 2, Motor in rear lid control unit	208
34. Rear lid closed sender 1, Rear lid closed sender 2, Convenience system central control unit 2	209
018 - Entry and start authorisation	210-216
1. Entry and start authorisation	210
2. Voltage supply, fuses	211
3. Entry and start authorisation control unit, entry and start authorisation switch, fuses	212
4. Entry and start authorisation control unit, entry and start authorisation button, entry and start authorisation switch	213
5. Entry and start authorisation control unit, entry and start authorisation switch, gear selector position P switch	214
6. Aerial reader unit for keyless entry system, fuses	215
7. Aerial reader unit for keyless entry system, aerals for entry and start authorisation	216
019 - Lane change assist	217-220
1. Lane change assist	217
2. Lane change assist control unit, fuses	218
3. Lane change assist control unit, lane change assist control unit 2, button for lane change assist, lane change assist warning lamp	219
4. Lane change assist control unit 2, lane change assist warning lamp in driver side exterior mirror, lane change assist warning lamp in front passenger side exterior mirror	220
020 - Reversing camera system	221-223
1. Reversing camera system	221
2. Reversing camera system control unit, fuses	222
3. Reversing camera system control unit, reversing camera	223
021 - Communication	224-243
1. Communication	224
2. Data bus diagnostic interface, fuses	225
3. Data bus diagnostic interface, control unit in dash panel insert	226
4. Front information display and operating unit control unit, fuses	227
5. Front information display and operating unit control unit, multimedia system operating unit, glove compartment button, display unit button	228
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	229
7. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	230
8. Media player in position 1 and 2	231
9. Telephone (9ZJ), telephone transmitter and receiver unit, aerial for Bluetooth	232
10. Telephone transmitter and receiver unit, telephone handset, microphone unit in front roof module, radio, telephone and navigation system aerial	233
11. Preparation for mobile telephone (9ZF / 9ZG), telephone transmitter and receiver unit, microphone unit in front roof module, aerial for Bluetooth	234
12. Telephone transmitter and receiver unit, mobile telephone, telephone bracket, radio, telephone and navigation system aerial	235
13. Bluetooth car phone (9ZW), telephone transmitter and receiver unit, telephone transmitter and receiver unit, aerial amplifier for mobile telephone, aerial for Bluetooth	236
14. Telephone transmitter and receiver unit, radio, telephone and navigation system aerial, mobile telephone, telephone bracket, microphone unit in front roof module	237
15. Radio, fuses	238
16. Radio, language input control unit	239
17. TV tuner, aerial amplifier	240
18. TV tuner, aerial amplifier	241
19. TV tuner, digital radio, aerial amplifier	242
20. Navigation system with CD drive control unit, radio, telephone and navigation system aerial	243
022 - MMI standard DSP-soundsystem (9VD)	244-247
1. MMI standard DSP-soundsystem (9VD)	244
2. Digital sound package control unit, microphone unit in front roof module, fuses	245
3. Digital sound package control unit, front left treble loudspeaker, front left and right bass loudspeaker, front left mid-range loudspeaker, centre mid-range and treble loudspeaker	246
4. Digital sound package control unit, rear left and right treble loudspeaker, front right treble loudspeaker, front right mid-range loudspeaker, rear left and right mid-range and bass loudspeaker	247
023 - MMI with BOSE soundsystem (8RY)	248-253
1. MMI with BOSE soundsystem (8RY)	248
2. Digital sound package control unit, fuses	249
3. Digital sound package control unit, front left treble loudspeaker, front left bass loudspeaker.	250

front left mid-range loudspeaker, centre mid-range and treble loudspeaker, middle loudspeaker	
4. Digital sound package control unit, front right treble loudspeaker, front right bass loudspeaker, front right mid-range loudspeaker, rear left and right mid-range loudspeaker	251
5. Digital sound package control unit, rear left and right treble loudspeaker, rear left and right mid-range and bass loudspeaker	252
6. Digital sound package control unit, microphone unit in front roof module, internal microphone	253
024 - MMI	254-263
1. MMI	254
2. Front information display and operating unit control unit, fuses	255
3. Front information display and operating unit control unit, multimedia system operating unit, glove compartment button, display unit button	256
4. Front information display and operating unit control unit, display unit for front information display and operating unit control unit, digital sound package control unit	257
5. Front information display and operating unit control unit, aerial amplifier, radio, telephone and navigation system aerial	258
6. Data bus diagnostic interface, fuses	259
7. Data bus diagnostic interface	260
8. Media player in position 1, telephone transmitter and receiver unit, aerial for Bluetooth	261
9. Telephone transmitter and receiver unit, telephone bracket, mobile telephone, microphone unit in front roof module	262
10. Aerial amplifier for mobile telephone, digital radio, radio, telephone and navigation system aerial, aerial amplifier 4	263
025 - MMI basic (8DN)	264-269
1. MMI basic (8DN)	264
2. Front information display and operating unit control unit, fuses	265
3. Front information display and operating unit control unit, glove compartment button, multimedia system operating unit, display unit button	266
4. Front information display and operating unit control unit, display unit for front information display and operating unit control unit, front left treble loudspeaker, front left bass loudspeaker	267
5. Front information display and operating unit control unit, rear left and right treble loudspeaker, front right treble loudspeaker, front right bass loudspeaker, rear left and right mid-range and bass loudspeaker	268
6. Front information display and operating unit control unit, aerial amplifier	269
026 - Preparation for mobile telephone (9ZF / 9ZG)	270-273
1. Preparation for mobile telephone (9ZF / 9ZG)	270
2. Telephone transmitter and receiver unit, fuses	271
3. Telephone transmitter and receiver unit, mobile telephone, telephone bracket	272
4. Telephone transmitter and receiver unit, microphone unit in front roof module, aerial for Bluetooth, aerial amplifier for mobile telephone, radio, telephone and navigation system aerial	273
027 - Telephone (9ZJ)	274-277
1. Telephone (9ZJ)	274
2. Telephone transmitter and receiver unit, fuses	275
3. Telephone transmitter and receiver unit, telephone bracket, aerial for Bluetooth	276
4. Telephone transmitter and receiver unit, microphone unit in front roof module, radio, telephone and navigation system aerial	277
028 - Navigation system (7Q2)	278-279
1. Navigation system (7Q2)	278
2. Navigation system with CD drive control unit	279
029 - Electric seat adjustment with memory driver seat	280-285
1. Electric seat adjustment with memory driver seat	280
2. Seat and steering column adjustment control unit with memory function	281
3. Seat and steering column adjustment control unit with memory, seat longitudinal adjustment button, rake adjustment button, seat height adjustment button, backrest adjustment button	282
4. Seat and steering column adjustment control unit with memory function, driver seat rake adjustment motor, driver seat height adjustment motor, seat longitudinal adjustment motor	283
5. Seat and steering column adjustment control unit with memory function, driver seat lumbar support adjustment switch, driver seat backrest adjustment motor	284
6. Driver seat memory operating unit, emergency-off button, driver door control unit	285
030 - Electric seat adjustment with memory front passenger seat	286-291
1. Electric seat adjustment with memory front passenger seat	286
2. Front passenger seat adjustment with memory control unit, fuse	287
3. Front passenger seat adjustment with memory control unit, seat longitudinal adjustment button, rake adjustment button, seat height adjustment button, backrest adjustment button	288
4. Front passenger seat adjustment with memory control unit, front passenger seat rake adjustment motor, front passenger seat height adjustment motor, seat longitudinal adjustment motor	289
5. Seat and steering column adjustment control unit with memory front passenger seat lumbar support	290

adjustment switch, front passenger seat backrest adjustment motor, front passenger seat lumbar support longitudinal adjustment motor, front passenger seat lumbar support height adjustment motor	
6. Front passenger seat memory operating unit, front passenger side emergency off button, front passenger door control unit	291
031 - Electric seat adjustment without memory driver seat, electric seat adjustment without memory front passenger	292-295
1. Electric seat adjustment without memory driver seat, electric seat adjustment without memory front passenger	292
2. Driver seat adjustment switch, driver seat adjustment motors, fuse	293
3. Lumbar support adjustment switch, lumbar support longitudinal adjustment motor, lumbar support height adjustment motor	294
4. Front passenger seat adjustment switch, front passenger seat adjustment motor	295
032 - Driver seat electric lumbar support adjustment, front passenger seat electric lumbar support adjustment	296-298
1. Driver seat electric lumbar support adjustment, front passenger seat electric lumbar support adjustment	296
2. Driver seat lumbar support adjustment switch, driver seat lumbar support adjustment motor, fuses	297
3. Front passenger seat lumbar support adjustment switch, front passenger seat lumbar support adjustment motor, fuses	298
033 - Heated front and rear seats	299-305
1. Heated front and rear seats	299
2. Climatronic control unit, heated driver seat regulator, heated front passenger seat regulator, fuses	300
3. Front left seat temperature sender, front right seat temperature sender, heated driver seat cushion, heated driver seat backrest, heated front passenger seat cushion, heated front passenger seat backrest	301
4. Heated rear left seat switch with regulator, heated rear right seat switch with regulator, fuses	302
5. Heated rear seat, without rear Climatronic operating and display unit, rear left and right seat temperature sensor, rear seat occupied sensor on driver and front passenger side	303
6. Heated rear seat with rear Climatronic operating and display unit, rear left seat temperature sensor, rear seat occupied sensor on driver side	304
7. Heated rear seat with rear Climatronic operating and display unit, rear right seat temperature sensor, rear seat occupied sensor on front passenger side	305
034 - Lane departure warning	306-308
1. Lane departure warning	306
2. Lane departure warning control unit, windscreen heater for lane departure warning, fuse	307
3. Data bus diagnostic interface, steering column electronics control unit, lane departure warning button, steering wheel vibration motor	308
035 - Electrical sunroof (Open-sky-System) 3FU	309-313
1. Electrical sunroof (Open-sky-System) 3FU	309
2. Convenience system central control unit 2, fuses	310
3. Sliding sunroof adjustment control unit, sliding sunroof adjustment regulator, sliding sunroof motor	311
4. Sliding sunroof adjustment control unit, sunroof switch, sliding sunroof motor, button 1 for tilting roof, button 1 for roof roller blind	312
5. Rear sliding sunroof switch, sunroof roller blind control unit, rear sliding sunroof switch, rear sliding sunroof motor, sunroof roller blind motor, button 2 for tilting roof, button 2 for roof roller blind	313
036 - Multifunction steering wheel	314-318
1. Multifunction steering wheel	314
2. Steering column electronics control unit, fuses	315
3. Steering column electronics control unit, operating unit in steering wheel, Tiptronic switch in steering wheel to shift down, multifunction buttons on left in steering wheel, multifunction steering wheel control unit	316
4. Steering column electronics control unit, Tiptronic switch in steering wheel to shift up, multifunction buttons on right in steering wheel, steering wheel heater button, horn plate	317
5. Steering column electronics control unit, airbag coil connector and return spring with slip ring, driver side airbag igniter, heated steering wheel	318
037 - Headlight for gaseous discharge light (Bixenon) and automatic headlight range control	319-324
1. Headlight for gaseous discharge light (Bixenon) and automatic headlight range control	319
2. Onboard power supply control unit, fuses	320
3. Onboard supply control unit, light switch, left and right fog light bulb	321
4. Onboard supply control unit, left gas discharge light control unit	322
5. Onboard supply control unit, right gas discharge light control unit	323
6. Control unit for headlight range control, rear left vehicle level sender, front left vehicle level sender	324



038 - Headlight for gaseous discharge light (Bixenon), cornering light and automatic headlight range control	325-331
1. Headlight for gaseous discharge light (Bixenon), cornering light and automatic headlight range control	325
2. Fuses	326
3. Onboard supply control unit, left fog light bulb, right fog light bulb	327
4. Onboard supply control unit, light switch, fog light switch, rear fog light switch	328
5. Onboard supply control unit, cornering light and headlight range control unit	329
6. Onboard supply control unit, cornering light and headlight range control unit	330
7. Control unit for headlight range control, rear left vehicle level sender, front left vehicle level sender	331
039 - Infotainment data bus (Most-Ring)	332-336
1. Infotainment data bus (Most-Ring)	332
2. MMI basic	333
3. MMI basic plus	334
4. MMI	335
5. MMI	336
040 - Ringbreak diagnosis	337-339
1. Ringbreak diagnosis	337
2. Ringbreak diagnosis	338
3. Ringbreak diagnosis	339
041 - CAN separating connector	340-351
1. CAN separating connector	340
2. 46-pin connector	341
3. 46-pin connector	342
4. 46-pin connector	343
5. 46-pin connector	344
6. 46-pin connector	345
7. 46-pin connector	346
8. 46-pin connector	347
9. 46-pin connector	348
10. 46-pin connector	349
11. Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness	350
12. Connection 1 (CAN bus extended high), in main wiring harness, Connection 1 (CAN bus extended low), in main wiring harness	351
042 - Audi Q7 3.6 I Fuel injection engine (206 kW - 6 cylinder), engine code BHK, BHL	352-371
1. Audi Q7 3.6 I Fuel injection engine (206 kW - 6 cylinder), engine code BHK, BHL	352
2. Battery, energy management control unit, battery isolation igniter, fuses	353
3. Starter, alternator, starter motor relay, starter motor relay 2, slave start socket	354
4. Engine control unit, Motronic current supply relay	355
5. Engine control unit, fuses	356
6. Engine control unit, injector for cylinders 1 - 3, ignition coil 1 - 3 with output stage	357
7. Engine control unit, injector for cylinders 4 -6, ignition coil 4 -6 with output stage, heater element for crankcase breather	358
8. Engine control unit, engine speed sender, knock sensor, coolant temperature sender	359
9. Engine control unit, Hall sender, fuel pressure sender	360
10. Engine control unit, radiator outlet coolant temperature sender, brake servo pressure sensor, fuel pressure sender for low pressure	361
11. Engine control unit, activated charcoal filter system solenoid valve 1, inlet camshaft control valve 1, fuel metering valve, intake manifold flap valve, exhaust camshaft control valve 1, throttle valve module	362
12. Engine control unit, accelerator position sender, air mass meter	363
13. Engine control unit, engine component current supply relay, lambda probe, lambda probe heater	364
14. Engine control unit, lambda probe after catalytic converter, lambda probe 1 heater after catalytic converter, clutch pedal switch	365
15. Engine control unit, brake servo relay, fuel system diagnostic pump	366
16. Engine control unit, brake light switch, brake pedal switch	367
17. Engine control unit, continued coolant circulation relay, circulation pump relay	368
18. Engine control unit, radiator fan control unit, radiator fan control unit 2, high pressure sender	369
19. Control unit in dash panel insert, fuel pump control unit, fuel gauge sender, fuel system pressurisation pump, fuel gauge sender 2	370
20. Control unit in dash panel insert, oil pressure switch, coolant shortage indicator switch, oil level and oil temperature sender, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp	371

043 - Automatic gearbox 0AT	372-375
1. Automatic gearbox 0AT	372
2. Automatic gearbox control unit, fuses	373
3. Automatic gearbox control unit, selector lever sensors control unit, Tiptronic switch, selector lever position display	374
4. Automatic gearbox control unit, gear selector position P switch, selector lever lock solenoid	375
044 - Rear parking aid	376-378
1. Rear parking aid	376
2. Parking aid control unit, fuses	377
3. Parking aid control unit, rear parking aid sender, rear parking aid warning buzzer	378
045 - Navigation system China (7T4)	379-384
1. Navigation system China (7T4)	379
2. Navigation system with CD drive control unit	380
3. Navigation system with CD drive control unit, front information display and operating unit control unit, radio, telephone and navigation system aerial	381
4. Front information display and operating unit control unit, multimedia system operating unit, display unit button, glove compartment button	382
5. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	383
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	384
046 - Communication Japan (8DZ, 7Q6, QV1, 7D0)	385-402
1. Communication Japan (8DZ, 7Q6, QV1, 7D0)	385
2. Data bus diagnostic interface, fuses	386
3. Data bus diagnostic interface, control unit in dash panel insert	387
4. Front information display and operating unit control unit, fuses	388
5. Front information display and operating unit control unit, multimedia system operating unit, glove compartment button, display unit button	389
6. Front information display and operating unit control unit, display and operating unit change-over unit	390
7. Front information display and operating unit control unit, display and operating unit change-over unit, navigation system with CD drive control unit	391
8. Navigation system with CD drive control unit, display and operating unit change-over unit, display unit for front information display and operating unit control unit	392
9. Navigation system with CD drive control unit, display unit for front information display and operating unit control unit, display and operating unit change-over unit	393
10. Navigation system with CD drive control unit, telephone transmitter and receiver unit, microphone unit in front roof module	394
11. Navigation system with CD drive control unit, telephone transmitter and receiver unit, mobile telephone, telephone bracket	395
12. Navigation system with CD drive control unit, chip card reader control unit, traffic data aerial	396
13. Navigation system with CD drive control unit, chip card reader control unit, traffic data aerial, radio, telephone and navigation system aerial	397
14. Media player in position 1 and 2	398
15. Radio, TV tuner	399
16. TV tuner, aerial amplifier	400
17. TV tuner, aerial amplifier	401
18. TV tuner, aerial amplifier, entry and start authorisation switch	402
047 - Communication USA (QU0, QV4, 7Q2, 9ZG, 7A2, 7A6)	403-417
1. Communication USA (QU0, QV4, 7Q2, 9ZG, 7A2, 7A6)	403
2. Data bus diagnostic interface, fuses	404
3. Data bus diagnostic interface, control unit in dash panel insert	405
4. Front information display and operating unit control unit, fuses	406
5. Front information display and operating unit control unit, glove compartment button, multimedia system operating unit, display unit button	407
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	408
7. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	409
8. Media player in position 1 and 2	410
9. Preparation for mobile telephone (9ZG), telephone transmitter and receiver unit, aerial for Bluetooth, microphone unit in front roof module	411
10. Telephone transmitter and receiver unit, radio, telephone and navigation system aerial, mobile telephone, telephone bracket	412
11. Radio, fuses	413
12. Radio. language input control unit	414

13. Aerial amplifier	415
14. Satellite radio, aerial amplifier	416
15. Navigation system with CD drive control unit, radio, telephone and navigation system aerial	417
048 - Special vehicle NEF (F4Z)	418-425
1. Special vehicle NEF (F4Z)	418
2. Battery, terminal 15 voltage supply relay, energy management control unit, battery isolation igniter, fuses	419
3. Slave start socket, fuses	420
4. Signal system control unit, fuses	421
5. Signal system control unit, magnetic flashing light, loudspeaker for special signals	422
6. Signal system control unit, operating unit for special signals	423
7. Operating unit for special signals, dual tone horn relay, treble tone horn, bass tone horn	424
8. Two-way radio cut-off relay, two-way radio	425
049 - Preparation for mobile telephone with Bluetooth car phone (9ZW)	426-428
1. Preparation for mobile telephone with Bluetooth car phone (9ZW)	426
2. Telephone transmitter and receiver unit, fuses	427
3. Telephone transmitter and receiver unit, telephone bracket, aerial for Bluetooth, microphone unit in front roof module, radio, telephone and navigation system aerial	428
050 - Preparation for mobile telephone (9ZD)	429-431
1. Preparation for mobile telephone (9ZD)	429
2. Preparation for mobile telephone	430
3. Preparation for mobile telephone	431
051 - Direct sight (Side View) Japan	432-434
1. Direct sight (Side View) Japan	432
2. Direct sight (Side View)	433
3. Direct sight (Side View)	434
052 - Trailer towing attachment (USA)	435-438
1. Trailer towing attachment (USA)	435
2. Trailer detector control unit, fuses	436
3. Trailer detector control unit	437
4. Trailer detector control unit, brake booster	438
053 - Audi Q7 4.2 I - TDI, Common Rail (240 kW - 8-cylinder), engine code BTR	439-463
1. Audi Q7 4.2 I - TDI, Common Rail (240 kW - 8-cylinder), engine code BTR	439
2. Battery, energy management control unit, battery isolation igniter, fuses	440
3. Starter, alternator, starter motor relay, starter motor relay 2, slave start socket	441
4. Automatic glow period control unit, glow plugs	442
5. Glow period control unit 2, glow plugs	443
6. Engine control unit, terminal 30 voltage supply relay	444
7. Engine control unit	445
8. Engine control unit, coolant temperature sender, fuel temperature sender, fuel pressure sender, injector, cylinder 1, 4, 6 and 7	446
9. Engine control unit, throttle valve module, air mass meter, accelerator position sender	447
10. Engine control unit, Hall sender, oil temperature sender, charge air pressure sender, intake air temperature sender, pressure differential sender	448
11. Engine control unit, engine speed sender, exhaust gas recirculation potentiometer, exhaust gas recirculation control motor	449
12. Engine control unit, turbocharger control unit, intake manifold flap motor	450
13. Engine control unit, heater element for crankcase breather, fuel pressure regulating valve, fuel metering valve, exhaust gas recirculation cooler change-over valve	451
14. Engine control unit, brake light switch, clutch pedal switch, brake pedal switch	452
15. Engine control unit, exhaust gas temperature sender 1, temperature sender before particulate filter	453
16. Engine control unit, lambda probe, fuel cooling pump relay, fuel cooling pump relay	454
17. Engine control unit, continued coolant circulation relay, coolant circulation pump, fuel pump relay for auxiliary heater	455
18. Engine control unit, radiator fan control unit, radiator fan	456
19. Engine control unit 2	457
20. Engine control unit 2, air mass meter 2, Injector for cylinder 2, 3, 5 and 8	458
21. Engine control unit 2, exhaust gas recirculation potentiometer 2, throttle valve module 2, exhaust gas recirculation control motor 2	459
22. Engine control unit 2, high pressure sender, pressure differential sender 2, intake manifold flap 2 motor	460
23. Engine control unit 2, lambda probe 2, bank 2 exhaust gas temperature sender 1, lambda probe 2 heater, temperature sender 2 before particulate filter	461
24. Fuel pump relay, oil level and oil temperature sender	462
25. Fuel gauge sender. oil pressure switch	463

054 - Communication Japan (8DZ, 7Q6, QV1, 7D0)	464-480
1. Communication Japan (8DZ, 7Q6, QV1, 7D0)	464
2. Data bus diagnostic interface, fuses	465
3. Data bus diagnostic interface, control unit in dash panel insert	466
4. Front information display and operating unit control unit, fuses	467
5. Front information display and operating unit control unit, multimedia system operating unit, glove compartment button, display unit button	468
6. Front information display and operating unit control unit, display unit for front information display and operating unit control unit	469
7. Front information display and operating unit control unit, display unit for front information display and operating unit control unit, navigation system with CD drive control unit	470
8. Navigation system with CD drive control unit, front information display and operating unit control unit	471
9. Navigation system with CD drive control unit, telephone transmitter and receiver unit, microphone unit in front roof module	472
10. Navigation system with CD drive control unit, telephone transmitter and receiver unit, mobile telephone, telephone bracket	473
11. Navigation system with CD drive control unit, chip card reader control unit, traffic data aerial	474
12. Navigation system with CD drive control unit, chip card reader control unit, traffic data aerial, radio, telephone and navigation system aerial	475
13. DVD player, CD changer, MiniDisc player, connection for external audio source	476
14. Radio, TV tuner	477
15. TV tuner, aerial amplifier	478
16. TV tuner, TV card reader, aerial amplifier	479
17. TV tuner, aerial amplifier, entry and start authorisation switch	480
055 - Radio High-End-Sound system BANG and OLUFSEN (8RF)	481-488
1. Radio High-End-Sound system BANG and OLUFSEN (8RF)	481
2. Digital sound package control unit, fuses	482
3. Digital sound package control unit, microphone unit in front roof module, internal microphone	483
4. Digital sound package control unit, front left treble loudspeaker, front left and right mid-range loudspeaker, centre mid-range and treble loudspeaker, control motor for front left treble speaker	484
5. Digital sound package control unit, rear left and right treble loudspeaker, front right treble loudspeaker, rear left mid-range loudspeaker, control motor for front right treble speaker	485
6. Digital sound package control unit, digital sound packet control unit 2, rear right mid-range loudspeaker	486
7. Digital sound package control unit, digital sound package control unit 2	487
8. Digital sound packet control unit 2, front left and right bass loudspeaker, bass loudspeaker, rear left and right mid-range and bass loudspeaker	488
056 - 3.0 I TDI, Common Rail (155 kW - 6 cylinder), engine code CASB	489-507
1. 3.0 I TDI, Common Rail (155 kW - 6 cylinder), engine code CASB	489
2. Battery, energy management control unit, battery monitor control unit, battery isolation igniter, fuses	490
3. Starter, alternator, starter motor relay, starter motor relay 2, slave start socket	491
4. Automatic glow period control unit, glow plugs	492
5. Engine control unit, terminal 30 voltage supply relay	493
6. Engine control unit	494
7. Engine control unit, injectors for cylinders 1 up to 6, air mass meter	495
8. Engine control unit, accelerator position sender, charge air pressure sender, intake air temperature sender, fuel pressure regulating valve, fuel metering valve	496
9. Engine control unit, fuel pressure sender, intake manifold flap motor 2, exhaust gas recirculation control motor	497
10. Engine control unit, exhaust gas pressure sensor 1, turbocharger 1 control unit, intake manifold flap motor	498
11. Engine control unit, engine speed sender, Hall sender, radiator outlet coolant temperature sender	499
12. Engine control unit, throttle valve module, exhaust gas recirculation cooler change-over valve	500
13. Engine control unit, brake light switch, clutch pedal switch, brake pedal switch	501
14. Engine control unit, lambda probe, exhaust gas temperature sender 1, exhaust gas temperature sender 3, exhaust gas recirculation temperature sensor	502
15. Engine control unit, fuel cooling pump relay, high pressure sender, fuel cooling pump, exhaust gas recirculation cooler motor	503
16. Engine control unit, continued coolant circulation relay, coolant circulation pump, fuel pump relay for auxiliary heater	504
17. Engine control unit, fuel pump relay, radiator fan control unit, radiator fan	505
18. Control unit in dash panel insert, relay for supplementary fuel pump, fuel gauge sender, fuel system pressurisation pump, fuel gauge sender 2	506

19. Control unit in dash panel insert, oil pressure switch, coolant shortage indicator switch, oil level and oil temperature sender, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp	507
057 - Rear-Seat-Entertainment (RSE) plus (9WP)	508-520
1. Rear-Seat-Entertainment (RSE) plus (9WP)	508
2. Trailer detector control unit, fuses	509
3. Multimedia control unit	510
4. Multimedia control unit, multimedia headphones for left side	511
5. Multimedia control unit, multimedia headphones for right side, additional connections unit for audio and video	512
6. Multimedia control unit, additional connections unit for audio and video	513
7. Multimedia control unit, rear DVD changer	514
8. Multifunction unit control unit, multimedia display unit 1	515
9. Multifunction unit control unit, multimedia display unit 2	516
10. Multimedia control unit, TV tuner	517
11. Multimedia control unit, TV tuner	518
12. Front information display and operating unit control unit, fuses	519
13. Front information display and operating unit control unit, multimedia system operating unit, glove compartment button, display unit button	520
058 - Rear-Seat-Entertainment (RSE) (9WK)	521-529
1. Rear-Seat-Entertainment (RSE) (9WK)	521
2. Trailer detector control unit, fuses	522
3. Multimedia control unit	523
4. Multimedia control unit, multimedia headphones for left side	524
5. Multimedia control unit, multimedia headphones for right side, additional connections unit for audio and video	525
6. Multimedia control unit, additional connections unit for audio and video	526
7. Multimedia control unit, rear DVD changer	527
8. Multifunction unit control unit, multimedia display unit 1	528
9. Multifunction unit control unit, multimedia display unit 2	529
059 - Preparation for multimedia (9WM)	530-531
1. Preparation for multimedia (9WM)	530
2. Preparation for multimedia (9WM)	531
060 - Basic equipment	532-572
1. Basic equipment	532
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter, Jump start socket	533
3. Terminal 75x voltage supply relay	534
4. Entry and start authorisation switch, Fuse carrier 1	535
5. Entry and start authorisation button, Entry and start authorisation switch, Aerial reader unit for keyless entry system	536
6. Entry and start authorisation switch, Gear selector position P switch, Aerial amplifier 4	537
7. Turn signal switch, Intermittent wiper switch, Horn plate, Steering column electronics control unit	538
8. Cruise control system switch, Steering column adjustment switch, Steering angle sender, Steering column electronics control unit	539
9. Onboard supply control unit, Fuse carrier 2	540
10. Light switch, Headlight range control regulator, Onboard supply control unit	541
11. Hazard warning lights button, TCS and ESP button, Onboard supply control unit	542
12. Onboard supply control unit	543
13. Onboard supply control unit	544
14. Bonnet contact switch, Headlight washer system relay, Onboard supply control unit, Left fog light bulb, Right fog light bulb, Headlight washer system pump, Left footwell light, Right footwell light	545
15. Treble horn, Bass horn, Dual tone horn relay, Onboard supply control unit	546
16. Rain and light sensor, Wiper motor control unit, Rear window wiper motor, Windscreen and rear window washer pump	547
17. Glove compartment light switch, Glove compartment light, Left washer jet heater element, Right washer jet heater element	548
18. Fuse carrier 3	549
19. Convenience system central control unit, Fuse carrier 1, 12 V socket 5	550
20. Convenience system central control unit, Left tail light	551
21. Convenience system central control unit, Right tail light	552
22. Convenience system central control unit, Left tail light	553
23. Convenience system central control unit, Right tail light	554
24. Release button for rear lid lock cylinder. Convenience system central control unit. Additional	555



brake light bulb, Tank filler flap locking motor	
25. Heated rear window relay, Convenience system central control unit, Heated rear window single fuse, Rear left footwell light, Rear right footwell light, Heated rear window	556
26. Brake light switch, Brake pedal switch, Convenience system central control unit, Brake light suppression relay	557
27. Convenience system central control unit, Convenience system central control unit 2, Luggage compartment light on left, Right luggage compartment light, Rear lid light	558
28. Rear lid closed sender 1, Convenience system central control unit 2, Rear interior light	559
29. Onboard supply control unit 2, Servotronic solenoid valve	560
30. Parking aid button, Glove compartment button, Operating unit in front of centre console, Display unit button, Onboard supply control unit 2, Parking aid warning lamp, Glove compartment release motor	561
31. Control unit in dash panel insert, Data bus diagnostic interface	562
32. Control unit in dash panel insert, Data bus diagnostic interface	563
33. Brake fluid level warning contact, Front left brake pad wear sender, Rear right brake pad wear sender, Control unit in dash panel insert	564
34. Oil pressure switch, Ambient temperature sensor, Control unit in dash panel insert	565
35. Parking brake contact switch, Oil level and oil temperature sender, Control unit in dash panel insert, Radio controlled clock receiver	566
36. Fuel system pressurisation pump, Fuel pump, Control unit in dash panel insert, Ashtray illumination bulb	567
37. Cigarette lighter, 12 V socket 2, 12 V socket 3, 12 V socket 4	568
38. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch	569
39. Rear left interior light	570
40. Sliding sunroof adjustment regulator	571
41. Humidity sender, Light sensor, Main beam assist control unit, Automatic anti-dazzle interior mirror	572
061 - Electric tyre pressure monitor positive (7K6)	573-575
1. Electric tyre pressure monitor positive (7K6)	573
2. Tyre pressure monitor control unit, fuses	574
3. Tyre pressure monitor control unit, ABS control unit	575
062 - Interface for special functions	576-578
1. Interface for special functions	576
2. Vehicle location system fuse, 12-pin connector	577
3. 12-pin connector	578
063 - Refrigerator box	579-580
1. Refrigerator box	579
2. Refrigerator box, fuses	580
064 - Audi Q7 3.0 I - TDI, Common Rail (176 kW - 6-cylinder), engine code CCMA	581-606
1. Audi Q7 3.0 I - TDI, Common Rail (176 kW - 6-cylinder), engine code CCMA	581
2. Battery, terminal 15 voltage supply relay, battery monitor control unit, battery isolation igniter, fuses	582
3. Starter, alternator, starter motor relay, starter motor relay 2, slave start socket	583
4. Automatic glow period control unit, glow plugs	584
5. Automatic glow period control unit, glow plugs	585
6. Engine control unit, terminal 30 voltage supply relay	586
7. Engine control unit	587
8. Engine control unit, injectors for cylinders 1 up to 6, air mass meter	588
9. Engine control unit, accelerator position sender, charge air pressure sender, intake air temperature sender, fuel pressure regulating valve, fuel metering valve	589
10. Engine control unit, Hall sender, fuel pressure sender, intake manifold flap motor, exhaust gas recirculation control motor	590
11. Engine control unit, intake manifold flap 2 motor, turbocharger 1 control unit, pressure differential sender	591
12. Engine control unit, engine speed sender, coolant temperature sender, fuel temperature sender, exhaust temperature sender 2, radiator outlet coolant temperature sender	592
13. Engine control unit, throttle valve module, exhaust gas recirculation cooler change-over valve, exhaust gas recirculation cooler change-over valve 2, valve for oil pressure control	593
14. Engine control unit, brake light switch, brake light suppression relay	594
15. Engine control unit, catalytic converter temperature sensor 1, exhaust temperature sender 1, exhaust temperature sender 3, exhaust gas recirculation temperature sensor	595
16. Engine control unit, lambda probe, control unit for charge air cooler bypass	596
17. Engine control unit, fuel cooling pump relay, high pressure sender, fuel cooling pump, exhaust gas recirculation cooler motor	597
18. Engine control unit, continued coolant circulation relay, fuel pump relay for auxiliary heater	598
19. Engine control unit. low heat output relay. high heat output relay. auxiliary air heater element.	599

injector for reducing agent	
20. Engine control unit, control unit for reducing agent metering system	600
21. Engine control unit, control unit for reducing agent metering system	601
22. Engine control unit, pump for reducing agent, heater for reducing-agent pump, pressure sender for reducing agent metering system,	602
23. Engine control unit, NOx sender control unit, NOx sender 2 control unit	603
24. Engine control unit, fuel pump relay, radiator fan control unit, radiator fan	604
25. Control unit in dash panel insert, supplementary fuel pump, fuel gauge sender, fuel system pressurisation pump	605
26. Control unit in dash panel insert, coolant shortage indicator switch, oil level and oil temperature sender, oil pressure switch	606
065 - 6.0l diesel engine , CCGA	607-636
1. 6.0l diesel engine , CCGA	607
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter	608
3. Starter, Alternator, Starter motor relay, Starter motor relay 2, Jump start socket	609
4. Automatic glow period control unit, Glow plug 1, Glow plug 3, Glow plug 5, Glow plug 8, Glow plug 10, Glow plug 12	610
5. Glow period control unit 2, Glow plug 2, Glow plug 4, Glow plug 6, Glow plug 7, Glow plug 9, Glow plug 11	611
6. Terminal 30 voltage supply relay, Engine control unit	612
7. Engine control unit	613
8. Coolant temperature sender, Engine control unit, Injector, cylinder 1	614
9. High-pressure sender, Air mass meter, Accelerator position sender, Engine control unit	615
10. Pressure differential sender, Engine control unit, Turbocharger 1 control unit, Intake manifold flap motor	616
11. Engine speed sender, Charge pressure sender, Intake air temperature sender, Engine control unit, Exhaust gas recirculation control motor	617
12. Hall sender, Fuel temperature sender, Engine control unit	618
13. Fuel pressure sender, Pressure sender for exhaust gas recirculation, Engine control unit, Fuel pressure regulating valve, Fuel metering valve	619
14. Brake light switch, Brake pedal switch, Brake light suppression relay, Engine control unit	620
15. Fuel cooling pump relay, Engine control unit, Heater element for crankcase breather, Fuel cooling pump, Pump for exhaust gas recirculation cooler	621
16. Lambda probe, Additional coolant pump relay, Engine control unit, Continued coolant circulation pump	622
17. Continued coolant circulation relay, Engine control unit, Fuel pump relay for auxiliary heater, Coolant circulation pump	623
18. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Engine control unit, Exhaust gas recirculation cooler changeover valve	624
19. Radiator fan control unit, Engine control unit, Radiator fan, Radiator fan 2	625
20. Engine control unit, Engine control unit 2	626
21. Engine control unit 2	627
22. Engine control unit 2, Injector, cylinder 7	628
23. Lambda probe 2, Air mass meter 2, Engine control unit 2	629
24. Pressure differential sender 2, Engine control unit 2, Turbocharger 2 control unit, Intake manifold flap 2 motor	630
25. Fuel pressure sender 2, Pressure sender 2 for exhaust gas recirculation, Engine control unit 2, Exhaust gas recirculation control motor 2	631
26. Temperature sender 2 before particulate filter, Engine control unit 2	632
27. Engine control unit 2, Exhaust gas recirculation cooler changeover valve 2, Fuel metering valve 2, Fuel pressure regulating valve 2	633
28. Fuel system pressurisation pump, Fuel pump, Fuel gauge sender 2, Fuel pump relay	634
29. Oil pressure switch, Coolant shortage indicator switch, Control unit in dash panel insert	635
30. Control unit for structure-borne sound, Actuator for structure-borne sound, Fuse for structure-borne sound control unit	636
066 - Gas discharge headlights (xenon plus) with automatic headlight range control, cornering light, LED daytime running lights , CCGA	637-645
1. Gas discharge headlights (xenon plus) with automatic headlight range control, cornering light, LED daytime running lights , CCGA	637
2. Fuse carrier 2, Fuse carrier 3, Positive connection (15), in main wiring harness	638
3. Onboard supply control unit	639
4. Light switch, Onboard supply control unit	640
5. Onboard supply control unit, Output module for left headlight, Left daytime running light bulb, Left headlight range control motor	641
6. Left gas discharge bulb control unit. Onboard supply control unit. Left gas discharge (xenon)	642

bulb	
7. Onboard supply control unit, Output module for right headlight, Right daytime running light bulb, Right headlight range control motor	643
8. Right gas discharge bulb control unit, Onboard supply control unit, Front right turn signal bulb	644
9. Rear left vehicle level sender, Front left vehicle level sender, Headlight range control unit	645
067 - 4.2l diesel engine , CCFA	646-673
1. 4.2l diesel engine , CCFA	646
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter	647
3. Starter, Alternator, Starter motor relay, Starter motor relay 2, Jump start socket	648
4. Automatic glow period control unit, Glow plug 1, Glow plug 4, Glow plug 6, Glow plug 7	649
5. Glow period control unit 2, Glow plug 2, Glow plug 3, Glow plug 5, Glow plug 8	650
6. Terminal 30 voltage supply relay, Engine control unit	651
7. Engine control unit	652
8. Air mass meter, Engine control unit, Injector, cylinder 1	653
9. Throttle valve module, Engine control unit, Turbocharger 1 control unit	654
10. Pressure differential sender 2, Engine control unit, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Intake manifold flap motor	655
11. Hall sender, Fuel pressure sender, Pressure sender for exhaust gas recirculation, Engine control unit	656
12. Engine speed sender, Fuel temperature sender, Engine control unit, Exhaust gas recirculation control motor	657
13. Charge pressure sender, Intake air temperature sender, Accelerator position sender, Engine control unit	658
14. Brake light switch, Brake pedal switch, Brake light suppression relay, Engine control unit	659
15. Fuel cooling pump relay, Engine control unit, Heater element for crankcase breather, Fuel cooling pump, Pump for exhaust gas recirculation cooler	660
16. Oil pressure switch for reduced oil pressure, Lambda probe, High-pressure sender, Engine control unit	661
17. Oil temperature sender, Exhaust gas temperature sender 1, Temperature sender before particulate filter, Engine control unit	662
18. Continued coolant circulation relay, Engine control unit, Fuel pump relay for auxiliary heater, Continued coolant circulation pump	663
19. Radiator fan control unit, Engine control unit, Fuel pressure regulating valve, Fuel metering valve, Radiator fan, Radiator fan 2	664
20. Engine control unit, Engine control unit 2	665
21. Lambda probe 2, Air mass meter 2, Engine control unit 2	666
22. Engine control unit 2, Injector, cylinder 2	667
23. Throttle valve module 2, Engine control unit 2, Turbocharger 2 control unit	668
24. Radiator outlet coolant temperature sender, Pressure differential sender, Engine control unit 2, Intake manifold flap 2 motor	669
25. Rotational speed sender 2, Pressure sender 2 for exhaust gas recirculation, Engine control unit 2, Exhaust gas recirculation control motor 2	670
26. Temperature sender 2 before particulate filter, Engine control unit 2	671
27. Fuel system pressurisation pump, Fuel pump relay	672
28. Oil pressure switch, Coolant shortage indicator switch, Fuel gauge sender 2, Control unit in dash panel insert	673
068 - Audi Q7 3.6 l Fuel injection engine (206 kW - 6 cylinder), engine code BHK, BHL	674-693
1. Audi Q7 3.6 l Fuel injection engine (206 kW - 6 cylinder), engine code BHK, BHL	674
2. Battery, battery isolation igniter, fuses	675
3. Starter, alternator, starter motor relay, starter motor relay 2, slave start socket	676
4. Engine control unit, Motronic current supply relay	677
5. Engine control unit, fuses	678
6. Engine control unit, injector cylinder 1 up to 3, ignition coil 1 up to 3 with output stage	679
7. Engine control unit, injector for cylinders 4 up to 6, ignition coil 4 up to 6 with output stage, heater element for crankcase breather	680
8. Engine control unit, engine speed sender, knock sensor, coolant temperature sender	681
9. Engine control unit, Hall sender, fuel pressure sender	682
10. Engine control unit, radiator outlet coolant temperature sender, fuel pressure sender for low pressure	683
11. Engine control unit, activated charcoal filter system solenoid valve 1, inlet camshaft control valve 1, fuel metering valve, intake manifold flap valve, exhaust camshaft control valve 1, throttle valve module	684
12. Engine control unit, accelerator position sender, air mass meter	685
13. Engine control unit, engine component current supply relay, lambda probe, lambda probe heater	686
14. Engine control unit. lambda probe after catalytic converter. lambda probe 1 heater after	687

catalytic converter	
15. Engine control unit, fuel system diagnostic pump	688
16. Engine control unit, brake light switch, brake pedal switch	689
17. Engine control unit, continued coolant circulation relay, circulation pump relay	690
18. Engine control unit, radiator fan control unit, radiator fan control unit 2, high pressure sender	691
19. Control unit in dash panel insert, fuel pump control unit, fuel gauge sender, fuel system pressurisation pump, fuel gauge sender 2	692
20. Control unit in dash panel insert, oil pressure switch, coolant shortage indicator switch, oil level and oil temperature sender, oil pressure warning lamp, coolant temperature and coolant shortage warning lamp	693
069 - 4.2l petrol engine , BAR	694-717
1. 4.2l petrol engine , BAR	694
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter	695
3. Starter, Alternator, Starter motor relay, Starter motor relay 2, Jump start socket	696
4. Main relay, Engine control unit	697
5. Engine control unit	698
6. Engine control unit, Ignition coil 1 with output stage, Ignition coil 4 with output stage	699
7. Engine control unit	700
8. Engine control unit, Injector, cylinder 1	701
9. Engine control unit	702
10. Knock sensor 1, Knock sensor 3, Engine control unit	703
11. Engine speed sender, Hall sender, Hall sender 3, Engine control unit	704
12. Coolant temperature sender, Fuel pressure sender, Intake manifold flap potentiometer, Throttle valve module, Engine control unit	705
13. Intake air temperature sender, Hall sender 2, Air mass meter 2, Hall sender 4, Engine control unit	706
14. Radiator outlet coolant temperature sender, Brake servo pressure sensor, Fuel pressure sender for low-pressure, Sender 1 for secondary air pressure, Engine control unit	707
15. Engine control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Secondary air inlet valve 2, Fuel metering valve 2	708
16. High-pressure sender, Accelerator position sender, Secondary air pump relay, Engine control unit, Secondary air pump motor, Fuel system diagnostic pump	709
17. Engine control unit, Camshaft control valve 1, Intake manifold flap valve, Exhaust camshaft control valve 1	710
18. Lambda probe, Engine control unit, Engine component current supply relay	711
19. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Engine control unit	712
20. Brake light switch, Brake pedal switch, Brake light suppression relay, Brake servo relay, Engine control unit, Vacuum pump for brakes	713
21. Radiator fan control unit, Engine control unit, Radiator fan, Radiator fan 2	714
22. Continued coolant circulation relay, Coolant circulation pump	715
23. Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	716
24. Oil pressure switch, Coolant shortage indicator switch, Control unit in dash panel insert	717
070 - Convenience system , (L0L)	718-751
1. Convenience system , (L0L)	718
2. Driver door control unit, Fuse carrier 1	719
3. Driver door exterior handle switch, Driver door exterior handle contact sensor, Driver door control unit, Aerial reader unit for keyless entry system	720
4. Driver side central locking lock unit, Driver door control unit	721
5. Operating unit for window regulator in driver door, Driver door control unit	722
6. Childproof lock button, Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	723
7. Mirror adjustment switch, Alarm system off switch, Driver door control unit	724
8. Driver door control unit, Driver side mirror adjustment motor 2	725
9. Button for lane change assist, Driver door control unit, Lane change assist warning lamp in driver side exterior mirror	726
10. Driver side interior locking switch, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver door opener illumination bulb, Driver door ambient lighting bulb	727
11. Rear lid remote release button, Fuel tank flap release button, Driver door control unit, Driver side door warning lamp, Front left entry light	728
12. Driver seat memory operating unit, Emergency-off button, Seat memory position button 1, Driver seat memory function button, Driver door control unit	729
13. Front passenger door control unit	730

14. Front passenger door exterior handle switch, Front passenger door exterior handle contact sensor, Front passenger door control unit	731
15. Front passenger side central locking lock unit, Front passenger door control unit	732
16. Window regulator switch in front passenger door, Front passenger side interior locking switch, Front passenger door control unit	733
17. Front passenger door control unit, Front passenger door opener illumination bulb, Front passenger door ambient lighting bulb, Front passenger side window regulator motor, Front right entry light, Front passenger side door warning lamp	734
18. Front passenger door control unit, Front passenger side mirror adjustment motor 2, Heated exterior mirror on passenger side	735
19. Front passenger door control unit, Front passenger side turn signal repeater bulb, Automatic anti-dazzle exterior mirror, passenger side	736
20. Front passenger seat memory operating unit, Front passenger door control unit	737
21. Contact sensor for rear left exterior door handle, Rear left door control unit	738
22. Rear left central locking lock unit, Rear left door exterior handle switch, Rear left door control unit	739
23. Rear left window regulator switch, in door, Rear left door control unit, Rear left ashtray illumination bulb, Rear left window regulator motor	740
24. Rear left interior locking switch, Rear left door control unit, Rear left door opener illumination bulb, Rear left door ambient lighting bulb, Rear left entry light, Rear left door warning lamp	741
25. Rear right door exterior handle central locking button, Contact sensor for rear right exterior door handle, Rear right door control unit	742
26. Rear right central locking lock unit, Rear right door exterior handle switch, Rear right door control unit	743
27. Rear right window regulator switch, in door, Rear right door control unit, Rear right ashtray illumination bulb, Rear right window regulator motor	744
28. Rear right interior locking switch, Rear right door control unit, Rear right door opener illumination bulb, Rear right door ambient lighting bulb, Rear right door warning lamp	745
29. Convenience system central control unit	746
30. Interior monitoring sensor, Alarm horn, Convenience system central control unit	747
31. Release button for rear lid lock cylinder, Rear right side window glass breakage sensor, Convenience system central control unit, Rear lid central locking motor	748
32. Convenience system central control unit, Power latching control unit	749
33. Button to close rear lid in luggage compartment, Rear lid control unit, Rear lid control unit 2, Motor in rear lid control unit	750
34. Rear lid closed sender 1, Rear lid closed sender 2, Convenience system central control unit 2	751
071 - Headlight for gas discharge light (Bixenon), cornering light, turning light and automatic dynamic headlight range control	752-760
1. Headlight for gas discharge light (Bixenon), cornering light, turning light and automatic dynamic headlight range control	752
2. Fuses	753
3. Onboard supply control unit, left fog light bulb, right fog light bulb	754
4. Onboard supply control unit, light switch, fog light switch, rear fog light switch	755
5. Onboard supply control unit, left headlight	756
6. Onboard supply control unit, left headlight	757
7. Onboard supply control unit, right headlight	758
8. Onboard supply control unit, right headlight	759
9. Control unit for headlight range control, rear left vehicle level sender, front left vehicle level sender	760
072 - Headlight for gaseous discharge light (Bixenon) and automatic headlight range control	761-766
1. Headlight for gaseous discharge light (Bixenon) and automatic headlight range control	761
2. Onboard power supply control unit, fuses	762
3. Onboard supply control unit, light switch, left and right fog light bulb	763
4. Onboard supply control unit, left headlight	764
5. Onboard supply control unit, right headlight	765
6. Control unit for headlight range control, rear left vehicle level sender, front left vehicle level sender	766
073 - Auxiliary heater, supplementary heater	767-777
1. Auxiliary heater, supplementary heater	767
2. Temperature sensor, Auxiliary heater control unit	768
3. Auxiliary heater control unit, Heater coolant shut-off valve, Remote control receiver for auxiliary heater, Aerial amplifier 2	769
4. Coolant shut-off valve relay	770
5. Fuel system pressurisation pump, Fuel pump relay, Fuel pump relay for auxiliary heater	771
6. Continued coolant circulation relav. Coolant circulation pump	772



7. Continued coolant circulation relay, Circulation pump relay, Coolant pump, Coolant circulation pump	773
8. Fuel system pressurisation pump, Fuel pump relay, Fuel pump relay for auxiliary heater	774
9. Continued coolant circulation relay, Coolant circulation pump	775
10. Fuel system pressurisation pump, Fuel pump, Fuel pump relay, Fuel pump relay for auxiliary heater	776
11. Continued coolant circulation relay, Coolant circulation pump	777
074 - Rear Seat Entertainment (RSE) , (9WC),(9WK),(9WM),(9WP)	778-792
1. Rear Seat Entertainment (RSE) , (9WC),(9WK),(9WM),(9WP)	778
2. Trailer detector control unit, Fuse carrier 3	779
3. Multimedia system control unit	780
4. Multimedia system control unit, Multimedia system headphones for left side	781
5. Multimedia system control unit, Multimedia system headphones for right side, Additional connections unit for audio and video	782
6. Multimedia system control unit, Additional connections unit for audio and video	783
7. Multimedia system control unit, Rear DVD changer	784
8. Multimedia system control unit, Multimedia system display unit 1	785
9. Multimedia system control unit, Multimedia system display unit 2	786
10. Multimedia system control unit, TV tuner	787
11. Multimedia system control unit, TV tuner	788
12. Multimedia system control unit, Digital TV tuner	789
13. Multimedia system control unit, Digital TV tuner	790
14. Control unit 1 for information electronics	791
15. Multimedia system operating unit, Display unit button, Control unit 1 for information electronics	792
075 - Infotainment MOST bus	793-794
1. Infotainment MOST bus	793
2. Control unit 1 for information electronics	794
076 - Ring circuit break diagnostic	795-796
1. Ring circuit break diagnostic	795
2. Connection 1 (diagnosis), in main wiring harness	796
077 - MMI with radio and soundsystem Basic (8RX)	797-802
1. MMI with radio and soundsystem Basic (8RX)	797
2. Radio, voltage supply	798
3. Radio, front left treble loudspeaker, front left bass loudspeaker	799
4. Radio, rear left and right treble loudspeaker, front right treble loudspeaker, front right bass loudspeaker, rear left and right mid-range and bass loudspeaker	800
5. Radio, aerial amplifier 3	801
6. Radio, radio, telephone and navigation system aerial, aerial amplifier	802
078 - MMI with radio and soundsystem standard (9VD)	803-808
1. MMI with radio and soundsystem standard (9VD)	803
2. Radio, voltage supply	804
3. Radio, front left treble loudspeaker, front left and right bass loudspeaker, front left mid-range loudspeaker, centre mid-range and treble loudspeaker	805
4. Radio, rear left and right treble loudspeaker, front right treble loudspeaker, front right mid-range loudspeaker, rear left and right mid-range and bass loudspeaker	806
5. Radio, aerial amplifier 3	807
6. Radio, radio, telephone and navigation system aerial, aerial amplifier	808
079 - MMI with radio and soundsystem BOSE (8RY)	809-817
1. MMI with radio and soundsystem BOSE (8RY)	809
2. Digital sound package control unit, fuses	810
3. Digital sound package control unit, front left treble loudspeaker, front left bass loudspeaker, front left mid-range loudspeaker, centre mid-range and treble loudspeaker, middle loudspeaker	811
4. Digital sound package control unit, front right treble loudspeaker, front right bass loudspeaker, front right mid-range loudspeaker, rear left and right mid-range loudspeaker	812
5. Digital sound package control unit, rear left and right treble loudspeaker, rear left and right mid-range and bass loudspeaker	813
6. Digital sound package control unit, microphone unit in front roof module	814
7. Radio, voltage supply	815
8. Radio, aerial amplifier 3	816
9. Radio, radio, telephone and navigation system aerial, aerial amplifier	817
080 - MMI with radio and soundsystem Premium BANG and OLUFSEN (8RF)	818-828
1. MMI with radio and soundsystem Premium BANG and OLUFSEN (8RF)	818
2. Digital sound package control unit, fuses	819
3. Digital sound package control unit, microphone unit in front roof module	820
4. Digital sound package control unit, front left treble loudspeaker, front left and right mid-range	821

loudspeaker, centre mid-range and treble loudspeaker, control motor for front left treble speaker	
5. Digital sound package control unit, rear left and right treble loudspeaker, front right treble loudspeaker, rear left mid-range loudspeaker, control motor for front right treble speaker	822
6. Digital sound package control unit, digital sound packet control unit 2, rear right mid-range loudspeaker	823
7. Digital sound package control unit, digital sound package control unit 2	824
8. Digital sound packet control unit 2, front left and right bass loudspeaker, bass loudspeaker, rear left and right mid-range and bass loudspeaker	825
9. Radio, voltage supply	826
10. Radio, aerial amplifier 3	827
11. Radio, radio, telephone and navigation system aerial, aerial amplifier	828
081 - TV tuner (MOST bus)	829-833
1. TV tuner (MOST bus)	829
2. TV tuner	830
3. TV tuner, TV card reader	831
4. TV tuner, Aerial amplifier 2	832
5. TV tuner, Aerial amplifier 3	833
082 - MMI with CD changer and DVD player (7D1, 7A6)	834-835
1. MMI with CD changer and DVD player (7D1, 7A6)	834
2. DVD player, CD changer	835
083 - MMI (information electronics 1)	836-845
1. MMI (information electronics 1)	836
2. Control unit 1 for information electronics	837
3. Multimedia system operating unit, Display unit button, Control unit 1 for information electronics	838
4. Control unit 1 for information electronics, Microphone unit in front roof module	839
5. Control unit 1 for information electronics, GPS aerial	840
6. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	841
7. Control unit 1 for information electronics, Connection for external audio sources	842
8. Control unit 1 for information electronics, Connection for external audio sources	843
9. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial	844
10. Chip card reader control unit, Traffic data aerial	845
084 - 3.0l diesel engine , CLZB,CNRB	846-871
1. 3.0l diesel engine , CLZB,CNRB	846
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter	847
3. Starter, Alternator, Starter motor relay, Starter motor relay 2, Jump start socket	848
4. Cylinder 2 combustion chamber pressure sender, Automatic glow period control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	849
5. Terminal 30 voltage supply relay, Engine/motor control unit	850
6. Engine/motor control unit	851
7. Air mass meter, Engine/motor control unit, Injector, cylinder 1	852
8. Charge pressure sender, Intake air temperature sender, Accelerator position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	853
9. Fuel pressure sender, Throttle valve module, Engine/motor control unit, Intake manifold flap motor	854
10. Pressure differential sender, Engine/motor control unit, Turbocharger 1 control unit, Exhaust gas recirculation control motor	855
11. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine speed sender, Hall sender, Coolant temperature sender, Fuel temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit	856
12. Map-controlled engine cooling system thermostat, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Electrohydraulic engine mounting solenoid valve, Valve for oil pressure control, Coolant valve for cylinder head	857
13. Brake light switch, Brake pedal switch, Brake light suppression relay, Engine/motor control unit	858
14. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit	859
15. Lambda probe, Brake servo pressure sensor, Engine/motor control unit	860
16. High-pressure sender, Continued coolant circulation relay, Engine/motor control unit, Coolant circulation pump	861
17. Control unit for NOx sender, Engine/motor control unit, Control unit for NOx sender 2	862
18. Reducing agent tank cap switch, Particulate sensor, Engine/motor control unit	863
19. Low heat output relay, High heat output relay, Engine/motor control unit, Injector for reducing agent. Auxiliary air heater element	864

20. Engine/motor control unit, 3rd stage heating relay, Auxiliary air heater element	865
21. Engine/motor control unit, Control unit for reducing agent metering system	866
22. Tank sender for reducing agent, Engine/motor control unit, Control unit for reducing agent metering system, Transfer pump for reducing agent, Heater for reducing agent tank (heater circuit 1)	867
23. Engine/motor control unit, Pump for reducing agent	868
24. Radiator fan control unit, Fuel pump control unit, Engine/motor control unit, Radiator fan, Radiator fan 2	869
25. Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	870
26. Coolant shortage indicator switch, Control unit in dash panel insert	871
085 - MMI (information electronics I) with integrated preparation for mobile telephone and hands-free system (9ZF)	872-875
1. MMI (information electronics I) with integrated preparation for mobile telephone and hands-free system (9ZF)	872
2. Control unit for information electronics 1, voltage supply	873
3. Control unit 1 for information electronics, telephone bracket, microphone unit in front roof module, aerial for Bluetooth	874
4. Telephone brackets, aerial amplifier for mobile telephone	875
086 - Preparation for mobile telephone without hands-free system control unit (VDA interface) (9ZD)	876-878
1. Preparation for mobile telephone without hands-free system control unit (VDA interface) (9ZD)	876
2. Preparation for mobile telephone without hands-free system	877
3. Preparation for mobile telephone without hands-free system	878
087 - MMI (information electronics I) with integrated Bluetooth car phone (9ZW)	879-882
1. MMI (information electronics I) with integrated Bluetooth car phone (9ZW)	879
2. Control unit for information electronics 1, voltage supply	880
3. Control unit 1 for information electronics, microphone unit in front roof module, aerial for Bluetooth	881
4. Control unit 1 for information electronics, telephone brackets	882
088 - MMI (information electronics I) with integrated Bluetooth interface (9ZX)	883-885
1. MMI (information electronics I) with integrated Bluetooth interface (9ZX)	883
2. Control unit for information electronics 1, voltage supply	884
3. Control unit 1 for information electronics, microphone unit in front roof module, aerial for Bluetooth	885
089 - Ventilated seat with heated seat	886-890
1. Ventilated seat with heated seat	886
2. Front left seat temperature sender, Control unit for front left seat ventilation, Heated seat cushion for driver seat, Heated backrest for driver seat, Driver seat cushion lateral support heater	887
3. Control unit for front left seat ventilation, Driver seat backrest fan, Driver seat cushion fan, Driver seat backrest fan 2	888
4. Front right seat temperature sender, Control unit for front right seat ventilation, Heated seat cushion for front passenger seat, Heated backrest for front passenger seat, Front passenger seat lateral support heater	889
5. Control unit for front right seat ventilation, Front passenger seat backrest fan, Front passenger seat cushion fan, Front passenger seat backrest fan 2	890
090 - Start/stop system , ****	891-895
1. Start/stop system , ****	891
2. Voltage stabiliser	892
3. Voltage stabiliser	893
4. Relay for automatic anti-dazzle interior mirror	894
5. Start/Stop operation button, Start/Stop operation warning lamp	895
091 - 8-speed automatic gearbox with Tiptronic	896-902
1. 8-speed automatic gearbox with Tiptronic	896
2. Automatic gearbox control unit	897
3. Multifunction switch, Automatic gearbox control unit	898
4. Automatic gearbox control unit, Cooling oil valve	899
5. Automatic gearbox control unit	900
6. Automatic gearbox control unit, Selector lever sensors control unit, Selector lever lock solenoid	901
7. Automatic gearbox control unit, Gearbox hydraulic pump relay, Control unit for auxiliary hydraulic pump, Auxiliary hydraulic pump 1 for gearbox oil	902
092 - MMI with radio and BOSE sound system , ****	903-911
1. MMI with radio and BOSE sound system , ****	903
2. Digital sound package control unit	904
3. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Middle loudspeaker, Centre mid-range and treble loudspeaker	905
4. Digital sound package control unit, Front right bass loudspeaker, Front right mid-range loudspeaker. Rear left mid-range loudspeaker	906

5. Digital sound package control unit, Rear left treble loudspeaker, Rear right mid-range and bass loudspeaker	907
6. Digital sound package control unit, Microphone unit in front roof module	908
7. Radio	909
8. Radio	910
9. Radio, Aerial amplifier, Radio, telephone and navigation system aerial	911
093 - 3.0l petrol engine , CJTB,CJTC,CJWB,CJWC,CJWE,CNAA,CTWA,CTWB	912-935
1. 3.0l petrol engine , CJTB,CJTC,CJWB,CJWC,CJWE,CNAA,CTWA,CTWB	912
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter	913
3. Starter, Alternator, Starter motor relay, Starter motor relay 2, Jump start socket	914
4. Main relay, Engine control unit	915
5. Engine control unit	916
6. Engine control unit, Ignition coil 1 with output stage	917
7. Engine control unit, Ignition coil 4 with output stage	918
8. Engine control unit, Injector, cylinder 1	919
9. Engine speed sender, Coolant temperature sender, Throttle valve module, Engine control unit	920
10. Hall sender, Hall sender 2, Fuel pressure sender for low-pressure, Engine control unit	921
11. Intake air temperature sender, Fuel pressure sender, Sender 1 for secondary air pressure, Engine control unit	922
12. Engine control unit	923
13. Engine control unit	924
14. Oil pressure switch for reduced oil pressure, Intake manifold flap potentiometer, Engine control unit	925
15. Knock sensor 1, Accelerator position sender, Engine control unit	926
16. High-pressure sender, Engine control unit, Camshaft control valve 1	927
17. Engine control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Intake manifold flap valve, Secondary air inlet valve 2, Valve for oil pressure control	928
18. Additional coolant pump relay, Engine control unit, Continued coolant circulation pump, Fuel system diagnostic pump	929
19. Brake light switch, Brake pedal switch, Secondary air pump relay, Brake light suppression relay, Engine control unit, Secondary air pump motor	930
20. Lambda probe, Engine control unit, Engine component current supply relay	931
21. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Engine control unit	932
22. Radiator fan control unit, Engine control unit, Radiator fan, Radiator fan 2	933
23. Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	934
24. Coolant shortage indicator switch, Control unit in dash panel insert	935
094 - 3.0l diesel engine , CJGA,CJMA,CJGC,CRCA,CJGD,CNRA	936-954
1. 3.0l diesel engine , CJGA,CJMA,CJGC,CRCA,CJGD,CNRA	936
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter	937
3. Starter, Alternator, Starter motor relay, Starter motor relay 2, Jump start socket	938
4. Automatic glow period control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	939
5. Terminal 30 voltage supply relay, Engine control unit	940
6. Engine control unit	941
7. Air mass meter, Engine control unit, Injector, cylinder 1	942
8. Charge pressure sender, Intake air temperature sender, Accelerator position sender, Engine control unit, Fuel pressure regulating valve, Fuel metering valve	943
9. Fuel pressure sender, Throttle valve module, Engine control unit, Intake manifold flap motor	944
10. Pressure differential sender, Engine control unit, Turbocharger 1 control unit, Exhaust gas recirculation control motor	945
11. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine speed sender, Hall sender, Coolant temperature sender, Fuel temperature sender, Radiator outlet coolant temperature sender, Engine control unit	946
12. Map-controlled engine cooling system thermostat, Engine control unit, Exhaust gas recirculation cooler changeover valve, Electrohydraulic engine mounting solenoid valve, Valve for oil pressure control, Coolant valve for cylinder head	947
13. Brake light switch, Brake pedal switch, Brake light suppression relay, Engine control unit	948
14. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 3, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine control unit	949
15. Lambda probe, Brake servo pressure sensor, Engine control unit	950
16. High-pressure sender. Continued coolant circulation relay. Engine control unit. Coolant	951

	circulation pump	
	17. Radiator fan control unit, Fuel pump control unit, Engine control unit, Radiator fan, Radiator fan 2	952
	18. Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	953
	19. Coolant shortage indicator switch, Control unit in dash panel insert	954
095 -	3.0l diesel engine , CATA,CCMA	955-980
	1. 3.0l diesel engine , CATA,CCMA	955
	2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter	956
	3. Starter, Alternator, Starter motor relay, Starter motor relay 2, Jump start socket	957
	4. Automatic glow period control unit, Glow plug 1, Glow plug 3, Glow plug 4, Glow plug 6	958
	5. Cylinder 2 combustion chamber pressure sender, Automatic glow period control unit, Glow plug 2, Glow plug 5	959
	6. Terminal 30 voltage supply relay, Engine/motor control unit	960
	7. Engine/motor control unit	961
	8. Air mass meter, Engine/motor control unit, Injector, cylinder 1	962
	9. Charge pressure sender, Intake air temperature sender, Accelerator position sender, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	963
	10. Hall sender, Fuel pressure sender, Engine/motor control unit, Turbocharger 1 control unit, Exhaust gas recirculation control motor	964
	11. Pressure differential sender, Engine/motor control unit, Intake manifold flap motor, Intake manifold flap 2 motor	965
	12. Engine speed sender, Coolant temperature sender, Fuel temperature sender, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 2, Engine/motor control unit	966
	13. Throttle valve module, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Exhaust gas recirculation cooler changeover valve 2, Valve for oil pressure control	967
	14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Control unit for charge air cooler bypass	968
	15. Brake light switch, Brake pedal switch, Brake light suppression relay, Engine/motor control unit	969
	16. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 4, Engine/motor control unit	970
	17. Control unit for NOx sender, Engine/motor control unit, Control unit for NOx sender 2	971
	18. Continued coolant circulation relay, Engine/motor control unit, Coolant circulation pump	972
	19. Lambda probe, High-pressure sender, Engine/motor control unit, Pump for exhaust gas recirculation cooler	973
	20. Low heat output relay, High heat output relay, Engine/motor control unit, Injector for reducing agent, Auxiliary air heater element	974
	21. Engine/motor control unit, Control unit for reducing agent metering system	975
	22. Tank sender for reducing agent, Engine/motor control unit, Control unit for reducing agent metering system, Transfer pump for reducing agent, Heater for reducing agent tank (heater circuit 1)	976
	23. Engine/motor control unit, Pump for reducing agent	977
	24. Radiator fan control unit, Fuel pump control unit, Engine/motor control unit, Radiator fan, Radiator fan 2	978
	25. Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	979
	26. Coolant shortage indicator switch, Control unit in dash panel insert	980
096 -	4.2l diesel engine , CCFC	981-1008
	1. 4.2l diesel engine , CCFC	981
	2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter	982
	3. Starter, Alternator, Starter motor relay, Starter motor relay 2, Jump start socket	983
	4. Automatic glow period control unit, Glow plug 1, Glow plug 4, Glow plug 6, Glow plug 7	984
	5. Glow period control unit 2, Glow plug 2, Glow plug 3, Glow plug 5, Glow plug 8	985
	6. Terminal 30 voltage supply relay, Engine control unit	986
	7. Engine control unit	987
	8. Air mass meter, Engine control unit, Injector, cylinder 1	988
	9. Charge pressure sender, Intake air temperature sender, Accelerator position sender, Engine control unit	989
	10. Engine control unit, Turbocharger 1 control unit, Exhaust gas recirculation control motor	990
	11. Pressure differential sender, Throttle valve module, Engine control unit, Intake manifold flap motor	991
	12. Engine speed sender, Hall sender, Fuel pressure sender, Pressure sender for exhaust gas recirculation, Engine control unit, Heater flange for intake air preheating	992
	13. Fuel temperature sender, Temperature sender for engine temperature regulation, Engine control unit. Exhaust gas recirculation cooler changeover valve. Valve for oil pressure control. Coolant	993



valve for cylinder head	
14. Brake light switch, Brake pedal switch, Brake light suppression relay, Engine control unit	994
15. Engine control unit, Heater element for crankcase breather, Pump for exhaust gas recirculation cooler	995
16. Oil pressure switch for reduced oil pressure, Lambda probe, High-pressure sender, Engine control unit	996
17. Oil temperature sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Temperature sensor 2 for exhaust recirculation, Engine control unit	997
18. Continued coolant circulation relay, Engine control unit, Continued coolant circulation pump	998
19. Radiator fan control unit, Engine control unit, Fuel pressure regulating valve, Fuel metering valve, Radiator fan, Radiator fan 2	999
20. Engine control unit, Engine control unit 2	1000
21. Lambda probe 2, Air mass meter 2, Engine control unit 2	1001
22. Engine control unit 2, Injector, cylinder 2	1002
23. Engine control unit 2, Turbocharger 2 control unit, Exhaust gas recirculation control motor 2	1003
24. Pressure differential sender 2, Throttle valve module 2, Engine control unit 2, Intake manifold flap 2 motor	1004
25. Rotational speed sender 2, Pressure sender 2 for exhaust gas recirculation, Engine control unit 2, Heater flange 2 for intake air preheating	1005
26. Oil pressure switch, Temperature sender 2 before particulate filter, Engine control unit 2	1006
27. Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit	1007
28. Coolant shortage indicator switch, Control unit in dash panel insert	1008
097 - Digital TV tuner	1009-1012
1. Digital TV tuner	1009
2. Digital TV tuner	1010
3. Aerial amplifier, Aerial amplifier 2, Digital TV tuner	1011
4. Aerial amplifier 3, Digital TV tuner	1012
098 - Overhead view camera	1013-1015
1. Overhead view camera	1013
2. Control unit for overhead view camera, Fuse carrier 2	1014
3. Control unit for overhead view camera, Front overhead view camera, Rear overhead view camera	1015
099 - Front and rear parking aid (PDC)	1016-1020
1. Front and rear parking aid (PDC)	1016
2. Parking aid control unit, Fuse carrier 2	1017
3. Parking aid button, Operating unit in front of centre console, Parking aid control unit, Parking aid warning lamp	1018
4. Front right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Front parking aid warning buzzer, Parking aid control unit	1019
5. Rear centre left parking aid sender, Rear right parking aid sender, Rear parking aid warning buzzer, Parking aid control unit	1020
100 - Rear parking aid (PDC)	1021-1023
1. Rear parking aid (PDC)	1021
2. Parking aid control unit, Fuse carrier 2	1022
3. Rear centre left parking aid sender, Rear right parking aid sender, Rear parking aid warning buzzer, Parking aid control unit	1023
101 - Basic equipment, right-hand drive	1024-1062
1. Basic equipment, right-hand drive	1024
2. Battery, Terminal 15 voltage supply relay, Battery monitor control unit, Battery isolation igniter, Jump start socket	1025
3. Terminal 75x voltage supply relay	1026
4. Entry and start authorisation switch, Fuse carrier 3	1027
5. Entry and start authorisation button, Entry and start authorisation switch, Aerial reader unit for keyless entry system	1028
6. Entry and start authorisation switch, Gear selector position P switch, Aerial amplifier 4	1029
7. Turn signal switch, Intermittent wiper switch, Horn plate, Steering column electronics control unit	1030
8. Cruise control system switch, Steering column adjustment switch, Steering angle sender, Steering column electronics control unit	1031
9. Onboard supply control unit	1032
10. Light switch, Headlight range control regulator, Onboard supply control unit	1033
11. Hazard warning lights button, TCS and ESP button, Onboard supply control unit	1034
12. Onboard supply control unit	1035
13. Onboard supply control unit	1036
14. Bonnet contact switch, Headlight washer system relay, Onboard supply control unit, Left fog light bulb. Right fog light bulb. Headlight washer system pump. Left footwell light. Right footwell	1037

light	
15. Treble horn, Bass horn, Dual tone horn relay, Onboard supply control unit	1038
16. Rain and light sensor, Wiper motor control unit, Rear window wiper motor, Windscreen and rear window washer pump	1039
17. Glove compartment light switch, Glove compartment light, Left washer jet heater element, Right washer jet heater element	1040
18. Fuse carrier 3	1041
19. Convenience system central control unit, Fuse carrier 1, 12 V socket 5	1042
20. Convenience system central control unit, Left tail light	1043
21. Convenience system central control unit, Right tail light	1044
22. Release button for rear lid lock cylinder, Convenience system central control unit, Additional brake light bulb, Tank filler flap locking motor	1045
23. Heated rear window relay, Convenience system central control unit, Heated rear window single fuse, Rear left footwell light, Rear right footwell light, Heated rear window	1046
24. Brake light switch, Brake pedal switch, Convenience system central control unit, Brake light suppression relay	1047
25. Convenience system central control unit, Convenience system central control unit 2, Luggage compartment light on left, Right luggage compartment light, Rear lid light	1048
26. Rear lid closed sender 1, Convenience system central control unit 2, Rear interior light	1049
27. Onboard supply control unit 2, Servotronic solenoid valve, Glove compartment release motor	1050
28. Operating unit in front of centre console, Display unit button, Onboard supply control unit 2	1051
29. Control unit in dash panel insert, Data bus diagnostic interface	1052
30. Control unit in dash panel insert, Data bus diagnostic interface	1053
31. Brake fluid level warning contact, Front left brake pad wear sender, Rear right brake pad wear sender, Control unit in dash panel insert	1054
32. Oil pressure switch, Ambient temperature sensor, Control unit in dash panel insert	1055
33. Parking brake contact switch, Oil level and oil temperature sender, Control unit in dash panel insert, Radio controlled clock receiver	1056
34. Fuel system pressurisation pump, Fuel pump, Control unit in dash panel insert, Ashtray illumination bulb	1057
35. Cigarette lighter, 12 V socket 2, 12 V socket 3, 12 V socket 4	1058
36. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch	1059
37. Rear left interior light	1060
38. Sliding sunroof adjustment regulator	1061
39. Humidity sender, Light sensor, Main beam assist control unit	1062
102 - Convenience system, right-hand drive , (L0R)	1063-1096
1. Convenience system, right-hand drive , (L0R)	1063
2. Driver door control unit	1064
3. Driver door exterior handle switch, Driver door exterior handle contact sensor, Driver door control unit, Aerial reader unit for keyless entry system	1065
4. Driver side central locking lock unit, Driver door control unit	1066
5. Operating unit for window regulator in driver door, Driver door control unit	1067
6. Childproof lock button, Operating unit for window regulator in driver door, Driver door control unit, Driver side window regulator motor	1068
7. Mirror adjustment switch, Alarm system off switch, Driver door control unit	1069
8. Driver door control unit, Driver side mirror adjustment motor 2	1070
9. Button for lane change assist, Driver door control unit, Lane change assist warning lamp in driver side exterior mirror	1071
10. Driver side interior locking switch, Driver door control unit, Central locking SAFELOCK function warning lamp, Driver door opener illumination bulb, Driver door ambient lighting bulb	1072
11. Rear lid remote release button, Fuel tank flap release button, Driver door control unit, Driver side door warning lamp, Front left entry light	1073
12. Driver seat memory operating unit, Emergency-off button, Seat memory position button 1, Driver seat memory function button, Driver door control unit	1074
13. Front passenger door control unit, Fuse carrier 1	1075
14. Front passenger door exterior handle switch, Front passenger door exterior handle contact sensor, Front passenger door control unit	1076
15. Front passenger side central locking lock unit, Front passenger door control unit	1077
16. Window regulator switch in front passenger door, Front passenger door control unit	1078
17. Front passenger door control unit, Front passenger door opener illumination bulb, Front passenger door ambient lighting bulb, Front passenger side window regulator motor, Front right entry light, Front passenger side door warning lamp	1079
18. Front passenger door control unit, Front passenger side mirror adjustment motor 2, Heated exterior mirror on passenger side	1080
19. Front passenger door control unit, Front passenger side turn signal repeater bulb, Automatic anti-dazzle exterior mirror. passenger side	1081

20. Front passenger seat memory operating unit, Front passenger door control unit	1082
21. Contact sensor for rear left exterior door handle, Rear left door control unit	1083
22. Rear left central locking lock unit, Rear left door exterior handle switch, Rear left door control unit	1084
23. Rear left window regulator switch, in door, Rear left door control unit, Rear left ashtray illumination bulb, Rear left window regulator motor	1085
24. Rear left door control unit, Rear left door opener illumination bulb, Rear left door ambient lighting bulb, Rear left entry light, Rear left door warning lamp	1086
25. Rear right door exterior handle central locking button, Contact sensor for rear right exterior door handle, Rear right door control unit	1087
26. Rear right central locking lock unit, Rear right door exterior handle switch, Rear right door control unit	1088
27. Rear right window regulator switch, in door, Rear right door control unit, Rear right ashtray illumination bulb, Rear right window regulator motor	1089
28. Rear right door control unit, Rear right door opener illumination bulb, Rear right door ambient lighting bulb, Rear right door warning lamp	1090
29. Convenience system central control unit	1091
30. Interior monitoring sensor, Alarm horn, Convenience system central control unit	1092
31. Release button for rear lid lock cylinder, Rear right side window glass breakage sensor, Convenience system central control unit, Rear lid central locking motor	1093
32. Convenience system central control unit, Power latching control unit	1094
33. Button to close rear lid in luggage compartment, Rear lid control unit, Rear lid control unit 2, Motor in rear lid control unit	1095
34. Rear lid closed sender 1, Rear lid closed sender 2, Convenience system central control unit 2	1096
103 - Tail light cluster with LED	1097-1102
1. Tail light cluster with LED	1097
2. Convenience system central control unit, Left tail light	1098
3. Convenience system central control unit, Right tail light	1099
4. Convenience system central control unit, Left tail light	1100
5. Convenience system central control unit, Right tail light	1101
6. Convenience system central control unit 2	1102
104 - CAN separating connector , (L0R)	1103-1112
1. CAN separating connector , (L0R)	1103
2. 46-pin connector	1104
3. 46-pin connector	1105
4. 46-pin connector	1106
5. 46-pin connector	1107
6. 46-pin connector	1108
7. 46-pin connector	1109
8. 46-pin connector	1110
9. Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness	1111
10. Connection 1 (CAN bus extended high), in main wiring harness, Connection 1 (CAN bus extended low), in main wiring harness, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness	1112
801 - - Fitting locations: Earth points - 3	1113-1123
1. Earth points	1113-1123
1.1 Overview of earth points	1113-1123
802 - - Fitting locations: Fuses - 3	1124-1167
1. Fuses	1124-1167
1.1 Overview of fuses	1124
1.2 Fuses (SB) on fuse holder B	1125-1136
1.2.1 Fuse assignment on fuse carrier ST1, red, left-hand drive models	1126
1.2.2 Fuse assignment on fuse carrier ST2, brown, left-hand drive models	1127
1.2.3 Fuse assignment on fuse carrier ST3, black, left-hand drive models	1128
1.2.4 Fuse assignment on fuse carrier ST1, red, right-hand drive models	1129
1.2.5 Fuse assignment on fuse carrier ST2, brown, right-hand drive models	1130
1.2.6 Fuse assignment on fuse carrier ST3, black, right-hand drive models	1130
1.2.7 Fuses in fuse carrier ST1, red, left-hand drive models, from June 2009	1131
1.2.8 Fuse assignment on fuse carrier ST2, brown, left-hand drive models, from June 2009	1132
1.2.9 Fuse assignment on fuse carrier ST3, black, left-hand drive models, from June 2009	1133
1.2.10 Fuse assignment on fuse carrier ST1, red, right-hand drive models, from June 2009	1134
1.2.11 Fuse assignment on fuse carrier ST2, brown, right-hand drive models, from June 2009	1135
1.2.12 Fuse assignment on fuse carrier ST3, black, right-hand drive models, from June 2009	1136
1.3 Fuses (SC) on fuse holder C	1137-1149
1.3.1 Fuse assignment on fuse carrier ST1. black. left-hand drive models	1138

1.3.2 Fuse assignment on fuse carrier ST2, brown, left-hand drive models	1139
1.3.3 Fuse assignment on fuse carrier ST3, red, left-hand drive models	1140
1.3.4 Fuse assignment on fuse carrier ST1, black, right-hand drive models	1141
1.3.5 Fuse assignment on fuse carrier ST2, brown, right-hand drive models	1142
1.3.6 Fuse assignment on fuse carrier ST3, red, right-hand drive models	1143
1.3.7 Fuse assignment on fuse carrier ST1, black, left-hand drive models, from June 2009	1144
1.3.8 Fuse assignment on fuse carrier ST2, brown, left-hand drive models, from June 2009	1145
1.3.9 Fuse assignment on fuse carrier ST3, red, left-hand drive models, from June 2009	1146
1.3.10 Fuse assignment on fuse carrier ST1, black, right-hand drive models, from June 2009	1147
1.3.11 Fuse assignment on fuse carrier ST2, brown, right-hand drive models, from June 2009	1148
1.3.12 Fuse assignment on fuse carrier ST3, red, right-hand drive models, from June 2009	1149
1.4 relay and fuse carrier centre dash panel	1150-1151
1.5 Fuses (SF) on fuse holder F	1152-1157
1.5.1 Fuse assignment on fuse carrier ST1, black	1154
1.5.2 Fuse assignment on fuse carrier ST2, brown	1154
1.5.3 Fuse assignment on fuse carrier ST3, red	1155
1.5.4 Fuse assignment on fuse carrier ST1, black, from June 2009	1156
1.5.5 Fuse assignment on fuse carrier ST2, brown, from June 2009	1156
1.5.6 Fuse assignment on fuse carrier ST3, red, from June 2009	1157
1.6 Fuses (SD) on fuse holder D	1158
1.7 Relay and fuse carrier in electronics box engine compartment	1159-1165
1.7.1 Fuse assignment, petrol engine	1161-1162
1.7.2 Fuse assignment, diesel engine	1163-1165
1.8 Terminal 30 wiring junction 2 -TV22-/slave start socket -U6-	1166-1167
803 - - Fitting locations: Relays - 3	1168-1179
1. Relays	1168-1179
1.1 Overview of relays	1168
1.2 relay and fuse carrier centre dash panel	1169
1.3 Relay and fuse carrier on right in luggage compartment	1170
1.4 Relay and fuse carrier under driver seat	1171
1.5 Relay and fuse carrier in electronics box engine compartment	1172-1179
1.5.1 Positions, petrol engine up to May 2009	1172-1173
1.5.2 Positions, diesel engine up to May 2009	1174
1.5.3 Positions, petrol engine from June 2009	1175-1176
1.5.4 Positions, diesel engine from June 2009	1177
1.5.5 Positions, diesel engine V12	1178-1179
804 - -Fitting locations: control units - 3	1180-1282
1. Control units	1180-1282
1.1 Overview of control units	1180-1185
1.2 Onboard supply control unit 2 -J520-	1186-1187
1.3 Automatic gearbox control unit -J217-	1188-1189
1.4 Telephone transmitter and receiver unit -R36-, up to May 2009	1190
1.5 Assignment diagnosis connection	1191
1.6 Lane departure warning control unit -J759-	1192-1193
1.7 Aerial reader unit for keyless entry system -J723-	1194-1195
1.8 TV tuner -R78-	1196
1.9 Aerial amplifier for mobile telephone -R86-	1197
1.10 Satellite radio -R146-, up to May 2009	1198
1.11 Digital radio -R147-, up to May 2009	1199
1.12 Radio -R-, MMI	1200
1.13 Parking aid control unit -J446-	1201-1202
1.14 Reversing camera system control unit -J772-	1203
1.15 Convenience system central control unit 2 -J773-	1204-1205
1.16 Adaptive suspension control unit -J197-	1206-1207
1.17 Navigation system with CD drive control unit -J401-, up to May 2009	1208
1.18 Control unit 1 for information electronics -J794-, from June 2009	1209
1.19 Trailer detector control unit -J345-	1210-1211
1.20 Headlight range control unit -J431-	1212-1213
1.21 Convenience system central control unit -J393-	1214-1215
1.22 Data bus diagnostic interface -J533-	1216
1.23 Onboard supply control unit -J519-	1217-1218
1.24 Tyre Pressure Monitoring System control unit -J502-	1219-1220
1.25 Energy management control unit -J644-, up to May 2008	1221-1222
1.26 Battery monitor control unit -J367- from June 2008	1223
1.27 Remote control receiver for auxiliary heater -R64-	1223
1.28 Seat and steering column adjustment control unit with memory -J136-/front passenger seat	1224

adjustment control unit with memory -J521-	
1.29 Engine control unit -J623-	1225-1227
1.29.1 Engine control unit -J623-, with 154-pin connector	1226-1227
1.29.2 Engine control unit -J623-, with 196-pin connector	1228
1.30 Engine control unit 2 -J624-	1228-1230
1.30.1 Engine control unit 2 -J624-, with 154-pin connector	1229
1.30.2 Engine control unit 2 -J624-, with 196-pin connector	1230
1.31 Lane change assist control unit -J769-/lane change assist control unit 2 -J770-	1231-1232
1.32 Sliding sunroof motor -V1-	1233
1.33 Airbag control unit -J234-	1234-1235
1.34 Driver door control unit -J386-	1236-1237
1.35 Front passenger door control unit -J387-	1238-1239
1.36 Rear left door control unit -J388-	1240-1241
1.37 Rear right door control unit -J389-	1242-1243
1.38 Entry and start authorisation switch -E415-	1244-1245
1.39 Climatronic control unit -J255-, convenience air conditioning system	1246-1247
1.40 Climatronic control unit -J255-, air conditioning system, basis	1248-1249
1.41 Rear Climatronic operating and display unit -E265-	1250-1251
1.42 Control unit in dash panel insert -J285-	1252
1.43 Fuel pump control unit -J538-	1253
1.44 Control unit for reducing agent metering system -J880-	1254
1.45 Wiper motor control unit -J400-	1255-1256
1.46 Sliding sunroof adjustment control unit -J245-	1257
1.47 Rear sliding sunroof control unit -J392-	1258
1.48 Sunroof roller blind control unit -J394-	1259
1.49 Entry and start authorisation control unit -J518-	1260
1.50 Adaptive cruise control unit -J428-	1261
1.51 Voltage stabiliser -J532-	1262
1.52 Auxiliary heater control unit -J364-	1263
1.53 NOx sensor control unit -J583-	1264
1.54 Control unit for NOx sensor 2 -J881-	1265-1266
1.55 Left headlight starter for gas discharge light -J426-/right headlight starter for gas discharge light -J427-	1267-1268
1.56 Actuator for structure-borne sound -R214-	1269
1.57 Control unit for structure-borne sound -J869-	1269-1270
1.58 ABS control unit -J104-	1271
1.59 Radiator fan control unit -J293-/Radiator fan control unit 2 -J671-	1272
1.60 Steering column electronics control unit -J527-	1273
1.61 Power latching control unit -J657-	1273-1274
1.62 Rear lid control unit -J605-	1275-1276
1.63 Rear lid control unit 2 -J756-	1277
1.64 Rear fresh air blower control unit -J391-	1278-1279
1.65 Front interior light	1280
1.66 Fresh air blower control unit -J126-	1281-1282
805 - - Fitting locations: Coupling stations - 3	1283-1302
1. Coupling stations	1283-1302
1.1 Overview of coupling stations	1283
1.2 Fuse holder B on left in dash panel	1284
1.3 Fuse holder C on right in dash panel	1285
1.4 Coupling station left luggage compartment	1286
1.5 Relay and fuse carrier in electronics box engine compartment	1287-1289
1.6 Coupling point on front left door	1290
1.7 Coupling point on front right door	1291
1.8 Coupling point on rear left door	1292
1.9 Coupling point on rear right door	1293
1.10 Coupling station under left front seat	1294
1.11 Coupling station under right front seat	1295
1.12 Coupling station under left rear seat	1296
1.13 Coupling station under right rear seat	1297
1.14 Front left bumper coupling point	1298
1.15 Rear bumper coupling point	1299
1.16 Coupling point on right in engine compartment	1300
1.17 Rear air conditioner coupling point	1301-1302