

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
1.5 Safety information for handling gas discharge bulbs	3
1.6 Notes on use and safety for LED headlights and Audi laser lights	4
2 Repair instructions	5
2.1 Rules for cleanliness	5
2.2 General notes	5
2.3 Contact corrosion	5
2.4 ESD (electrostatic discharge) workplace	6
2.5 Routing and attachment of pipes, hoses and wiring	6
2.6 Identification plates	6
2.7 Use of impact wrenches	7
2.8 Cleaning engine	7
3 Battery	9
3.1 Battery - general notes	9
3.2 Battery types	9
27 - Starter, current supply, CCS	10
1 Safety information	10
2 Battery	11
2.1 Assembly overview - battery	11
2.2 Disconnecting and connecting battery	15
2.3 Removing and installing earth cable with battery monitor control unit J367	18
2.4 Removing and installing battery	19
2.5 Removing and installing battery fan V457	29
2.6 Inspecting and classifying battery, 48 V A6	29
2.7 Checking battery	30
2.8 Charging battery	31
2.9 Removing and installing battery cut-off relay/battery isolation igniter	32
3 Voltage converter	33
3.1 Assembly overview - voltage converter	33
3.2 Removing and installing voltage converter (48 V/12 V) A7	34
4 Storage capacitor	39
4.1 Assembly overview - storage capacitor	39
4.2 Removing and installing storage capacitor for 48 V electrical system C31	43
4.3 Removing and installing carrier for storage capacitor	52
4.4 Inspecting and classifying storage capacitor for 48 V electrical system C31	53
5 Jump-start connection point	55
5.1 Assembly overview - jump-start connection point	55
6 Alternator	56
6.1 Assembly overview - alternator	56
6.2 Removing and installing alternator	64
6.3 Checking alternator	78
7 Starter	80
7.1 Assembly overview - starter	80
7.2 Removing and installing starter	81
8 Adaptive cruise control	88

90 - Gauges, instruments	89
1 Safety information	89
2 Dash panel insert	90
2.1 Assembly overview - dash panel insert	90
2.2 Assembly overview - head-up display	93
2.3 Removing and installing dash panel insert with control unit in dash panel insert J285	96
2.4 Removing and installing control unit for head-up display	101
2.5 Calibrating control unit for head-up display	105
3 Horn	107
3.1 Assembly overview - horn	107
3.2 Removing and installing treble horn H2 / bass horn H7	109
92 - Windscreen wash/wipe system	112
1 Safety information	112
2 Windscreen wiper system	113
2.1 Overview of fitting locations - windscreen wiper system	113
2.2 Assembly overview - windscreen wiper system	115
2.3 Moving wipers to service position	119
2.4 Removing and installing wiper blade	120
2.5 Removing and installing wiper arms	121
2.6 Adjusting wiper arms	125
2.7 Removing and installing wiper motor V	126
2.8 Removing and installing rain and light sensor	127
3 Windscreen washer system	132
3.1 Assembly overview - windscreen washer system	132
3.2 Removing and installing washer fluid reservoir	138
3.3 Removing and installing windscreen washer fluid level sender	141
3.4 Removing and installing washer pump	142
3.5 Removing and installing windscreen washer pump control unit J1100	142
3.6 Removing and installing washer jets	143
3.7 Adjusting washer jets	143
4 Rear window wiper system	145
4.1 Overview of fitting locations - rear window wiper system	145
4.2 Assembly overview - rear window wiper system	147
4.3 Removing and installing wiper blade	148
4.4 Removing and installing wiper arm	149
4.5 Adjusting wiper arm	150
4.6 Removing and installing rear window wiper motor V12	151
5 Rear window washer system	152
5.1 Assembly overview - rear window washer system	152
5.2 Removing and installing washer fluid reservoir	155
5.3 Removing and installing rear window washer pump	155
5.4 Removing and installing washer jet	156
5.5 Removing and installing washer jet for reversing camera R189 / rear overhead view camera R246	156
5.6 Adjusting washer jet	156
6 Headlight washer system	158
6.1 Assembly overview - headlight washer system	158
6.2 Removing and installing headlight washer system pump V11	161
6.3 Removing and installing washer jets	161
7 Washer fluid hoses	164
94 - Lights, bulbs, switches - exterior	165
1 Safety information	165

2	Headlights	166
2.1	Assembly overview - headlight	166
2.2	Removing and installing headlights	180
2.3	Adjusting headlights	185
2.4	Removing and installing front turn signal bulb M5 / M7	211
2.5	Removing and installing LED module for daytime running light and side light L176 / L177	212
2.6	Removing and installing fog light bulb L22 / L23	215
2.7	Removing and installing gas discharge bulb L13 / L14	216
2.8	Removing and installing output module for headlight	217
2.9	Removing and installing headlight range control motor V48 / V49	221
2.10	Removing and installing headlight fan	227
2.11	Adapting headlights for driving on the left side of the road	229
2.12	Adapting headlights for driving on the right side of the road	230
3	Daytime running lights	231
3.1	Assembly overview - signature lighting	231
3.2	Removing and installing signature lighting	231
3.3	Removing and installing light for signature lighting L275 / L276	232
4	Side marker lights	233
4.1	Assembly overview - side marker lights	233
4.2	Removing and installing rear side marker bulb	234
5	Lights in exterior mirror	235
5.1	Assembly overview - lights in exterior mirror	235
5.2	Removing and installing turn signal	236
6	Lights in exterior door handle	237
6.1	Assembly overview - lights in exterior door handle	237
6.2	Removing and installing exterior door handle illumination bulb	238
7	Lights in sill panel moulding	243
7.1	Assembly overview - entry light	243
8	Tail light clusters	244
8.1	Assembly overview - tail light cluster on body	244
8.2	Assembly overview - tail light cluster on rear lid	246
8.3	Removing and installing tail light cluster	248
8.4	Removing and installing tail light cluster on rear lid	249
8.5	Removing and installing bulb carrier	251
8.6	Removing and installing rear lid closed sender G525 / G526	251
9	High-level brake light	252
9.1	Assembly overview - high-level brake light	252
9.2	Removing and installing high-level brake light	253
10	Number plate light	254
10.1	Removing and installing number plate light X4 / X5	254
11	Entry and start authorisation	255
11.1	Overview of fitting locations - entry and start authorisation system	255
11.2	Overview of fitting locations - keyless entry system	257
11.3	Assembly overview - exterior door handle for keyless entry system	261
11.4	Removing and installing front exterior door handle switches	263
11.5	Removing and installing rear exterior door handle switches	265
11.6	Removing and installing interior aerial 1 for entry and start system R138	266
11.7	Removing and installing luggage compartment aerial for entry and start system R137	267
11.8	Removing and installing aerial for entry and start authorisation R200 / R201	268
11.9	Removing and installing front aerial for entry and start authorisation R376	268
11.10	Removing and installing near field communication aerial 2 R351	269
11.11	Removing and installing near field communication control unit 2 J1170	269
11.12	Alcohol interlock	270
12	Steering column switch module	280

12.1	Assembly overview - steering column switch module	280
12.2	Removing and installing steering column switch module	280
13	Parking aid	282
14	Park assist steering	283
15	Automatic headlight range control	284
15.1	Assembly overview - automatic headlight range control	284
16	Towing bracket	286
16.1	Assembly overview - trailer socket, trailer detector control unit	286
16.2	Removing and installing trailer socket U10	286
96 - Lights, bulbs, switches - interior	287	
1	Safety information	287
2	Lights	289
2.1	Overview of fitting locations - lights in dash panel	290
2.2	Overview of fitting locations - lights in front doors	294
2.3	Overview of fitting locations - lights in rear doors	295
2.4	Overview of fitting locations - background lighting in doors	297
2.5	Overview of fitting locations - lights in centre console	300
2.6	Overview of fitting locations - lights in luggage compartment	303
2.7	Overview of fitting locations - lights in roof trim	304
2.8	Removing and installing glove compartment light W6	306
2.9	Removing and installing rear left footwell light W45 / rear right footwell light W46	306
2.10	Removing and installing front footwell light K268 / K269	307
2.11	Removing and installing front footwell illumination bulb L151 / L152	307
2.12	Removing and installing central locking SAFELOCK function warning lamp K133	307
2.13	Removing and installing light for front interior door handle illumination	308
2.14	Removing and installing entry light W92 / W93	308
2.15	Removing and installing door warning lamp W30 / W36	308
2.16	Removing and installing light for rear interior door handle illumination	309
2.17	Removing and installing rear entry light W83 / W84	309
2.18	Removing and installing bulb for dash panel background lighting	310
2.19	Removing and installing rear door warning lamp, driver side W90 / rear door warning lamp, passenger side W91	313
2.20	Removing and installing front door background lighting bulb	314
2.21	Removing and installing light for door storage compartment illumination	317
2.22	Removing and installing light for door loudspeaker trim L223 / L224	318
2.23	Removing and installing rear door background lighting bulb	319
2.24	Removing and installing rear door storage compartment illumination bulb	321
2.25	Removing and installing light for centre console background lighting	322
2.26	Removing and installing selector lever position display Y5	324
2.27	Removing and installing luggage compartment light	326
2.28	Removing and installing illuminated vanity mirror W20 / W14	327
3	Controls	329
3.1	Overview of fitting locations - controls in dash panel	330
3.2	Overview of fitting locations - controls in front doors	333
3.3	Overview of fitting locations - controls in rear doors	335
3.4	Overview of fitting locations - controls in centre console	336
3.5	Overview of fitting locations - controls in luggage compartment	339
3.6	Overview of fitting locations - controls in roof trim	341
3.7	Assembly overview - front interior light	343
3.8	Removing and installing light switch E1	345
3.9	Removing and installing steering column adjustment switch E167	346
3.10	Removing and installing buttons/switches in dash panel	346
3.11	Removing and installing glove compartment light switch E26	349
3.12	Removing and installing mirror adjustment switch E43 / E168	349

3.13	Removing and installing operating unit for window regulator in driver door E512	350
3.14	Removing and installing window regulator switch in front passenger door E107	350
3.15	Removing and installing interior locking switch E150 / E198	350
3.16	Removing and installing operating unit for memory settings E464 / E465	351
3.17	Removing and installing rear lid remote release button E233	352
3.18	Removing and installing button for deactivating interior monitoring and vehicle inclination sensor E616	352
3.19	Removing and installing rear window regulator button in rear door	353
3.20	Removing and installing rear interior locking switch E717 / E718	353
3.21	Removing and installing button for air ionisation system E677	353
3.22	Removing and installing electromechanical parking brake button E540 / auto hold button E538	354
3.23	Removing and installing entry and start authorisation button E408	356
3.24	Removing and installing buttons for seat heating E653 / E654	357
3.25	Removing and installing backrest adjustment button for seat, row 3	357
3.26	Removing and installing operating unit for lowering load sill E682 / button for electric swivelling towing bracket E474	360
3.27	Removing and installing rear lid handle release button E234	360
3.28	Removing and installing button to close rear lid in luggage compartment E406	362
3.29	Removing and installing rear lid warning buzzer H32	363
3.30	Removing and installing rear lid contact switch	363
3.31	Removing and installing sunroof button E325	363
3.32	Removing and installing front interior light/reading light	364
3.33	Dismantling and assembling front interior light/reading light	365
3.34	Removing and installing rear interior light/reading light	368
3.35	Removing and installing garage door operating unit E284	369
4	Anti-theft alarm system	370
4.1	Assembly overview - interior monitoring	370
4.2	Removing and installing alarm horn H12	372
4.3	Removing and installing anti-theft alarm sensor G578	372
5	Lane change assist	373
6	Front camera for driver assist systems	374
7	Cigarette lighter, socket	375
7.1	Assembly overview - cigarette lighter, 12 V socket	375
7.2	Removing and installing cigarette lighter U1 / 12 V socket U5	379
7.3	Removing and installing cigarette lighter illumination bulb L28	382
7.4	Removing and installing socket illumination bulb L42	383
7.5	Removing and installing 12 V socket 2 U18	383
7.6	Removing and installing rear cigarette lighter U9 / 12 V socket 2 U18	385
7.7	Removing and installing 12 V socket 3 U19	386
7.8	Removing and installing 12 V socket 4 U20	388
7.9	Renewing 12 V socket 4 U20	388
97 - Wiring	391	
1	Safety information	391
2	Relay carriers, fuse carriers, electronics boxes	392
2.1	Overview of fitting locations - relay carriers, fuse carriers, electronics boxes	392
2.2	Removing and installing relay and fuse carrier (front left)	403
2.3	Removing and installing suppression capacitor C24	406
2.4	Removing and installing wiring junction	407
2.5	Removing and installing protective diode J201	416
2.6	Removing and installing fuse holder C SC	417
2.7	Removing and installing relay and fuse holders in luggage compartment (left-side)	418
3	Control units	424
3.1	Overview of fitting locations - control units	424

3.2	Assembly overview - data bus diagnostic interface	424
3.3	Removing and installing onboard supply control unit J519	426
3.4	Removing and installing garage door operation control unit	427
3.5	Removing and installing data bus diagnostic interface J533	427
4	Connectors	430
4.1	Overview of fitting locations - connectors	430
4.2	Unplugging door coupling point	431
4.3	Removing and installing coupling station on bulkhead (right-side)	432
4.4	Repairing electrical wiring harnesses and electrical connectors	432
5	Releasing and dismantling connector housings	433
6	Cleaning contact surfaces	434
7	Repairing aerial wires	435
8	Fibre optic cables	436
9	Vehicle diagnostic, testing and information systems	437