

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on pyrotechnic components	3
1.2 Safety precautions when working on vehicles with high-voltage system	4
1.3 Safety precautions when working in the vicinity of high-voltage components	5
1.4 Safety precautions when working on the high-voltage system	5
1.5 Safety precautions when working on vehicles with start/stop system	6
1.6 Safety precautions when using testers and measuring instruments during a road test	7
1.7 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolators (pyrotechnic components)	7
1.8 Additional safety regulations for airbag control units	8
1.9 Additional safety regulations for side airbags	8
1.10 Additional safety regulations for curtain airbags	9
1.11 Safety regulations for crash sensors (pressure sensors) for front side airbag	9
1.12 Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version	10
1.13 Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	10
1.14 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	11
1.15 Checking airbag mounting components following an accident	12
1.16 Accident in which no airbag was triggered	13
1.17 Checking seat belts	13
1.18 Checking belt webbing	13
1.19 Checking automatic belt retractor (locking action)	14
1.20 Visual inspection of belt buckle	14
1.21 Functional check of belt buckle	15
1.22 Checking guide fittings and latch plate	15
1.23 Checking securing components and anchorage points following an accident	15
1.24 Checking child seat restraint function of seat belt for additional child seats (not for driver seat belt; country-specific version)	15
1.25 Checking child seat anchors following an accident	16
1.26 Safety regulations for automatic anti-dazzle interior mirror	16
2 Repair instructions	17
2.1 Contact corrosion	17
2.2 Routing and attachment of pipes, hoses and wiring	17
2.3 Use of impact wrenches	17
68 - Interior equipment	19
1 Storage compartments/covers/trim panels	19
1.1 Overview of fitting locations - storage compartments/covers/trim panels	19
1.2 Assembly overview - dash panel cover (driver side)	21
1.3 Assembly overview - steering column trim	22
1.4 Assembly overview - glove compartment	23
1.5 Removing and installing dash panel cover (driver side)	25
1.6 Removing and installing upper steering column trim	26
1.7 Removing and installing lower steering column trim	28
1.8 Removing and installing glove compartment opening mechanism	29
1.9 Removing and installing lock cylinder for glove compartment opening mechanism	30
1.10 Manually releasing glove compartment cover	31
1.11 Removing and installing glove compartment	31
1.12 Removing and installing glove compartment cover	37
1.13 Removing and installing restrictor for glove compartment cover	38
1.14 Removing and installing footwell cover (front passenger side)	39

2	Equipment	40
2.1	Assembly overview - net partition	40
2.2	Assembly overview - sun visors	41
2.3	Assembly overview - sun blind	42
2.4	Assembly overview - luggage compartment cover	44
2.5	Removing and installing mounting for net partition	46
2.6	Removing and installing sun visor	47
2.7	Removing and installing sun visor centre mount	47
2.8	Removing and installing sun blind	48
2.9	Removing and installing grab handle	49
2.10	Removing and installing bracket for grab handle	51
2.11	Removing and installing luggage compartment cover	51
3	Centre console	55
3.1	Assembly overview - centre console	55
3.2	Removing and installing rear centre console trim	67
3.3	Removing and installing cover for centre console	68
3.4	Removing and installing rear ashtray	70
3.5	Removing and installing front ashtray	70
3.6	Removing and installing ashtray trim (front)	70
3.7	Removing and installing centre console insert	71
3.8	Removing and installing front centre console storage compartment	72
3.9	Removing and installing front centre console footwell trim	73
3.10	Removing and installing centre console	74
3.11	Removing and installing trim panel for centre console	76
3.12	Removing and installing cup holder	78
3.13	Removing and installing rear centre console storage compartment	79
3.14	Removing and installing vent (rear) in centre console	79
3.15	Removing and installing bracket for centre console	80
3.16	Removing and installing trim for operating and display unit	81
4	Front centre armrest	83
4.1	Assembly overview - front centre armrest	83
4.2	Removing and installing front centre armrest	84
5	Interior mirror	85
5.1	Assembly overview - interior mirror	85
5.2	Removing and installing interior mirror	86
5.3	Switching automatic anti-dazzle function on and off	89
5.4	Switching compass display on and off	89
5.5	Setting magnetic deflection zone	89
5.6	Calibrating digital compass	90
5.7	Adjusting automatic anti-dazzle interior mirror for right-hand drive or left-hand drive vehicles	90
5.8	Selecting the applicable deflection zone from the map	91
5.9	Checking operation of automatic anti-dazzle interior mirror	96
69 - Passenger protection	98	
1	Seat belts	98
1.1	Overview of fitting locations - seat belts and anchorage points	98
1.2	Assembly overview - front three-point seat belt	100
1.3	Assembly overview - rear outer three-point seat belt	104
1.4	Assembly overview - rear centre three-point seat belt	105
1.5	Assembly overview - three-point seat belt, 3rd row	106
1.6	Assembly overview - front belt buckle	108
1.7	Assembly overview - rear belt buckle	109
1.8	Removing and installing front three-point seat belt	111
1.9	Removing and installing rear three-point seat belt	116

1.10	Removing and installing rear belt guide	119
1.11	Removing and installing front belt guide	120
1.12	Removing and installing front belt end fitting	121
1.13	Removing and installing rear outer belt end fitting	123
1.14	Removing and installing rear centre belt end fitting	123
1.15	Removing and installing rear belt end fitting - 3rd row	123
1.16	Removing and installing belt height adjuster	124
1.17	Removing and installing front belt buckle	125
1.18	Removing and installing rear belt buckle	126
2	Child seat anchors	128
2.1	Assembly overview - front child seat anchors	128
2.2	Assembly overview - rear child seat anchors	128
2.3	Removing and installing front child seat anchor	130
2.4	Removing and installing rear child seat anchor	130
3	Airbag system	132
3.1	Overview of fitting locations - airbag system	132
4	Airbag control unit	135
4.1	Assembly overview - airbag control unit	135
4.2	Removing and installing airbag control unit J234	135
5	Battery isolation igniter	139
5.1	Assembly overview - battery isolation igniter	139
5.2	Removing and installing battery isolation igniter	141
6	Driver airbag	143
6.1	Assembly overview - driver airbag	143
6.2	Removing and installing airbag unit with igniters	143
6.3	Removing and installing connector at airbag	148
7	Front passenger airbag	150
7.1	Assembly overview - front passenger airbag	150
7.2	Removing and installing front passenger airbag unit with igniters	152
7.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	156
8	Side airbags	157
8.1	Assembly overview - front side airbag	157
8.2	Assembly overview - rear side airbag	157
8.3	Removing and installing front side airbag with igniter	158
8.4	Removing and installing rear side airbag with igniter	161
8.5	Removing and installing wire for side airbag	165
9	Curtain airbags	170
9.1	Assembly overview - curtain airbag	170
9.2	Removing and installing curtain airbag with igniter	170
10	Crash sensors for airbags	174
10.1	Overview of fitting locations - crash sensors for airbags	174
10.2	Removing and installing front airbag crash sensor for driver side G283	176
10.3	Removing and installing front side airbag crash sensor G179 / G180	178
10.4	Removing and installing rear side airbag crash sensor G256 / G257	180
10.5	Removing and installing centre crash sensor for X/Y axis G858	182
11	Seat position sensor	184
11.1	Assembly overview - seat position sensor	184
11.2	Removing and installing seat position sensor	185
12	Belt-fastened recognition system	187
12.1	Removing and installing seat occupied sensor on front passenger side G128	187
13	Seat occupied recognition system	188
13.1	Overview of fitting locations - seat occupied recognition system	188
13.2	Removing and installing seat occupied sensor	190

14	Pedestrian protection	193
14.1	Assembly overview - pedestrian protection	193
14.2	Removing and installing crash sensor for pedestrian protection G570 / G571	195
14.3	Removing and installing centre crash sensor for pedestrian protection G693	198
14.4	Removing and installing trigger for pedestrian protection G598 / G599	200
14.5	Resetting triggered pedestrian protection system	201
70 - Trim, insulation		202
1	Front door trim	202
1.1	Assembly overview - front door trim	202
1.2	Removing and installing mid-range loudspeaker trim	207
1.3	Removing and installing trim panel	207
1.4	Removing and installing front door trim	209
1.5	Removing and installing front door puller	213
1.6	Removing and installing interior door handle	215
1.7	Removing and installing window frame trim	216
2	Rear door trim	218
2.1	Assembly overview - rear door trim	218
2.2	Removing and installing loudspeaker trim in door trim	222
2.3	Removing and installing trim panel	223
2.4	Removing and installing interior door handle	224
2.5	Removing and installing rear door trim	225
2.6	Removing and installing rear door puller	229
2.7	Removing and installing window frame trim	230
3	Dash panel	232
3.1	Assembly overview - dash panel	232
3.2	Removing and installing dash panel cover (side)	238
3.3	Removing and installing trim panel for dash panel	240
3.4	Removing and installing cover for MMI screen	246
3.5	Removing and installing trim for dash panel insert	247
3.6	Removing and installing loudspeaker trim	249
3.7	Removing and installing trim for light switch	250
3.8	Removing and installing trim for entry and start authorisation switch	251
3.9	Removing and installing dash panel	252
3.10	Removing and installing trim for operating and display unit	260
3.11	Removing and installing loudspeaker mounting	261
3.12	Removing and installing dash panel vents	262
3.13	Removing and installing front centre defroster vent	265
3.14	Removing and installing side defroster vent	266
3.15	Removing and installing trim for head-up display	266
4	Dash panel cross member	268
4.1	Assembly overview - dash panel cross member	268
4.2	Removing and installing dash panel cross member	272
5	Passenger compartment trim panels	280
5.1	Overview of fitting locations - passenger compartment trim panels	280
5.2	Assembly overview - sill panel moulding	281
5.3	Assembly overview - A-pillar trim	282
5.4	Assembly overview - B-pillar trim	284
5.5	Assembly overview - C-pillar trim	286
5.6	Assembly overview - D-pillar trim	286
5.7	Assembly overview - foot rest and floor covering	287
5.8	Removing and installing sill panel moulding	289
5.9	Removing and installing A-pillar trim	291
5.10	Removing and installing B-pillar trim	294
5.11	Removing and installing C-pillar trim	297

5.12	Removing and installing D-pillar trim	298
5.13	Removing and installing foot rest	300
5.14	Removing and installing floor covering	300
5.15	Removing and installing loudspeaker trim	302
6	Luggage compartment trim panels	304
6.1	Overview of fitting locations - luggage compartment trim panels	304
6.2	Assembly overview - luggage compartment side trim	305
6.3	Assembly overview - luggage compartment floor	309
6.4	Assembly overview - lower rear lid trim	313
6.5	Assembly overview - upper rear lid trim	315
6.6	Removing and installing lower rear lid trim	315
6.7	Removing and installing upper rear lid trim	317
6.8	Removing and installing luggage compartment side trim	318
6.9	Removing and installing luggage compartment floor trim	321
6.10	Removing and installing luggage compartment floor	323
6.11	Removing and installing lock carrier trim	325
6.12	Removing and installing fastening ring	326
6.13	Removing and installing retainer for luggage compartment floor covering	326
6.14	Removing and installing grip for rear luggage compartment floor	326
6.15	Removing and installing retaining rail	327
6.16	Removing and installing lining for spare wheel well	329
6.17	Removing and installing support bracket for spare wheel	329
7	Roof trim panels	331
7.1	Assembly overview - roof end strip	331
7.2	Assembly overview - moulded headliner	331
7.3	Removing and installing roof end strip	332
7.4	Removing and installing moulded headliner	333
7.5	Lowering moulded headliner	334
7.6	Lowering moulded headliner for removal of roof aerial	337
7.7	Attaching roof reinforcement to body	338
72 - Seat frames	340	
1	Overview - seat versions	340
1.1	Overview of fitting locations - seat versions	340
2	Front seats	344
2.1	Overview of fitting locations - electrical and electronic components	344
2.2	Assembly overview - front seat	347
2.3	Assembly overview - front seat backrest	349
2.4	Assembly overview - head restraint	351
2.5	Assembly overview - seat pan	353
2.6	Assembly overview - seat pan adjustment	357
2.7	Assembly overview - electric seat adjustment actuators	359
2.8	Removing and installing front seat	360
2.9	Attaching front seat to seat repair stand	365
2.10	Connecting and disconnecting airbag adapter	366
2.11	Connecting and disconnecting modular wiring	368
2.12	Removing and installing seat height adjustment handle	369
2.13	Removing and installing seat rake adjuster	370
2.14	Removing and installing backrest adjuster	371
2.15	Removing and installing front seat backrest	374
2.16	Removing and installing backrest fan	376
2.17	Removing and installing head restraint	376
2.18	Removing and installing head restraint guide	379
2.19	Dismantling and assembling seat pan	381
2.20	Removing and installing seat adjustment operating unit E470 / E471	392



2.21	Removing and installing switch/switch module for front seat	393
2.22	Removing and installing massage function button E670 / E671	394
2.23	Removing and installing lumbar support adjustment motor V125 / V126 / V129 / V130 ..	395
2.24	Removing and installing control unit for seat functions	396
2.25	Bracket for multimedia system display unit	397
2.26	Removing and installing front seat fans	398
2.27	Removing and installing backrest cover panel	399
3	Front seat pneumatic system	403
3.1	Overview of fitting locations - pneumatic system	403
3.2	Connection diagram - pneumatic system	405
3.3	Assembly overview - pneumatic system	406
3.4	Checking pneumatic system	410
3.5	Severing and connecting pneumatic lines	414
3.6	Servicing pneumatic lines	415
3.7	Removing and installing module carrier with valve block 1 N475 / N477 and air cushions ..	416
3.8	Removing and installing air cushion for seat bolster adjustment	417
3.9	Removing and installing massage mat	418
3.10	Removing and installing valve block 2 for massage function N476 / N478	420
3.11	Removing and installing compressor for pneumatic seat	421
4	Rear seats	422
4.1	Assembly overview - bench seat/individual seats	422
4.2	Assembly overview - head restraint and head restraint guide	439
4.3	Assembly overview - rear seat backrest	442
4.4	Removing and installing bench seat/individual seats	446
4.5	Connecting and disconnecting modular wiring	452
4.6	Dismantling and assembling seat frame	454
4.7	Removing and installing head restraint	471
4.8	Removing and installing head restraint guide	474
4.9	Removing and installing locking mechanism for rear seat backrest	476
4.10	Removing and installing centre armrest	477
74 - Seat - padding, covers	480	
1	Covers and padding on front seats	480
1.1	Assembly overview - seat pan cover and padding	480
1.2	Assembly overview - backrest cover and padding	483
1.3	Assembly overview - seat heater elements	485
1.4	Removing and installing seat pan cover and padding	487
1.5	Removing and installing backrest cover and padding	491
1.6	Separating seat pan cover and padding	496
1.7	Separating backrest cover and padding	497
1.8	Removing and installing seat heater elements	498
2	Covers and padding on rear seats	500
2.1	Assembly overview - cover and padding	500
2.2	Assembly overview - seat heater elements	506
2.3	Removing and installing cover and padding	508
2.4	Detaching cover from padding	515
2.5	Removing and installing seat heater element	519
2.6	Removing and installing backrest heater element	519