

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Safety information</b> .....	<b>1</b>
1.1 Safety precautions when working on vehicles with start/stop system .....	1
1.2 Safety precautions when using testers and measuring instruments during a road test .....	1
1.3 Safety precautions when working on the cooling system .....	1
1.4 Safety precautions when working on the high-voltage system .....	2
1.5 Safety precautions when working in the vicinity of high-voltage components .....	3
<b>2 Repair instructions</b> .....	<b>4</b>
2.1 Routing and attachment of pipes, hoses and wiring .....	4
2.2 Contact corrosion .....	4
2.3 Preparations for installation of self-adhesive components .....	4
2.4 General information on using adhesives .....	6
2.5 Secure threaded connections .....	7
2.6 Identification plates .....	7
2.7 Use of impact wrenches .....	7
<b>50 - Body - front</b> .....	<b>9</b>
<b>1 Safety information</b> .....	<b>9</b>
<b>2 Lock carrier</b> .....	<b>10</b>
2.1 Assembly overview - lock carrier .....	10
2.2 Removing and installing lock carrier cover .....	12
2.3 Removing and installing lock carrier .....	12
2.4 Removing and installing lower longitudinal member .....	16
2.5 Removing and installing brackets for lower longitudinal member .....	18
2.6 Removing and installing reinforcement strut .....	19
<b>3 Wing</b> .....	<b>20</b>
3.1 Assembly overview - wing .....	20
3.2 Assembly overview - wing panel struts .....	21
3.3 Assembly overview - wing covers .....	23
3.4 Removing and installing wing .....	24
3.5 Removing and installing wing panel brace .....	25
3.6 Removing and installing tension strut .....	25
3.7 Removing and installing wheel blocker cover .....	25
3.8 Removing and installing wing bracket (centre) .....	26
3.9 Removing and installing wing bracket (rear) .....	27
3.10 Removing and installing rear cover for wing .....	27
3.11 Removing and installing closure plate .....	28
<b>4 Bulkhead</b> .....	<b>29</b>
4.1 Assembly overview - bulkhead .....	29
4.2 Assembly overview - plenum chamber cover .....	30
4.3 Removing and installing plenum chamber bulkhead .....	30
4.4 Removing and installing plenum chamber closure plate .....	32
4.5 Removing and installing cover (top) for plenum chamber closure plate .....	32
4.6 Removing and installing cover (bottom) for plenum chamber closure plate .....	33
4.7 Removing and installing plenum chamber cover .....	34
<b>55 - Bonnet, rear lid</b> .....	<b>35</b>
<b>1 Safety information</b> .....	<b>35</b>
<b>2 Bonnet</b> .....	<b>36</b>
2.1 Assembly overview - bonnet .....	36
2.2 Assembly overview - insulation and impact guard on bonnet .....	37
2.3 Assembly overview - Bowden cable .....	38



2.4	Removing and installing bonnet	40
2.5	Adjusting bonnet	41
2.6	Removing and installing hinges	44
2.7	Resetting hinge	45
2.8	Removing and installing striker	46
2.9	Removing and installing gas strut	46
2.10	Releasing gas from gas strut	47
2.11	Removing and installing insulation	47
2.12	Removing and installing impact guard	48
2.13	Removing and installing Bowden cable	48
2.14	Removing and installing bonnet lock	50
2.15	Removing and installing operating lever for bonnet lock	51
2.16	Removing and installing operating lever for arrester	51
2.17	Removing and installing mounting bracket for operating lever for bonnet lock	51
2.18	Removing and installing mounting bracket with Bowden cable for operating lever for arrester	52
<b>3</b>	<b>Rear lid</b>	<b>53</b>
3.1	Assembly overview - rear lid	53
3.2	Assembly overview - rear lid power opening	55
3.3	Removing and installing rear lid	57
3.4	Adjusting rear lid	58
3.5	Removing and installing hinges	61
3.6	Removing and installing rear lid seal	62
3.7	Removing and installing roof frame cover	62
3.8	Removing and installing adjusting buffer	63
3.9	Removing and installing gas strut	63
3.10	Releasing gas from gas strut	64
3.11	Removing and installing rear lid lock	64
3.12	Removing and installing striker	65
3.13	Removing and installing power latching motor for rear lid V382	65
3.14	Removing and installing Bowden cable for power latching system	66
3.15	Removing and installing motor 1 for rear lid V444 / motor 2 for rear lid V445	67
3.16	Adapting motor 1 for rear lid V444 / motor 2 for rear lid V445	68
3.17	Removing and installing rear lid control unit J605	68
3.18	Removing and installing rear lid power opening control unit J938	69
3.19	Removing and installing rear lid power opening sender G750 / G760	70
<b>4</b>	<b>Tank flap unit</b>	<b>72</b>
4.1	Assembly overview - tank flap unit	72
4.2	Removing and installing tank flap unit	72
4.3	Removing and installing trim panel for tank flap unit	74
4.4	Removing and installing drain hose for tank flap unit	74
4.5	Removing and installing manual release cable	75
<b>5</b>	<b>Charging flap unit</b>	<b>76</b>
5.1	Assembly overview - charging flap unit	76
5.2	Removing and installing charging flap unit	77
5.3	Removing and installing charging flap unit trim	78
5.4	Removing and installing drain hose for charging flap unit	78
5.5	Removing and installing manual release cable for high-voltage charging flap lock	79
<b>57</b>	<b>Front doors, door components, central locking</b>	<b>80</b>
<b>1</b>	<b>Safety information</b>	<b>80</b>
<b>2</b>	<b>Door</b>	<b>81</b>
2.1	Assembly overview - door	81
2.2	Assembly overview - door seals	85
2.3	Removing and installing door	86

2.4	Adjusting door	86
2.5	Adjusting striker	90
2.6	Removing and installing door arrester	91
2.7	Removing and installing impact bar	92
2.8	Removing and installing inner door seal	93
2.9	Removing and installing outer door seal	93
2.10	Removing and installing joint seal	96
<b>3</b>	<b>Door components</b>	<b>98</b>
3.1	Assembly overview - window regulator	98
3.2	Assembly overview - door handle and door lock	99
3.3	Assembly overview - window guides and window slot seals	103
3.4	Removing and installing window regulator	104
3.5	Removing and installing window regulator motor	105
3.6	Removing and installing door handle	106
3.7	Removing and installing door handle trim	107
3.8	Removing and installing trim strip for door handle	108
3.9	Removing and installing mounting bracket	108
3.10	Removing and installing operating cable for exterior door handle	109
3.11	Removing and installing lock cylinder	111
3.12	Removing and installing cap on door handle	112
3.13	Removing and installing trim strip for cap	112
3.14	Removing and installing door lock	113
3.15	Removing and installing cover for door lock	113
3.16	Removing and installing striker	114
3.17	Removing and installing operating cable for interior door handle	114
3.18	Removing and installing inner door cover	115
3.19	Removing and installing power latching motor	117
3.20	Removing and installing window guide	118
3.21	Removing and installing inner window slot seal	119
3.22	Removing and installing outer window slot seal	120
<b>4</b>	<b>Central locking system</b>	<b>122</b>
4.1	Overview of fitting locations - central locking system	122
4.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	124
4.3	Removing and installing rear left door control unit J388 and rear right door control unit J389	124
4.4	Removing and installing convenience system central control unit J393	125
4.5	Removing and installing bonnet contact switch F266	126
4.6	Removing and installing tank filler flap locking motor V155	126
4.7	Removing and installing actuator for high-voltage charging flap lock 1 F496	126
<b>58</b>	<b>Rear doors, door components</b>	<b>128</b>
<b>1</b>	<b>Safety information</b>	<b>128</b>
<b>2</b>	<b>Door</b>	<b>129</b>
2.1	Assembly overview - door	129
2.2	Assembly overview - door seals	131
2.3	Removing and installing door	133
2.4	Adjusting door	134
2.5	Adjusting striker	137
2.6	Removing and installing door arrester	138
2.7	Removing and installing inner door seal	139
2.8	Removing and installing outer door seal	139
2.9	Removing and installing joint seal	142
2.10	Removing and installing side member seal	143
<b>3</b>	<b>Door components</b>	<b>144</b>
3.1	Assembly overview - window regulator	144



3.2	Assembly overview - door handle and door lock	145
3.3	Assembly overview - window guides and window slot seals	149
3.4	Removing and installing window regulator	150
3.5	Removing and installing window regulator motor	151
3.6	Removing and installing door handle	152
3.7	Removing and installing door handle trim	153
3.8	Removing and installing trim strip for door handle	153
3.9	Removing and installing mounting bracket	154
3.10	Removing and installing operating cable for exterior door handle	155
3.11	Removing and installing housing	157
3.12	Removing and installing cap for housing	158
3.13	Removing and installing trim strip for cap	158
3.14	Removing and installing door lock	158
3.15	Removing and installing striker	159
3.16	Removing and installing operating cable for interior door handle	159
3.17	Removing and installing inner door cover	160
3.18	Removing and installing power latching motor V329	162
3.19	Removing and installing window guide	163
3.20	Removing and installing guide rail for door window	164
3.21	Removing and installing inner window slot seal	165
3.22	Removing and installing outer window slot seal	165
<b>60</b>	<b>- Sunroof</b>	<b>167</b>
<b>1</b>	<b>Safety information</b>	<b>167</b>
<b>2</b>	<b>Sliding sunroof</b>	<b>168</b>
2.1	Assembly overview - sliding sunroof	168
2.2	Assembly overview - sunroof roller blind	170
2.3	Assembly overview - wind deflector	171
2.4	Removing and installing sliding sunroof frame	172
2.5	Removing and installing glass panel	174
2.6	Adjusting glass panel	176
2.7	Removing and installing tilt mechanism for sliding sunroof	178
2.8	Removing and installing guide rail for tilt mechanism	180
2.9	Removing and installing sliding sunroof adjustment control unit J245	181
2.10	Adapting sliding sunroof adjustment control unit J245	182
2.11	Removing and installing sliding sunroof motor V1	182
2.12	Adapting sliding sunroof motor V1	183
2.13	Removing and installing sliding sunroof seals	183
2.14	Removing and installing sunroof roller blind	186
2.15	Removing and installing sunroof roller blind motor V260	188
2.16	Adapting sunroof roller blind motor V260	189
2.17	Removing and installing wind deflector	189
2.18	Removing and installing mounting for wind deflector	190
2.19	Emergency opening	190
<b>3</b>	<b>Water drain hoses</b>	<b>191</b>
3.1	Assembly overview - water drain hoses	191
3.2	Cleaning water drain hoses	192
3.3	Removing and installing water drain hoses	193
<b>63</b>	<b>- Bumpers</b>	<b>196</b>
<b>1</b>	<b>Safety information</b>	<b>196</b>
<b>2</b>	<b>Front bumper</b>	<b>198</b>
2.1	Assembly overview - bumper cover	198
2.2	Assembly overview - reflector	209
2.3	Assembly overview - covers and air ducts	209

2.4	Assembly overview - bumper carrier	210
2.5	Removing and installing bumper cover	212
2.6	Removing and installing bumper cover mounting	214
2.7	Removing and installing cover for headlight washer jet	215
2.8	Removing and installing air intake grille	216
2.9	Removing and installing end cover for air intake grille	219
2.10	Removing and installing air duct	220
2.11	Removing and installing base plate for bumper cover	224
2.12	Removing and installing trim strips	225
2.13	Removing and installing closure plate for bumper cover	226
2.14	Removing and installing underbody guard	227
2.15	Removing and installing insert for underbody guard	228
2.16	Removing and installing front spoiler	229
2.17	Removing and installing insert for air intake grille	229
2.18	Removing and installing trim	230
2.19	Removing and installing reflector	230
2.20	Removing and installing headlight cover	231
2.21	Removing and installing bumper carrier	232
2.22	Removing and installing moulded foam insert	233
2.23	Removing and installing bracket for ambient temperature sensor G17	234
<b>3</b>	<b>Rear bumper</b>	<b>235</b>
3.1	Assembly overview - bumper cover	235
3.2	Assembly overview - bumper cover mounting	243
3.3	Assembly overview - bumper carrier	244
3.4	Removing and installing bumper cover	245
3.5	Removing and installing bumper cover mounting	250
3.6	Removing and installing base plate for bumper cover	251
3.7	Removing and installing closure plate	252
3.8	Removing and installing trim strip for bumper cover	253
3.9	Removing and installing bumper cover trim	255
3.10	Removing and installing spoiler	256
3.11	Removing and installing bumper carrier	257
<b>64</b>	<b>- Glazing</b>	<b>259</b>
<b>1</b>	<b>Safety information</b>	<b>259</b>
<b>2</b>	<b>Repair instructions</b>	<b>260</b>
2.1	Minimum drying times for bonded windows	260
2.2	Repairing windows	260
2.3	Tools and materials required for installation and removal	261
2.4	Preparing undamaged windows for installation	264
2.5	Preparing new windows for installation	265
2.6	Preparing body flange for installation	266
2.7	Cleaning off adhesive sealant	267
<b>3</b>	<b>Windscreen</b>	<b>268</b>
3.1	Assembly overview - windscreen	268
3.2	Removing and installing windscreen	269
3.3	Removing and installing heated windscreen control unit J505	274
<b>4</b>	<b>Rear window</b>	<b>277</b>
4.1	Assembly overview - rear window	277
4.2	Removing and installing rear window	277
<b>5</b>	<b>Side windows</b>	<b>283</b>
5.1	Assembly overview - rear side window	283
5.2	Removing and installing rear side window	283
<b>6</b>	<b>Door windows</b>	<b>286</b>
6.1	Assembly overview - front door window	286



6.2	Assembly overview - rear door window	287
6.3	Removing and installing front door window	288
6.4	Removing and installing fixed front door window	289
6.5	Removing and installing rear door window	290
<b>66</b>	<b>- Exterior equipment</b>	<b>291</b>
<b>1</b>	<b>Safety information</b>	<b>291</b>
<b>2</b>	<b>Radiator grille/front trim</b>	<b>292</b>
2.1	Assembly overview - radiator grille	292
2.2	Removing and installing radiator grille	297
2.3	Removing and installing reinforcement strut	298
2.4	Attaching number plate - country-specific version	299
2.5	Removing and installing centre closure plate	299
2.6	Removing and installing cover for sensor	300
2.7	Removing and installing trim for washer jet	302
2.8	Removing and installing cover for radiator grille	302
2.9	Removing and installing covers	302
<b>3</b>	<b>Spoilers</b>	<b>304</b>
3.1	Assembly overview - spoilers	304
3.2	Removing and installing spoiler	304
3.3	Removing and installing spoiler (side)	306
<b>4</b>	<b>Strips/trim panels/extensions</b>	<b>308</b>
4.1	Assembly overview - trim strip and covers	308
4.2	Assembly overview - sill panel trim	311
4.3	Assembly overview - water deflector strip	312
4.4	Assembly overview - trim panel for B-pillar	313
4.5	Assembly overview - trim panel for C-pillar	314
4.6	Assembly overview - wheel arch covers	315
4.7	Assembly overview - footboards	317
4.8	Assembly overview - heat shield	319
4.9	Removing and installing trim strip	323
4.10	Removing and installing cover	330
4.11	Removing and installing sill panel trim	332
4.12	Removing and installing water deflector strip	334
4.13	Removing and installing fastening strip for water deflector strip	334
4.14	Removing and installing trim panel for B-pillar on door	335
4.15	Removing and installing trim panel for C-pillar on door	336
4.16	Removing and installing wheel arch extension	337
4.17	Removing and installing wheel arch covers	341
4.18	Removing and installing footboards	346
4.19	Removing and installing heat shield for floor	347
<b>5</b>	<b>Noise insulation</b>	<b>359</b>
5.1	Assembly overview - noise insulation	359
5.2	Removing and installing noise insulation	360
<b>6</b>	<b>Underbody cladding</b>	<b>362</b>
6.1	Assembly overview - underbody cladding	362
6.2	Assembly overview - underbody struts	364
6.3	Removing and installing underbody cladding	366
6.4	Removing and installing tunnel cross-piece	369
6.5	Removing and installing diagonal struts	370
6.6	Removing and installing underbody guard	371
<b>7</b>	<b>Roof strips/roof rails</b>	<b>373</b>
7.1	Assembly overview - roof rail	373
7.2	Removing and installing roof rail	374
7.3	Removing and installing compensation element	375

<b>8</b>	<b>Exterior mirrors</b> .....	<b>377</b>
8.1	Assembly overview - exterior mirror .....	377
8.2	Removing and installing exterior mirror .....	379
8.3	Removing and installing mirror glass .....	381
8.4	Removing and installing mirror adjustment unit .....	382
8.5	Removing and installing mirror cover .....	382
8.6	Removing and installing mirror trim .....	382
<b>9</b>	<b>Wheel housing liners</b> .....	<b>384</b>
9.1	Assembly overview - front wheel housing liner .....	384
9.2	Assembly overview - rear wheel housing liner .....	385
9.3	Removing and installing front wheel housing liner .....	387
9.4	Removing and installing wheel spoiler (front) .....	388
9.5	Removing and installing rear wheel housing liner .....	389
9.6	Removing and installing wheel spoiler (rear) .....	389
<b>10</b>	<b>Lettering and badges</b> .....	<b>391</b>
10.1	Assembly overview - lettering and badges .....	391
10.2	General notes on renewing lettering and badges .....	391
10.3	Dimensions - lettering and badges at rear .....	392
10.4	Dimensions - lettering and badges on sides .....	394
10.5	Removing and installing lettering and badges for radiator grille .....	395
<b>11</b>	<b>Towing bracket</b> .....	<b>399</b>
11.1	Overview of fitting locations - towing bracket .....	399
11.2	Assembly overview - towing bracket .....	399
11.3	Removing and installing trailer articulation angle sensor G820 .....	400
11.4	Removing and installing trailer detector control unit J345 .....	402