

Contents

00 - Technical data	1
1 Identification	1
2 Safety information	2
2.1 Safety precautions	2
2.2 Safety precautions when working on the high-voltage system	2
2.3 Safety precautions when working in the vicinity of high-voltage components	3
3 Repair instructions	4
3.1 Rules for cleanliness when working on the high-voltage battery	4
3.2 Painting work on vehicles with high-voltage system	4
3.3 Repair instructions for all vehicles	4
4 Assessing high-voltage system risk level	5
4.1 Necessary qualifications	5
4.2 Work that requires high-voltage system to be de-energised	5
10 - Removing and installing engine	8
1 Safety information	8
2 Removing and installing engine	9
2.1 Removing engine	9
2.2 Separating engine and gearbox	46
2.3 Removing engine from scissor-type assembly platform	59
2.4 Securing engine to engine and gearbox support	61
2.5 Installing engine	64
3 Assembly mountings	71
3.1 Assembly overview - assembly mountings	71
3.2 Supporting engine in installation position	76
3.3 Removing and installing engine mountings	79
3.4 Removing and installing gearbox mounting	85
3.5 Removing and installing power unit mounting senders	92
3.6 Calibrating electrohydraulic engine mounting	94
13 - Crankshaft group	95
1 Safety information	95
2 Cylinder block (pulley end)	96
2.1 Assembly overview - cylinder block (pulley end)	96
2.2 Assembly overview - sealing flange (pulley end)	96
2.3 Removing and installing poly V-belt	96
2.4 Removing and installing poly V-belt tensioner	96
2.5 Removing and installing vibration damper	96
2.6 Removing and installing bracket for ancillaries	97
2.7 Removing and installing engine support	98
2.8 Renewing crankshaft oil seal (pulley end)	99
2.9 Removing and installing sealing flange (pulley end)	99
3 Cylinder block (gearbox end)	100
4 Crankshaft	101
5 Balance shaft	102
6 Pistons and conrods	103
15 - Cylinder head, valve gear	104
1 Safety information	104
2 Timing chain cover	105
2.1 Assembly overview - timing chain cover	105



2.2	Removing and installing timing chain cover	105
2.3	Renewing oil seal for vibration damper	105
3	Chain drive	106
3.1	Assembly overview - camshaft timing chains	106
3.2	Assembly overview - drive chain for oil pump	106
3.3	Removing camshaft timing chain from camshafts	106
3.4	Removing and installing camshaft timing chain	106
4	Cylinder head	107
4.1	Assembly overview - cylinder head	107
4.2	Assembly overview - camshaft housing	107
4.3	Removing and installing cylinder head	107
4.4	Removing and installing camshaft housing	108
4.5	Checking compression	110
5	Valve gear	111
5.1	Assembly overview - valve gear	111
5.2	Measuring axial clearance of camshaft	111
5.3	Measuring radial clearance of camshaft	111
5.4	Removing and installing camshaft	111
5.5	Removing and installing cam actuators	111
5.6	Removing and installing camshaft control valve 1 N205	114
5.7	Removing and installing valve stem oil seals	114
17 - Lubrication		115
1	Safety information	115
2	Sump/oil pump	116
2.1	Assembly overview - sump/oil pump	116
2.2	Engine oil	116
2.3	Removing and installing lower part of sump	116
2.4	Removing and installing upper part of sump	116
2.5	Removing and installing oil baffle plate	116
2.6	Removing and installing oil pump	116
2.7	Removing and installing oil level and oil temperature sender G266	116
3	Engine oil cooler	117
3.1	Assembly overview - engine oil cooler	117
3.2	Removing and installing engine oil cooler	117
3.3	Removing and installing spray nozzle valve	117
4	Crankcase breather	118
5	Oil filter/oil pressure switches	119
5.1	Assembly overview - oil filter	119
5.2	Assembly overview - oil pressure switches/oil pressure control	119
5.3	Removing and installing oil filter housing	119
5.4	Removing and installing oil pressure switch F22	120
5.5	Removing and installing oil temperature sender G8	120
5.6	Removing and installing oil pressure sender G10	120
5.7	Checking oil pressure	121
5.8	Removing and installing valve for oil pressure control N428	121
19 - Cooling		123
1	Safety information	123
2	Cooling system/coolant	124
2.1	Connection diagram - coolant hoses	124
2.2	Overview of fitting locations - cooling system	136
2.3	Assembly overview - coolant expansion tank	139
2.4	Checking cooling system for leaks	141

2.5	Draining and filling cooling system	147
2.6	Removing and installing coolant expansion tank	169
3	Coolant pump/thermostat assembly	175
3.1	Assembly overview - coolant pump/thermostat	175
3.2	Assembly overview - electric coolant pump	175
3.3	Assembly overview - coolant temperature senders	179
3.4	Assembly overview - coolant valves	182
3.5	Removing and installing electric coolant pump	185
3.6	Removing and installing coolant pump	196
3.7	Removing and installing map-controlled engine cooling system thermostat F265	196
3.8	Removing and installing coolant temperature sender G62	197
3.9	Removing and installing engine outlet coolant temperature sender G82	197
3.10	Removing and installing radiator outlet coolant temperature sender G83	197
3.11	Removing and installing temperature sender for engine temperature regulation G694	200
3.12	Removing and installing coolant valves	200
3.13	Removing and installing coolant temperature sender for high-voltage system	210
4	Coolant pipes	224
4.1	Assembly overview - coolant pipes	224
4.2	Removing and installing coolant pipes	228
5	Radiator/radiator fans	243
5.1	Assembly overview - radiator/radiator fans	243
5.2	Assembly overview - radiator cowl and radiator fans	245
5.3	Assembly overview - radiator blind	246
5.4	Removing and installing radiator	247
5.5	Removing and installing radiator cowl	253
5.6	Removing and installing radiator fan V7	264
5.7	Removing and installing radiator blind	264
5.8	Removing and installing radiator blind control motor	266
5.9	Removing and installing radiator for high-voltage cooling circuit	268
5.10	Removing and installing air guides	270
21	Turbocharging/supercharging	275
1	Safety information	275
2	Turbochargers	276
2.1	Assembly overview - turbocharger	276
2.2	Removing and installing turbocharger	276
2.3	Renewing vacuum unit for turbocharger	276
2.4	Removing and installing temperature sender for engine cover panel G765	277
2.5	Removing and installing overrun air recirculation valve	277
3	Charge air system	278
3.1	Assembly overview - charge air system	278
3.2	Assembly overview - hose connections for charge air system	280
3.3	Removing and installing air pipe	280
3.4	Removing and installing pressure pipe	286
3.5	Removing and installing charge air cooler	290
3.6	Removing and installing charge pressure sender G31	293
3.7	Checking charge air system for leaks	293
24	Mixture preparation - injection	296
1	Safety information	296
2	Injection system	297
2.1	Overview of fitting locations - injection system	297
2.2	Checking fuel system for leaks	310
3	Vacuum system	311



4	Air filter	312
4.1	Assembly overview - air filter housing	312
4.2	Removing and installing air filter housing	313
5	Intake manifold	315
5.1	Assembly overview - intake manifold	315
5.2	Removing and installing intake manifold	315
5.3	Removing and installing throttle valve module GX3	316
6	Injectors	318
6.1	Assembly overview - fuel rail with injectors	318
6.2	Removing and installing fuel rail	318
7	Senders and sensors	319
7.1	Assembly overview - pressure differential sender	319
7.2	Removing and installing intake air temperature sender G42/intake manifold pressure sender G71	319
7.3	Removing and installing fuel pressure sender G247	320
7.4	Removing and installing fuel pressure sender for low pressure G410	320
7.5	Removing and installing pressure differential sender for particulate filter G1037	320
8	High-pressure pump	321
8.1	Assembly overview - high-pressure pump	321
8.2	Removing and installing high-pressure pump	321
8.3	Removing and installing high-pressure pipe	321
9	Lambda probe	322
9.1	Assembly overview - Lambda probe	322
9.2	Removing and installing Lambda probe	322
10	Engine control unit	324
10.1	Assembly overview - engine control unit	324
10.2	Removing and installing engine control unit J623	324
26 - Exhaust system	326	
1	Safety information	326
2	Exhaust pipes/silencers	327
2.1	Assembly overview - silencers	327
2.2	Removing and installing front silencer	333
2.3	Separating exhaust pipes/silencers	335
2.4	Removing and installing silencers	336
2.5	Stress-free alignment of exhaust system	342
2.6	Checking exhaust system for leaks	342
2.7	Installation position of clamp	343
3	Emission control system	344
3.1	Assembly overview - emission control system	344
3.2	Removing and installing catalytic converter	347
3.3	Removing and installing particulate filter	348
3.4	Removing and installing exhaust flap control unit J883	351
4	Exhaust gas temperature regulation	353
28 - Ignition system	354	
1	Safety information	354
2	Ignition system	355
2.1	Assembly overview - ignition system	355
2.2	Removing and installing ignition coils	355
2.3	Removing and installing knock sensor 1 G61	358
2.4	Removing and installing Hall senders	358
2.5	Removing and installing engine speed sender G28	360

93 - Electric drive systems	361
1 Safety information	361
2 High-voltage components	362
2.1 Overview of fitting locations - high-voltage components	362
3 Warning stickers	367
3.1 Checking warning stickers	367
4 High-voltage battery unit	372
4.1 Assembly overview - high-voltage battery	372
4.2 Inspecting and classifying hybrid battery unit AX1	381
4.3 Removing and installing hybrid battery unit AX1	382
4.4 Checking high-voltage battery for leaks	416
4.5 Removing and installing battery regulation control unit J840	427
4.6 Removing and installing switching unit for high-voltage battery SX6	428
5 High-voltage battery components	434
5.1 Assembly overview - high-voltage battery	434
5.2 Overview of fitting locations - battery modules	447
5.3 Overview of fitting locations - battery connectors	450
5.4 Determining mean cell voltage	451
5.5 Charging and discharging battery modules	452
5.6 Marking battery modules	453
5.7 Removing battery module	454
5.8 Installing battery module	484
5.9 Visually inspecting and classifying battery module	506
5.10 Removing and installing bursting valve	507
6 Power and control electronics for electric drive	510
6.1 Overview of fitting locations - power and control electronics for electric drive	510
6.2 Removing and installing power and control electronics for electric drive	513
6.3 Removing and installing bracket for power and control electronics for electric drive JX1	518
7 Electric drive motor	519
7.1 Assembly overview - electric drive motor	519
7.2 Removing and installing three-phase current drive VX54	522
7.3 Removing and installing centring sleeve	523
7.4 Removing and installing drive motor temperature sender G712	524
7.5 Removing and installing drive motor rotor position sender 1 G713	525
7.6 Removing and installing torsion damper	526
7.7 Removing and installing actuator for disengagement clutch V606	529
7.8 Removing and installing coolant connection	531
7.9 Transporting three-phase current drive	533
7.10 Checking free movement of disengagement clutch	534
8 High-voltage wiring	536
8.1 Overview of fitting locations - high-voltage wiring	536
8.2 Removing and installing high-voltage wiring harness for high-voltage battery	543
8.3 Removing and installing high-voltage wiring harness for drive motor	549
8.4 Removing and installing high-voltage wire for electrical air conditioner compressor	553
8.5 Removing and installing high-voltage wire for high-voltage heater (PTC)	556
9 De-energising high-voltage system	567
10 Re-energising high-voltage system	570
11 Potential equalisation lines	572
11.1 General notes - potential equalisation lines	572
11.2 Overview of fitting locations - potential equalisation lines	572
11.3 Potential equalisation measurement	575
11.4 Removing and installing potential equalisation lines	576
12 Charging socket	581



12.1	Assembly overview - charging socket	581
12.2	Charging system	582
12.3	Diagnosis of charging system	583
12.4	USB adapter for e-tron charging system	586
12.5	Removing and installing high-voltage battery charging socket 1 UX4	587
12.6	Removing and installing module for battery charge selector buttons EX32	591
13	Charging unit for high-voltage battery	593
13.1	Assembly overview - charging unit for high-voltage battery	593
13.2	Removing and installing charging unit 1 for high-voltage battery AX4	595
13.3	Removing and installing bracket for charging unit 1 for high-voltage battery AX4	599
14	Vehicle noise/engine sound	600
14.1	Overview of fitting locations - vehicle noise/engine sound	600
14.2	Removing and installing engine sound generator control unit J943	600
14.3	Removing and installing actuator 1 for engine sound generator R257	601