

Contents

00 - Technical data	1
1 Identification	1
2 Safety information	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Separating engine and gearbox	19
1.3 Removing engine from scissor-type assembly platform	24
1.4 Securing engine to engine and gearbox support	26
1.5 Installing engine	28
2 Assembly mountings	32
2.1 Assembly overview - assembly mountings	32
2.2 Supporting engine in installation position	37
2.3 Removing and installing engine mountings	40
2.4 Removing and installing power unit mounting senders	44
2.5 Removing and installing gearbox mountings	45
2.6 Removing and installing power unit mounting control unit J931	47
2.7 Removing and installing pendulum support	48
2.8 Calibrating electrohydraulic engine mounting	50
3 Engine cover panel	52
3.1 Assembly overview - engine cover panel	52
3.2 Removing and installing engine cover panel	53
13 - Crankshaft group	54
1 Cylinder block (pulley end)	54
1.1 Assembly overview - cylinder block (pulley end)	54
1.2 Assembly overview - sealing flange (pulley end)	54
1.3 Removing and installing poly V-belts	54
1.4 Removing and installing poly V-belt tensioner	57
1.5 Removing and installing vibration damper	58
1.6 Removing and installing bracket for ancillaries	59
1.7 Removing and installing engine support	59
1.8 Renewing crankshaft oil seal (pulley end)	59
1.9 Removing and installing sealing flange (pulley end)	59
2 Cylinder block (gearbox end)	61
3 Crankshaft	62
4 Balance shaft	63
5 Pistons and conrods	64
15 - Cylinder head, valve gear	65
1 Timing chain cover	65
2 Chain drive	66
2.1 Assembly overview - camshaft timing chains	66
2.2 Assembly overview - drive chain for oil pump	66
2.3 Removing camshaft timing chain from camshafts	66
2.4 Removing and installing camshaft timing chain	71
2.5 Removing and installing chain tensioner	71
3 Cylinder head	72
3.1 Assembly overview - cylinder head	72



3.2	Assembly overview - camshaft housing	72
3.3	Removing and installing cylinder head	73
3.4	Removing and installing camshaft housing	73
3.5	Checking compression	74
4	Valve gear	75
4.1	Assembly overview - valve gear	75
4.2	Measuring axial clearance of camshaft	75
4.3	Measuring radial clearance of camshaft	75
4.4	Removing and installing camshaft	75
4.5	Removing and installing cam actuators	75
4.6	Removing and installing camshaft control valve 1 N205	78
4.7	Removing and installing valve stem oil seals	78
5	Inlet and exhaust valves	79
17	Lubrication	80
1	Sump/oil pump	80
1.1	Assembly overview - sump/oil pump	80
1.2	Engine oil	80
1.3	Removing and installing lower part of sump	81
1.4	Removing and installing upper part of sump	81
1.5	Removing and installing oil pump	81
1.6	Removing and installing oil level and oil temperature sender G266	81
2	Engine oil cooler	82
3	Crankcase breather	83
3.1	Assembly overview - crankcase breather system	83
3.2	Removing and installing oil separator	83
3.3	Renewing crankcase breather hose	83
4	Oil filter/oil pressure switches	84
4.1	Assembly overview - oil filter	84
4.2	Assembly overview - oil pressure switches/oil pressure control	84
4.3	Removing and installing oil filter housing	84
4.4	Removing and installing oil pressure switch F22	84
4.5	Removing and installing oil temperature sender G8	85
4.6	Removing and installing oil pressure sender G10	85
4.7	Checking oil pressure	86
4.8	Removing and installing valve for oil pressure control N428	86
4.9	Removing and installing piston cooling jet control valve N522	86
19	Cooling	87
1	Cooling system/coolant	87
1.1	Connection diagram - coolant hoses	87
1.2	Overview of fitting locations - cooling system	95
1.3	Assembly overview - coolant expansion tank	99
1.4	Checking cooling system for leaks	99
1.5	Draining and filling cooling system	99
1.6	Removing and installing coolant expansion tank	105
2	Coolant pump/thermostat assembly	107
2.1	Assembly overview - coolant pump/thermostat	107
2.2	Assembly overview - electric coolant pump	107
2.3	Assembly overview - coolant valves	111
2.4	Removing and installing electric coolant pump	113
2.5	Removing and installing coolant pump	122
2.6	Removing and installing housing for map-controlled engine cooling system thermostat F265	122
2.7	Removing and installing map-controlled engine cooling system thermostat F265	124

2.8	Removing and installing radiator outlet coolant temperature sender G83	124
2.9	Removing and installing engine temperature sender G407	125
2.10	Removing and installing coolant valves	126
3	Coolant pipes	130
3.1	Assembly overview - coolant pipes	130
3.2	Removing and installing coolant pipes	134
4	Radiator/radiator fans	150
4.1	Assembly overview - radiator/radiator fans	150
4.2	Assembly overview - auxiliary radiator	152
4.3	Assembly overview - radiator cowl and radiator fans	153
4.4	Removing and installing radiator	154
4.5	Removing and installing radiator cowl	158
4.6	Removing and installing radiator fan V7	162
4.7	Removing and installing auxiliary radiator	162
4.8	Removing and installing air guides	165
21	Turbocharging/supercharging	167
1	Turbocharger	167
1.1	Assembly overview - turbochargers	167
1.2	Removing and installing turbochargers	167
1.3	Removing and installing overrun air recirculation valve	169
2	Charge air system	170
2.1	Assembly overview - charge air system	170
2.2	Assembly overview - hose connections for charge air system	171
2.3	Removing and installing air intake pipe	172
2.4	Removing and installing charge air cooler	179
2.5	Removing and installing charge pressure sender G31	182
2.6	Removing and installing charge pressure sender 2 G447	183
2.7	Checking charge air system for leaks	184
24	Mixture preparation - injection	186
1	Injection system	186
1.1	Overview of fitting locations - injection system	186
1.2	Checking fuel system for leaks	199
2	Vacuum system	200
2.1	Assembly overview - vacuum system	200
2.2	Checking vacuum system	202
2.3	Removing and installing switch valve for mechanical coolant pump	202
2.4	Removing and installing charge pressure control solenoid valve	203
2.5	Removing and installing vacuum line	203
3	Air filter	209
3.1	Assembly overview - air filter housing	209
3.2	Removing and installing air filter housing	211
4	Intake manifold	213
4.1	Assembly overview - intake manifold	213
4.2	Removing and installing intake manifold	213
4.3	Removing and installing throttle valve module GX3	216
4.4	Removing and installing throttle valve module 2 GX4	217
4.5	Cleaning throttle valve module GX3	218
5	Injectors	219
5.1	Assembly overview - fuel rail with injectors	219
5.2	Removing and installing fuel rail	219
5.3	Removing and installing injectors	222
5.4	Cleaning injectors	222



6	Senders and sensors	223
6.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound	223
6.2	Assembly overview - pressure differential sender	224
6.3	Removing and installing actuator for structure-borne sound	224
6.4	Removing and installing control unit for structure-borne sound	225
6.5	Removing and installing intake manifold pressure sender	225
6.6	Removing and installing fuel pressure sender G247	226
6.7	Removing and installing fuel pressure sender for low pressure G410	226
6.8	Removing and installing pressure differential sender	226
7	High-pressure pump	228
7.1	Assembly overview - high-pressure pump	228
7.2	Removing and installing high-pressure pump	228
7.3	Removing and installing high-pressure pipe	231
8	Lambda probe	234
8.1	Assembly overview - Lambda probe	234
8.2	Removing and installing Lambda probe	234
9	Engine control unit	237
9.1	Assembly overview - engine control unit	237
9.2	Removing and installing engine control unit J623	237
26 - Exhaust system	239	
1	Exhaust pipes/silencers	239
1.1	Assembly overview - silencers	239
1.2	Removing and installing front silencers	243
1.3	Separating exhaust pipes/silencers	244
1.4	Removing and installing silencer	245
1.5	Stress-free alignment of exhaust system	246
1.6	Checking exhaust system for leaks	247
1.7	Installation position of clamp	247
2	Emission control system	249
2.1	Assembly overview - emission control system	249
2.2	Removing and installing catalytic converter	249
2.3	Removing and installing particulate filter	251
2.4	Removing and installing exhaust flap control unit J883	254
3	Exhaust gas temperature regulation	256
3.1	Assembly overview - exhaust gas temperature regulation	256
3.2	Removing and installing parts of exhaust gas temperature regulation	256
4	Exhaust manifolds	258
28 - Ignition system	259	
1	Ignition system	259
1.1	Assembly overview - ignition system	259
1.2	Removing and installing ignition coil	259
1.3	Removing and installing knock sensor 1 G61	262
1.4	Removing and installing Hall senders	263
1.5	Removing and installing engine speed sender G28	264