

## Contents

<b>00 - Technical data</b> .....	<b>1</b>
<b>1 Identification</b> .....	<b>1</b>
<b>2 Safety information</b> .....	<b>2</b>
<b>3 Repair instructions</b> .....	<b>3</b>
<b>10 - Removing and installing engine</b> .....	<b>4</b>
<b>1 Removing and installing engine</b> .....	<b>4</b>
1.1 Removing engine .....	4
1.2 Separating engine and gearbox .....	43
1.3 Securing engine to engine and gearbox support .....	48
1.4 Installing engine .....	52
<b>2 Assembly mountings</b> .....	<b>57</b>
2.1 Assembly overview - assembly mountings .....	57
2.2 Removing and installing engine mountings .....	60
2.3 Removing and installing gearbox mounting .....	65
2.4 Supporting engine in installation position .....	67
2.5 Removing and installing power unit mounting control unit J931 .....	72
<b>3 Engine cover panel</b> .....	<b>73</b>
3.1 Removing and installing engine cover panel .....	73
<b>13 - Crankshaft group</b> .....	<b>76</b>
<b>1 Cylinder block (pulley end)</b> .....	<b>76</b>
1.1 Assembly overview - cylinder block (pulley end) .....	76
1.2 Assembly overview - sealing flange (pulley end) .....	76
1.3 Removing and installing poly V-belt .....	76
1.4 Removing and installing poly V-belt tensioner .....	76
1.5 Removing and installing vibration damper .....	76
1.6 Removing and installing bracket for ancillaries .....	77
1.7 Removing and installing engine support .....	79
1.8 Renewing crankshaft oil seal (pulley end) .....	80
1.9 Removing and installing sealing flange (pulley end) .....	80
<b>2 Cylinder block (gearbox end)</b> .....	<b>82</b>
<b>3 Crankshaft</b> .....	<b>83</b>
<b>4 Balance shaft</b> .....	<b>84</b>
<b>5 Pistons and conrods</b> .....	<b>85</b>
<b>15 - Cylinder head, valve gear</b> .....	<b>86</b>
<b>1 Timing chain cover</b> .....	<b>86</b>
1.1 Assembly overview - timing chain cover .....	86
1.2 Removing and installing timing chain cover .....	86
<b>2 Chain drive</b> .....	<b>87</b>
<b>3 Cylinder head</b> .....	<b>88</b>
3.1 Assembly overview - cylinder head .....	88
3.2 Assembly overview - cylinder head cover .....	88
3.3 Removing and installing cylinder head .....	88
3.4 Removing and installing cylinder head cover .....	88
3.5 Removing and installing seals for injectors .....	89
3.6 Checking compression .....	89
<b>4 Valve gear</b> .....	<b>90</b>
4.1 Assembly overview - valve gear .....	90
4.2 Measuring axial clearance of camshaft .....	90



4.3	Measuring radial clearance of camshaft	90
4.4	Removing and installing camshaft	90
4.5	Removing and installing valve stem oil seals	90
<b>5</b>	<b>Inlet and exhaust valves</b>	<b>91</b>
<b>17</b>	<b>Lubrication</b>	<b>92</b>
<b>1</b>	<b>Sump/oil pump</b>	<b>92</b>
1.1	Assembly overview - sump/oil pump	92
1.2	Engine oil	92
1.3	Removing and installing lower part of sump	92
1.4	Removing and installing upper part of sump	92
1.5	Removing and installing oil pump	93
1.6	Removing and installing oil level and oil temperature sender G266	93
<b>2</b>	<b>Engine oil cooler</b>	<b>94</b>
<b>3</b>	<b>Crankcase breather</b>	<b>95</b>
<b>4</b>	<b>Oil filter/oil pressure switches</b>	<b>96</b>
4.1	Assembly overview - oil filter	96
4.2	Assembly overview - oil pressure switches/oil pressure control	96
4.3	Removing and installing oil filter housing	96
4.4	Removing and installing oil pressure switch F22	97
4.5	Removing and installing oil temperature sender G8	97
4.6	Removing and installing oil pressure sender G10	97
4.7	Checking oil pressure	98
4.8	Removing and installing valve for oil pressure control N428	98
4.9	Removing and installing oil temperature sender 2 G664	98
<b>19</b>	<b>Cooling</b>	<b>100</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>100</b>
1.1	Connection diagram - coolant hoses	100
1.2	Overview of fitting locations - cooling system	106
1.3	Checking cooling system for leaks	107
1.4	Draining and filling cooling system	107
<b>2</b>	<b>Coolant pump/thermostat assembly</b>	<b>116</b>
2.1	Assembly overview - coolant pump	116
2.2	Assembly overview - electric coolant pump	116
2.3	Assembly overview - thermostat	118
2.4	Exploded view - coolant temperature senders	118
2.5	Removing and installing electric coolant pump	119
2.6	Removing and installing coolant pump	124
2.7	Removing and installing thermostat	124
2.8	Removing and installing coolant temperature sender G62	124
2.9	Removing and installing temperature sender for engine temperature regulation G694	124
2.10	Removing and installing coolant valves	125
<b>3</b>	<b>Coolant pipes</b>	<b>128</b>
3.1	Assembly overview - coolant pipes	128
3.2	Removing and installing coolant pipes	133
<b>4</b>	<b>Radiator/radiator fans</b>	<b>147</b>
4.1	Exploded view - radiator/radiator fans	147
4.2	Exploded view - radiator cowl and radiator fans	150
4.3	Assembly overview - auxiliary radiator	151
4.4	Removing and installing radiator	152
4.5	Removing and installing radiator cowl	158
4.6	Removing and installing radiator fan V7	162
4.7	Removing and installing radiator blind	163
4.8	Removing and installing radiator blind control motor	165

4.9	Removing and installing auxiliary radiator	166
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>169</b>
<b>1</b>	<b>Turbocharger</b>	<b>169</b>
1.1	Exploded view - turbocharger	169
1.2	Removing and installing turbocharger	169
<b>2</b>	<b>Charge air system</b>	<b>170</b>
2.1	Assembly overview - charge air system	170
2.2	Assembly overview - hose connections for charge air system	171
2.3	Removing and installing charge air cooler	171
2.4	Removing and installing charge pressure sender G31	174
2.5	Removing and installing charge air temperature sender after charge air cooler G811	174
2.6	Checking charge air system for leaks	174
<b>23</b>	<b>Mixture preparation - injection</b>	<b>175</b>
<b>1</b>	<b>Injection system</b>	<b>175</b>
1.1	Overview - fuel system	175
1.2	Overview of fitting locations - injection system	177
1.3	Filling and bleeding fuel system	187
1.4	Checking fuel system for leaks	187
<b>2</b>	<b>Vacuum system</b>	<b>188</b>
<b>3</b>	<b>Air filter</b>	<b>189</b>
3.1	Assembly overview - air filter housing	189
3.2	Removing and installing air filter housing	191
<b>4</b>	<b>Intake manifold</b>	<b>195</b>
4.1	Exploded view - intake manifold	195
4.2	Removing and installing upper part of intake manifold	195
4.3	Removing and installing lower part of intake manifold	195
4.4	Removing and installing intake manifold flap motor V157	195
4.5	Removing and installing throttle valve module J338	196
<b>5</b>	<b>Injectors/high-pressure reservoir (rail)</b>	<b>197</b>
5.1	Assembly overview - injectors	197
5.2	Checking injectors	197
5.3	Performing adaption of correction values for injectors	197
5.4	Checking for injectors sticking open	197
5.5	Checking return flow rate of injectors with engine running	197
5.6	Checking return flow rate of injectors at starter cranking speed	197
5.7	Checking pressure retention valve in fuel return line	198
5.8	Removing and installing injectors	198
5.9	Removing and installing high-pressure pipes	198
5.10	Removing and installing high-pressure reservoir (rail)	198
<b>6</b>	<b>Senders and sensors</b>	<b>199</b>
6.1	Removing and installing fuel pressure regulating valve N276	199
6.2	Checking fuel pressure regulating valve N276	199
6.3	Removing and installing fuel pressure sender G247	201
6.4	Removing and installing air mass meter G70	202
6.5	Removing and installing pressure differential sender G505	202
6.6	Removing and installing pressure differential sender 2 G524	204
6.7	Removing and installing fuel temperature sender G81	206
6.8	Removing and installing fuel pressure sender for low pressure G410	206
<b>7</b>	<b>High-pressure pump</b>	<b>207</b>
<b>8</b>	<b>Lambda probe</b>	<b>208</b>
8.1	Assembly overview - Lambda probe	208
8.2	Removing and installing Lambda probe	210



8.3	Removing and installing NOx senders	210
8.4	Removing and installing particulate sensor G784	213
<b>9</b>	<b>Engine control unit</b>	<b>216</b>
9.1	Exploded view - engine control unit	216
9.2	Removing and installing engine/motor control unit J623	216
<b>26</b>	<b>- Exhaust system</b>	<b>218</b>
<b>1</b>	<b>Exhaust pipes/silencers</b>	<b>218</b>
1.1	Exploded view - silencer	218
1.2	Removing and installing front exhaust pipe	222
1.3	Removing and installing silencer	227
1.4	Stress-free alignment of exhaust system	229
1.5	Checking exhaust system for leaks	229
<b>2</b>	<b>Emission control system</b>	<b>230</b>
2.1	Assembly overview - emission control system	230
2.2	Removing and installing emission control module	230
2.3	Removing and installing ammonia trap	232
2.4	Removing and installing exhaust flap control unit J883	232
<b>3</b>	<b>SCR (selective catalytic reduction) system</b>	<b>233</b>
3.1	Assembly overview - reducing agent tank	233
3.2	Assembly overview - control unit for reducing agent metering system	235
3.3	Assembly overview - reducing agent supply line	236
3.4	Releasing pressure in SCR system	236
3.5	Draining reducing agent tank	236
3.6	Removing and installing reducing agent tank	238
3.7	Removing and installing injector for reducing agent N474	241
3.8	Removing and installing control unit for reducing agent metering system J880	241
3.9	Removing and installing reducing agent quality sensor G849	242
<b>4</b>	<b>Exhaust gas temperature regulation</b>	<b>243</b>
4.1	Assembly overview - exhaust gas temperature regulation	243
4.2	Removing and installing exhaust gas temperature sender 1 G235	243
4.3	Removing and installing exhaust gas temperature sender 2 G448	243
4.4	Removing and installing exhaust gas temperature sender 3 G495	243
4.5	Removing and installing exhaust gas temperature sender 4 G648	244
<b>5</b>	<b>Exhaust gas recirculation</b>	<b>245</b>
5.1	Assembly overview - exhaust gas recirculation system	245
5.2	Removing and installing exhaust gas recirculation cooler	247
5.3	Removing and installing exhaust gas recirculation valve 2 GX6	251
5.4	Removing and installing exhaust gas recirculation temperature sensor G98	252
5.5	Removing and installing exhaust gas recirculation pipes	253
<b>6</b>	<b>Exhaust manifold</b>	<b>255</b>
6.1	Exploded view - exhaust manifold	255
6.2	Removing and installing exhaust manifold	255
<b>28</b>	<b>- Glow plug system</b>	<b>259</b>
<b>1</b>	<b>Glow plug system</b>	<b>259</b>
1.1	Assembly overview - glow plug system	259
1.2	Removing and installing glow plug	259
1.3	Removing and installing automatic glow period control unit J179	259
1.4	Removing and installing Hall sender G40	259
1.5	Removing and installing engine speed sender G28	260