

Contents

00 - Technical data	1
1 Identification	1
2 Safety information	2
3 Repair instructions	3
10 - Removing and installing engine	4
1 Removing and installing engine	4
1.1 Removing engine	4
1.2 Separating engine and gearbox	41
1.3 Securing engine to engine and gearbox support	47
1.4 Installing engine	51
2 Assembly mountings	55
2.1 Assembly overview - assembly mountings	55
2.2 Supporting engine in installation position	59
2.3 Removing and installing engine mountings	64
2.4 Removing and installing power unit mounting senders	64
2.5 Removing and installing power unit mounting control unit J931	65
2.6 Calibrating electrohydraulic engine mounting	67
2.7 Removing and installing gearbox mountings	68
3 Engine cover panel	71
3.1 Removing and installing engine cover panel	71
13 - Crankshaft group	73
1 Cylinder block (pulley end)	73
1.1 Assembly overview - cylinder block (pulley end)	73
1.2 Assembly overview - sealing flange (pulley end)	73
1.3 Removing and installing poly V-belts	73
1.4 Removing and installing poly V-belt tensioner	75
1.5 Removing and installing bracket for ancillaries	75
1.6 Removing and installing engine support	75
1.7 Removing and installing pulley	76
1.8 Renewing crankshaft oil seal (pulley end)	76
1.9 Removing and installing sealing flange (pulley end)	77
2 Cylinder block (gearbox end)	78
3 Crankshaft	79
4 Transmission shaft	80
5 Pistons and conrods	81
15 - Cylinder head, valve gear	82
1 Timing chain cover	82
2 Chain drive	83
2.1 Assembly overview - camshaft timing chains	83
2.2 Assembly overview - drive chain for high-pressure pump	83
2.3 Assembly overview - drive chain for oil pump	83
2.4 Removing camshaft timing chain from camshafts	83
2.5 Removing and installing camshaft timing chain	83
2.6 Removing and installing drive chain for high-pressure pump	84
2.7 Installing intermediate drive	84
3 Cylinder head	85
3.1 Assembly overview - cylinder head	85
3.2 Assembly overview - cylinder head cover	85



3.3	Removing and installing cylinder head	85
3.4	Removing and installing cylinder head cover	88
3.5	Removing and installing seals for injectors	90
3.6	Checking compression	90
4	Valve gear	91
4.1	Assembly overview - valve gear	91
4.2	Measuring axial clearance of camshaft	91
4.3	Measuring radial clearance of camshaft	91
4.4	Removing and installing camshaft	91
4.5	Removing and installing cam actuators	91
4.6	Removing and installing valve stem oil seals	95
5	Inlet and exhaust valves	96
17	Lubrication	97
1	Sump/oil pump	97
1.1	Assembly overview - sump/oil pump	97
1.2	Engine oil	97
1.3	Removing and installing lower part of sump	98
1.4	Removing and installing upper part of sump	98
1.5	Removing and installing oil pump	98
1.6	Removing and installing oil level and oil temperature sender G266	98
2	Engine oil cooler	99
2.1	Assembly overview - engine oil cooler	99
2.2	Removing and installing engine oil cooler	99
3	Crankcase breather	100
3.1	Assembly overview - crankcase breather system	100
3.2	Removing and installing crankcase breather module	100
4	Oil filter/oil pressure switches	101
4.1	Assembly overview - oil filter	101
4.2	Removing and installing oil temperature sender G8	101
4.3	Removing and installing oil pressure sender G10	102
4.4	Checking oil pressure	103
4.5	Removing and installing oil filter housing	103
4.6	Removing and installing valve for oil pressure control N428	103
19	Cooling	104
1	Cooling system/coolant	104
1.1	Connection diagram - coolant hoses	104
1.2	Checking cooling system for leaks	108
1.3	Draining and filling cooling system	108
2	Coolant pump/thermostat assembly	113
2.1	Assembly overview - coolant pump	113
2.2	Assembly overview - electric coolant pump	113
2.3	Assembly overview - thermostat	115
2.4	Assembly overview - coolant valves	115
2.5	Assembly overview - coolant temperature senders	116
2.6	Removing and installing electric coolant pump	116
2.7	Removing and installing coolant pump	121
2.8	Removing and installing housing for map-controlled engine cooling system thermostat F265	121
2.9	Removing and installing coolant temperature senders G62 / G83	122
2.10	Removing and installing coolant temperature sender 3 G812	122
2.11	Removing and installing coolant valves	122
3	Coolant pipes	125
3.1	Assembly overview - coolant pipes	125

3.2	Removing and installing coolant pipes	130
3.3	Removing and installing coolant pipes for gearbox	144
4	Radiator/radiator fans	147
4.1	Assembly overview - radiator/radiator fans	147
4.2	Removing and installing radiator	150
4.3	Removing and installing radiator fan V7 / radiator fan 2 V177	153
21	- Turbocharging/supercharging	155
1	Turbocharger	155
1.1	Assembly overview - turbocharger	155
1.2	Assembly overview - electric compressor with control unit for electric compressor J1123 ..	155
1.3	Assembly overview - charge air recirculation module GX37	155
1.4	Removing and installing turbocharger	155
1.5	Removing and installing electric compressor with control unit for electric compressor J1123 ..	156
1.6	Removing and installing charge air recirculation module GX37	157
1.7	Removing and installing sender 1 for turbocharger speed G688	157
1.8	Removing and installing sender 2 for turbocharger speed G689	158
1.9	Removing and installing temperature sender for engine cover panel G765	158
2	Charge air system	159
2.1	Assembly overview - charge air system	159
2.2	Assembly overview - hose connections for charge air system	164
2.3	Removing and installing charge air cooler	164
2.4	Checking charge air system for leaks	166
23	- Mixture preparation - injection	169
1	Injection system	169
1.1	Overview - fuel system	169
1.2	Overview of fitting locations - injection system	169
1.3	Filling and bleeding fuel system	182
1.4	Checking fuel system for leaks	183
2	Vacuum system	184
2.1	Connection diagram - vacuum system	184
2.2	Checking vacuum system	186
3	Air filter	187
3.1	Assembly overview - air filter housing	187
3.2	Removing and installing air filter housing	189
4	Intake manifold	192
4.1	Assembly overview - intake manifold	192
4.2	Removing and installing intake manifold	192
4.3	Removing and installing intake manifold flap control unit GX14 / intake manifold flap control ..	192
4.4	Removing and installing throttle valve module GX3 / throttle valve module 2 GX4	192
5	Injectors/high-pressure reservoir (rail)	194
5.1	Assembly overview - injectors	194
5.2	Checking injectors	194
5.3	Performing adaptation of correction values for injectors	194
5.4	Checking for injectors sticking open	194
5.5	Checking return flow rate of injectors with engine running	195
5.6	Checking return flow rate of injectors at starter cranking speed	196
5.7	Checking pressure retention valve in fuel return line	196
5.8	Removing and installing injectors	196
5.9	Removing and installing high-pressure pipes	198
5.10	Removing and installing high-pressure reservoir (rail)	199
6	Senders and sensors	200



6.1	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound	200
6.2	Removing and installing actuator for structure-borne sound	201
6.3	Removing and installing control unit for structure-borne sound	202
6.4	Removing and installing intake air temperature sender G42 / intake air temperature sender 2 G299	202
6.5	Removing and installing air mass meter G70 / air mass meter 2 G246	203
6.6	Removing and installing intake manifold pressure sender G71	203
6.7	Removing and installing fuel temperature sender G81	203
6.8	Removing and installing fuel pressure sender G247	204
6.9	Removing and installing fuel pressure sender for low pressure G410	204
6.10	Removing and installing pressure differential sender G505	205
6.11	Checking fuel pressure regulating valve N276	205
6.12	Removing and installing fuel pressure regulating valve N276	207
7	High-pressure pump	208
7.1	Assembly overview - high-pressure pump	208
7.2	Removing and installing high-pressure pump	208
8	Lambda probe	209
8.1	Assembly overview - Lambda probe	209
8.2	Removing and installing Lambda probe	211
8.3	Removing and installing NOx senders	212
8.4	Removing and installing particulate sensor G784	215
9	Engine control unit	217
9.1	Assembly overview - engine control unit	217
9.2	Removing and installing engine control unit J623	217
26	Exhaust system	219
1	Exhaust pipes/silencers	219
1.1	Assembly overview - silencers	219
1.2	Removing and installing front exhaust pipe	225
1.3	Removing and installing silencer	226
1.4	Stress-free alignment of exhaust system	229
1.5	Checking exhaust system for leaks	230
2	Emission control system	231
2.1	Assembly overview - emission control system	231
2.2	Removing and installing emission control module	232
3	SCR (selective catalytic reduction) system	238
3.1	Assembly overview - reducing agent tank	238
3.2	Assembly overview - reducing agent supply line	242
3.3	Assembly overview - injector for reducing agent	243
3.4	Assembly overview - control unit for reducing agent metering system	243
3.5	Draining reducing agent tank	243
3.6	Removing and installing reducing agent tank	245
3.7	Removing and installing injector for reducing agent N474	247
3.8	Removing and installing control unit for reducing agent metering system J880	248
3.9	Removing and installing reducing agent quality sensor G849	248
4	Exhaust gas temperature regulation	249
4.1	Assembly overview - exhaust gas temperature regulation	249
4.2	Removing and installing parts of exhaust gas temperature regulation	252
5	Exhaust gas recirculation	254
5.1	Assembly overview - exhaust gas recirculation system	254
5.2	Removing and installing exhaust gas recirculation cooler	254
5.3	Removing and installing exhaust gas recirculation temperature sensor G98	254
5.4	Removing and installing pressure sender for exhaust gas recirculation G691	254
6	Exhaust manifold	256

6.1	Assembly overview - exhaust manifold	256
6.2	Removing and installing exhaust manifolds	256
28	- Glow plug system	257
1	Glow plug system	257
1.1	Assembly overview - glow plug system	257
1.2	Removing and installing glow plug	259
1.3	Removing and installing automatic glow period control unit J179 / glow period control unit 2 J703	263
1.4	Removing and installing Hall sender G40	263
1.5	Removing and installing engine speed sender G28	263