

Contents

| | | |
|-----------|--|-----------|
| 00 | Technical data | 1 |
| 1 | Safety information | 1 |
| 1.1 | Safety precautions when working on the high-voltage system | 1 |
| 1.2 | Safety precautions when working in the vicinity of high-voltage components | 2 |
| 1.3 | Safety precautions when working on the fuel system | 2 |
| 1.4 | Safety precautions when working on vehicles with start/stop system | 3 |
| 1.5 | Safety precautions when using testers and measuring instruments during a road test | 3 |
| 1.6 | Safety precautions when working on the SCR system | 3 |
| 2 | Repair instructions | 5 |
| 2.1 | Rules for cleanliness | 5 |
| 2.2 | Test conditions | 5 |
| 2.3 | Contact corrosion | 6 |
| 2.4 | Routing and attachment of pipes, hoses and wiring | 6 |
| 2.5 | Identification plates | 6 |
| 2.6 | Use of impact wrenches | 6 |
| 2.7 | Nuts, bolts | 7 |
| 2.8 | Checking fuel system for leaks | 8 |
| 20 | Fuel supply system | 9 |
| 1 | Safety information | 9 |
| 2 | Fuel tank | 10 |
| 2.1 | Assembly overview - fuel tank | 10 |
| 2.2 | Draining fuel tank | 15 |
| 2.3 | Removing and installing fuel tank | 19 |
| 2.4 | Removing and installing misfuelling prevention device | 25 |
| 2.5 | Deactivating misfuelling prevention device | 29 |
| 3 | Fuel delivery unit/fuel gauge senders | 30 |
| 3.1 | Assembly overview - fuel delivery unit/fuel gauge senders | 30 |
| 3.2 | Removing and installing fuel delivery unit | 32 |
| 3.3 | Removing and installing fuel gauge sender G | 38 |
| 4 | Plug-in connectors | 40 |
| 4.1 | Disconnecting plug-in connectors | 40 |
| 5 | Fuel filter | 44 |
| 5.1 | Assembly overview - fuel filter | 44 |
| 5.2 | Removing and installing fuel filter | 45 |
| 5.3 | Removing and installing water level sender G120 | 47 |
| 6 | Accelerator mechanism | 48 |
| 6.1 | Assembly overview - accelerator pedal module | 48 |
| 6.2 | Removing and installing accelerator pedal module GX2 | 50 |
| 7 | Fuel pump | 54 |
| 7.1 | Checking fuel system pressurisation pump G6 | 54 |
| 7.2 | Removing and installing suction-jet pump | 60 |
| 7.3 | Removing and installing fuel pump control unit J538 | 61 |