

001 - Basic equipment , (L0L)	1-26
1. Basic equipment , (L0L)	1
2. Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit, Fuse holder C	2
3. Windscreen wiper switch, Turn signal switch, Horn plate, Onboard supply control unit, Steering column electronics control unit	3
4. Onboard supply control unit, Fuse carrier 5	4
5. Onboard supply control unit	5
6. Light switch, Onboard supply control unit	6
7. Hazard warning lights button, Operating unit 1 for driver and convenience functions, Onboard supply control unit	7
8. Treble horn, Bass horn, Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Headlight washer system pump	8
9. Rain and light sensor, Onboard supply control unit, Washer pump, Rear window wiper motor	9
10. Glove compartment light switch, Onboard supply control unit, Glove compartment light, Left washer jet heater element, Right washer jet heater element, Centre washer jet heater element	10
11. Bonnet contact switch, Bonnet contact switch 2, Onboard supply control unit	11
12. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit	12
13. Convenience system central control unit	13
14. Convenience system central control unit	14
15. Rear lid handle release button, Rear lid contact switch for anti-theft alarm, Contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system, Convenience system central control unit, Rear lid central locking motor, Left number plate light, Right number plate light	15
16. Convenience system central control unit, High-level brake light bulb, Left luggage compartment light, Right luggage compartment light, Rear lid light, Rear lid light 2	16
17. Window aerial suppression filter, Heated rear window relay, Convenience system central control unit, Tank filler flap locking motor, Heated rear window	17
18. Brake light switch, Convenience system central control unit, Cigarette lighter, 12 V socket	18
19. 12 V socket 2, 12 V socket 3, 12 V socket 4	19
20. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	20
21. Driver side reading light button, Front passenger side reading light button, Rear interior light, Front roof module, Front passenger reading light, Driver side reading light, Rear left interior light, Rear right interior light	21
22. Rear interior light, Front roof module	22
23. Right reading light button for seat row 3, Front roof module, Rear interior light 2, Left reading light for seat row 3, Right reading light for seat row 3	23
24. Dash panel insert operating button, Control unit in dash panel insert, Display in dash panel insert	24
25. Control unit in dash panel insert	25
26. Data bus diagnostic interface, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 6 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness, Connection 6 (convenience CAN bus, low), in main wiring harness	26
002 - 3.0l diesel engine , CRTC,CRTE,CUEA,CVMD,CZZA,CZZB	27-56
1. 3.0l diesel engine , CRTC,CRTE,CUEA,CVMD,CZZA,CZZB	27
2. Battery, Battery monitor control unit, Battery isolation igniter	28
3. Starter, Alternator with voltage regulator, Suppression capacitor, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	29
4. Terminal 15 voltage supply relay, Starter relay 1, Starter relay 2	30
5. Fuse carrier 1	31
6. Main relay, Fuse carrier 1	32
7. Automatic glow period control unit	33
8. Air mass meter, Water level sender, Biodiesel concentration sender, Engine/motor control unit	34
9. Intake air temperature sender, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Injector for reducing agent, Coolant circulation pump	35
10. Engine/motor control unit	36
11. Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit, Air conditioner compressor, Radiator blind control motor	37
12. Accelerator pedal module, Engine/motor control unit	38
13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	39
14. Throttle valve module. Intake manifold flap control unit. Charge pressure sender. Engine/motor	40

control unit	
15. Fuel pressure sender, Fuel pressure sender for low pressure, Engine/motor control unit, Turbocharger 1 control unit	41
16. Map-controlled engine cooling system thermostat, Exhaust gas recirculation valve 1, Fuel temperature sender, Coolant temperature sender 2, Engine/motor control unit, Fuel metering valve	42
17. Coolant temperature sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit	43
18. Oil pressure sender, Catalytic converter temperature sensor 1, Oil temperature sender 2, Temperature sender for engine temperature regulation, Exhaust gas temperature sender 5, Engine/motor control unit	44
19. Engine speed sender, Hall sender, Pressure differential sender, Engine/motor control unit, Valve for oil pressure control	45
20. Engine/motor control unit, Air filter bypass flap valve, Fuel pressure regulating valve	46
21. Brake pedal switch, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Exhaust gas recirculation cooling bypass valve 2, Coolant valve for cylinder head	47
22. Control unit 2 for NOx sender, Engine/motor control unit	48
23. Control unit for NOx sender, Engine/motor control unit	49
24. Particulate sensor, Engine/motor control unit	50
25. Engine/motor control unit, Radiator fan, Radiator fan 2	51
26. Lambda probe 1 before catalytic converter, Lambda probe, Oil level and oil temperature sender, Engine/motor control unit	52
27. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit, Engine/motor control unit	53
28. Convenience system central control unit, Control unit for reducing agent metering system	54
29. Delivery unit for reducing agent metering system, Tank sender for reducing agent, Temperature sender for reducing agent, Pressure sender for reducing agent metering system, Control unit for reducing agent metering system, Pump for reducing agent, Heater for reducing agent line (heater circuit 2)	55
30. Delivery unit for reducing agent metering system, Reducing agent level sender, Reducing agent quality sensor, Control unit for reducing agent metering system, Heater for reducing agent tank (heater circuit 1)	56
003 - 3.0l petrol engine , CREC	57-86
1. 3.0l petrol engine , CREC	57
2. Battery, Battery monitor control unit, Battery isolation igniter	58
3. Starter, Alternator with voltage regulator, Suppression capacitor, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	59
4. Terminal 15 voltage supply relay, Starter relay 1, Starter relay 2	60
5. Fuse carrier 1	61
6. Fuse carrier 1	62
7. Main relay, Engine component current supply relay	63
8. Engine/motor control unit	64
9. Accelerator position sender, Engine/motor control unit	65
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug connector	66
11. Engine/motor control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Spark plug connector	67
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3	68
13. Intake manifold flap potentiometer, Fuel pressure sender for low pressure, Intake manifold flap potentiometer 2, Temperature sender for engine temperature regulation, Engine/motor control unit	69
14. Engine/motor control unit, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6, Injector 2, cylinder 4, Injector 2, cylinder 5, Injector 2, cylinder 6	70
15. Oil pressure switch for reduced oil pressure, Fuel pressure sender, Engine/motor control unit, Valve for oil pressure control	71
16. Coolant temperature sender, Engine/motor control unit, Magnetic clutch for supercharger	72
17. Hall sender, Hall sender 2, Hall sender 3, Hall sender 4, Engine/motor control unit	73
18. Engine speed sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Intake manifold temperature sender, Sender 1 for turbocharger speed, Engine/motor control unit	74
19. Knock sensor 1, Knock sensor 2, Charge pressure sender 2, Engine/motor control unit, Regulating flap control unit	75
20. Oil pressure switch, Throttle valve module, Engine/motor control unit, Air filter bypass flap valve	76
21. Engine/motor control unit. Camshaft control valve 1. Camshaft control valve 2. Fuel metering	77

valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Exhaust camshaft control valve 2	
22. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Coolant valve for cylinder head, Solenoid for coolant circuit, Coolant circulation pump	78
23. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Crankcase breather shut-off valve, Charge air cooling pump	79
24. Brake pedal switch, Secondary air pump relay, Engine/motor control unit, Secondary air pump motor, Radiator blind control motor	80
25. Lambda probe 2 before catalytic converter, Lambda probe, Engine/motor control unit	81
26. Lambda probe after catalytic converter, Lambda probe 2 after catalytic converter, Engine/motor control unit	82
27. Engine/motor control unit, Radiator fan, Radiator fan 2	83
28. Oil level and oil temperature sender, Tank pressure sensor, Engine/motor control unit, Control unit for fuel tank leak detection, Metering pump	84
29. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit, Engine/motor control unit	85
30. Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Air conditioner compressor	86
004 - 8-speed automatic gearbox 0D5/0D6 , (FM0)	87-92
1. 8-speed automatic gearbox 0D5/0D6 , (FM0)	87
2. Gearbox input speed sender, Parking lock sender, Automatic gearbox control unit, Gearbox oil cooling valve	88
3. Gearbox oil temperature sender, Temperature sender in control unit, Automatic gearbox control unit, Solenoid valve 1, Automatic gearbox pressure regulating valve 1	89
4. Selector lever, Selector lever sensors control unit	90
5. Selector lever, Selector lever position sender, Selected range display	91
6. Selector lever, Button for selector lever release, Parking lock button, Parking lock indicator lamp	92
005 - Fuse assignment , (0K0)	93-122
1. Fuse assignment , (0K0)	93
2. Battery, Battery monitor control unit, Battery isolation igniter	94
3. Suppression capacitor, Terminal 30 wiring junction	95
4. Starter, Alternator with voltage regulator, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2	96
5. Terminal 15 voltage supply relay, Starter relay 1, Starter relay 2	97
6. Main relay, Engine component power supply relay, Coupling point on left A-pillar, bottom	98
7. Fuse holder C	99
8. Fuse holder C	100
9. Fuse holder B, Fuse carrier 1	101
10. Fuse holder B	102
11. Fuse holder B	103
12. Fuse holder B	104
13. Fuse holder B	105
14. Coupling point in engine compartment, left	106
15. Coupling point in engine compartment, left	107
16. Fuse holder B, Fuse carrier 2	108
17. Fuse holder B, Fuse carrier 3	109
18. Fuse holder B	110
19. Fuse holder B, Fuse carrier 4	111
20. Fuse holder B	112
21. Fuse holder B	113
22. Fuse holder B	114
23. Fuse holder B, Fuse carrier 5	115
24. Fuse holder B	116
25. Fuse holder F, Fuse carrier 1	117
26. Fuse holder F, Fuse carrier 1, Fuse carrier 2, Fuse 1 (30)	118
27. Fuse holder F, Fuse carrier 2	119
28. Fuse holder F, Fuse carrier 3	120
29. Fuse holder F, Fuse carrier 3	121
30. Heated rear window fuse, Driver seat adjustment thermal fuse 1, Trailer towing attachment thermal fuse, Levelling system fuse, ABS control unit fuse 1, Coupling point for electromechanical brake servo	122
006 - Convenience system, left-hand drive , (L0L)	123-169
1. Convenience system, left-hand drive , (L0L)	123
2. Coupling point for front left door	124

3. Contact sensor for front left exterior door handle, Driver door control unit, Front left exterior door handle illumination bulb, Driver door lock unit, Light for sill panel moulding background lighting, driver side	125
4. Driver door power latching system contact switch, Driver door control unit, Driver door lock unit	126
5. Driver door control unit, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Driver side window regulator motor, Driver door power latching motor, Light for driver door background lighting	127
6. Rear lid remote release button, Fuel tank flap release button, Driver door control unit, Driver side door warning lamp, Driver side entry light	128
7. Driver side interior locking button for central locking system, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit, Central locking SAFELOCK function warning lamp, Exit warning lamp, driver side	129
8. Mirror adjustment switch, Mirror adjustment changeover switch, Driver operating unit for memory settings, Driver door control unit	130
9. Operating unit for window regulator in driver door, Driver door control unit	131
10. Operating unit for window regulator in driver door, Driver door control unit, Driver side exterior mirror	132
11. Driver door control unit, Driver side exterior mirror	133
12. Control unit for front left door storage compartment illumination, Light 1 for front left door background lighting, Light for front left door contour lighting, Light for left door storage compartment illumination, Coupling point in front left door	134
13. Light for sill panel moulding background lighting, front passenger side	135
14. Front passenger door control unit, Front passenger door lock unit, Front passenger door power latching motor	136
15. Front passenger door power latching system contact switch, Front passenger door control unit, Front passenger door lock unit	137
16. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Light for passenger door background lighting, Exit warning lamp, front passenger side	138
17. Front passenger operating unit for memory settings, Front passenger door control unit, Front passenger side door warning lamp, Passenger side entry light	139
18. Front passenger side interior locking button for central locking system, Front passenger side window regulator button, Front passenger door control unit, Front passenger side window regulator motor	140
19. Front passenger door control unit, Passenger side exterior mirror	141
20. Front passenger door control unit, Passenger side exterior mirror	142
21. Control unit for front right door storage compartment illumination, Light 1 for front right door background lighting, Light for front right door contour lighting, Light for right door storage compartment illumination, Coupling point in front right door	143
22. Coupling point for rear left door, Light for rear sill panel moulding background lighting, driver side	144
23. Contact sensor for rear left exterior door handle, Rear driver side door control unit, Light for rear exterior door handle illumination, driver side	145
24. Rear door contact switch, driver side, Rear childproof lock contact switch, driver side, Rear driver side door control unit, Rear door lock unit, driver side, Rear central locking SAFELOCK function motor, driver side, Rear central locking motor, driver side	146
25. Rear left door power latching system contact switch, Rear driver side door control unit, Rear door lock unit, driver side, Rear driver side window regulator motor, Rear childproof lock motor, driver side, Rear door power latching motor, driver side	147
26. Rear driver side door control unit, Light for rear driver side interior door handle illumination, Light for rear door background lighting, driver side, Rear door warning lamp, driver side, Light 2 for rear door background lighting, driver side, Rear exit warning lamp, driver side	148
27. Rear driver side window regulator button, Rear driver side interior locking button for central locking system, Rear driver side door control unit	149
28. Control unit for rear left door storage compartment illumination, Light 1 for rear left door background lighting, Light for rear left door contour lighting, Light for rear left door storage compartment illumination	150
29. Light for rear sill panel moulding background lighting, passenger side	151
30. Contact sensor for rear right exterior door handle, Rear passenger side door control unit, Light for rear exterior door handle illumination, passenger side	152
31. Rear door contact switch, passenger side, Rear childproof lock contact switch, passenger side, Rear passenger side door control unit, Rear door lock unit, passenger side, Rear central locking SAFELOCK function motor, passenger side, Rear central locking motor, passenger side	153
32. Rear right door power latching system contact switch, Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Rear door lock unit, passenger side, Rear childproof lock motor. passenger side. Light for rear door background lighting. passenger side.	154

Light 2 for rear door background lighting, passenger side, Rear exit warning lamp, passenger side	
33. Rear passenger side window regulator button, Rear passenger side door control unit, Rear passenger side entry light, Rear door warning lamp, passenger side	155
34. Rear passenger side interior locking button for central locking system, Rear passenger side door control unit, Light 1 for rear right door background lighting, Light for rear right door contour lighting	156
35. Onboard supply control unit, Control unit for rear right door storage compartment illumination, Light for rear right door storage compartment illumination	157
36. Onboard supply control unit	158
37. Onboard supply control unit	159
38. Onboard supply control unit, Light 1 for dash panel contour lighting, Light 2 for dash panel contour lighting	160
39. Onboard supply control unit, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting, Light 1 for contour lighting of multimedia system operating unit, Light 2 for contour lighting of multimedia system operating unit	161
40. Convenience system central control unit, Onboard supply control unit, Front left footwell light, Front right footwell light	162
41. Interior monitoring sensor, Vehicle inclination sender, Anti-theft alarm sensor, Alarm horn, Convenience system central control unit	163
42. Rear lid closed sender 1, Rear lid closed sender 2, Convenience system central control unit, Left number plate light, Right number plate light	164
43. Rear lid handle release button, Convenience system central control unit, Rear lid lock unit	165
44. Rear lid power opening sender, Rear lid power opening sender 2, Convenience system central control unit, Rear lid power opening control unit	166
45. Rear lid control unit, Rear lid drive unit 2, Motor 1 for luggage compartment cover	167
46. Rear lid warning buzzer, Rear lid control unit, Rear lid drive unit, Power latching motor for rear lid, Motor 1 for rear lid	168
47. Button to close rear lid in luggage compartment, Locking button in rear lid, Rear lid control unit	169
007 - Airbag systems , (4UE),(4UF),(LOL)	170-182
1. Airbag systems , (4UE),(4UF),(LOL)	170
2. Airbag control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag	171
3. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Data bus diagnostic interface, Airbag igniter 1 on front passenger side, Igniter for exhaust valve for front passenger airbag	172
4. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Side airbag igniter on driver side	173
5. Left backrest contact switch, Belt switch for seat row 2, driver side, Belt switch for seat row 2, centre, Airbag control unit, Rear side airbag igniter on driver side	174
6. Right backrest contact switch, Belt switch for seat row 2, passenger side, Airbag control unit, Rear side airbag igniter on passenger side	175
7. Front passenger side belt switch, Belt switch for seat row 3, driver side, Belt switch for seat row 3, passenger side, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit, Side airbag igniter on front passenger side	176
8. Rear side airbag crash sensor on driver side, Centre crash sensor for X/Y axis, Airbag control unit, Igniter for driver side seat belt tensioner, seat row 3	177
9. Hybrid battery unit, Airbag control unit, Rear belt tensioner igniter on driver side, Driver side curtain airbag igniter	178
10. Driver side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Driver seat belt tensioner igniter 1	179
11. Front passenger side belt force limiter, Driver side crash sensor 2 for pedestrian protection, Front passenger side crash sensor 2 for pedestrian protection, Airbag control unit, Front passenger seat belt tensioner igniter 1	180
12. Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit	181
13. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	182
008 - Air conditioning system , (9AD)	183-192
1. Air conditioning system , (9AD)	183
2. Operating and display unit for front air conditioning system, Fresh air blower control unit, Fresh air blower	184
3. Operating and display unit for front air conditioning system, High-pressure sender, Air quality sensor, Humidity sender in fresh air intake duct	185
4. Operating and display unit for front air conditioning system, Sunlight penetration photosensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor	186
5. Operating and display unit for front air conditioning system. Left footwell vent temperature	187

sender, Right footwell vent temperature sender, Evaporator output temperature sender, Rear chest vent temperature sensor	
6. Operating and display unit for front air conditioning system, Air recirculation flap control motor, Rear air distribution flap control motor, Fresh air flap control motor	188
7. Operating and display unit for front air conditioning system, Defroster flap control motor, Right temperature flap control motor, Right side vent control motor	189
8. Operating and display unit for front air conditioning system, Rear temperature flap control motor, Left temperature flap control motor, Left side vent control motor	190
9. Operating and display unit for front air conditioning system, Onboard supply control unit, Auxiliary air heater control unit, Air conditioning system magnetic clutch, Coolant shut-off valve, Air conditioner compressor regulating valve, Fuse 1 on wiring junction, Auxiliary air heater element	191
10. Onboard supply control unit, Data bus diagnostic interface, Central rear vent illumination bulb, Rear left vent illumination bulb, Rear right vent illumination bulb	192
009 - Air conditioning system , (KH5)	193-207
1. Air conditioning system , (KH5)	193
2. Operating and display unit for front air conditioning system, Fresh air blower control unit, Fresh air blower	194
3. Operating and display unit for front air conditioning system, High-pressure sender, Air quality sensor, Humidity sender in fresh air intake duct	195
4. Operating and display unit for front air conditioning system, Sunlight penetration photosensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor	196
5. Operating and display unit for front air conditioning system, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Air recirculation flap control motor, Fresh air flap control motor	197
6. Operating and display unit for front air conditioning system, Right temperature flap control motor, Right side vent control motor, Rear air distribution flap control motor	198
7. Operating and display unit for front air conditioning system, Defroster flap control motor, Left temperature flap control motor, Left side vent control motor	199
8. Operating and display unit for front air conditioning system, Auxiliary air heater control unit, Fuse 1 on wiring junction, Rear temperature flap control motor, Auxiliary air heater element	200
9. Operating and display unit for rear air conditioning system	201
10. Operating and display unit for rear air conditioning system, Rear chest vent temperature sensor, Left B-pillar and footwell shut-off flap control motor, Rear left chest vent control motor	202
11. Operating and display unit for rear air conditioning system, Rear fresh air blower control unit, Rear fresh air blower, Right B-pillar and footwell shut-off flap control motor, Rear right chest vent control motor	203
12. Operating and display unit for rear air conditioning system, Heated bench seat cushion for rear left seat, Heated backrest for rear left seat, Heated bench seat cushion for rear right seat, Heated backrest for rear right seat	204
13. Onboard supply control unit, Dash panel left vent illumination bulb, Dash panel central vent illumination, Central rear vent illumination bulb	205
14. Onboard supply control unit, Rear left vent illumination bulb, Rear right vent illumination bulb, Air conditioning system magnetic clutch, Air conditioner compressor regulating valve	206
15. Onboard supply control unit, Data bus diagnostic interface, Coolant shut-off valve	207
010 - Air conditioning system , (9AH)	208-232
1. Air conditioning system , (9AH)	208
2. Operating and display unit for front air conditioning system, Fresh air blower control unit, Fresh air blower	209
3. Operating and display unit for front air conditioning system, High-pressure sender, Air quality sensor, Humidity sender in fresh air intake duct	210
4. Operating and display unit for front air conditioning system, Sunlight penetration photosensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor	211
5. Operating and display unit for front air conditioning system, Driver side ioniser button, Driver side ioniser, Dash panel vent control motor	212
6. Operating and display unit for front air conditioning system, Potentiometer in rear left chest vent, Potentiometer in rear right chest vent	213
7. Operating and display unit for front air conditioning system, Dash panel vent button, Potentiometer in left centre dash panel vent	214
8. Operating and display unit for front air conditioning system, Potentiometer in left side vent, Potentiometer in right side vent	215
9. Operating and display unit for front air conditioning system, Potentiometer in right centre dash panel vent, Dash panel left vent illumination bulb, Dash panel central vent illumination bulb	216
10. Operating and display unit for front air conditioning system, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Dash panel right vent illumination bulb, Central rear vent illumination bulb	217
11. Operating and display unit for front air conditioning system, Air recirculation flap control	218

motor, Right temperature flap control motor, Fresh air flap control motor	
12. Operating and display unit for front air conditioning system, Right footwell flap control motor, Right side vent control motor, Rear air distribution flap control motor	219
13. Operating and display unit for front air conditioning system, Defroster flap control motor, Right centre vent control motor, Control motor for right footwell temperature flap	220
14. Operating and display unit for front air conditioning system, Left centre vent control motor, Left temperature flap control motor, Left side vent control motor	221
15. Operating and display unit for front air conditioning system, Left footwell flap control motor, Rear temperature flap control motor, Control motor for left footwell temperature flap	222
16. Operating and display unit for front air conditioning system, Operating and display unit for rear air conditioning system, Auxiliary air heater control unit, Fuse 1 on wiring junction, Auxiliary air heater element	223
17. Operating and display unit for rear air conditioning system, Rear left chest vent temperature sender, Vent temperature sender for rear left footwell, Rear fresh air blower control unit, Rear fresh air blower	224
18. Operating and display unit for rear air conditioning system, Rear right chest vent temperature sender, Vent temperature sender for rear right footwell, Rear right temperature flap control motor, Rear right chest vent control motor	225
19. Operating and display unit for rear air conditioning system, Right B-pillar and footwell shut-off flap control motor, Left B-pillar and footwell shut-off flap control motor, Rear left chest vent control motor	226
20. Operating and display unit for rear air conditioning system, Rear left temperature flap control motor, Rear air recirculation flap control motor	227
21. Operating and display unit for rear air conditioning system, Rear left seat temperature sensor, Heated backrest for rear left seat	228
22. Operating and display unit for rear air conditioning system, Rear right seat temperature sensor, Heated backrest for rear right seat	229
23. Operating and display unit for rear air conditioning system, Rear passenger side ioniser button, Onboard supply control unit, Rear passenger side ioniser, Rear left vent illumination bulb, Rear right vent illumination bulb, Fuse carrier 4	230
24. Onboard supply control unit, Coolant shut-off valve, Air conditioner compressor	231
25. Data bus diagnostic interface	232
011 - Data bus diagnostic interface and diagnostic connector	233-253
1. Data bus diagnostic interface and diagnostic connector	233
2. Data bus diagnostic interface	234
3. Data bus diagnostic interface, Diagnostic connection, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness	235
4. Data bus diagnostic interface, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 6 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness, Connection 6 (convenience CAN bus, low), in main wiring harness	236
5. Data bus diagnostic interface, Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness	237
6. Accelerator pedal module, Data bus diagnostic interface, Connection 2 (convenience CAN bus, high), in main wiring harness, Connection 2 (convenience CAN bus, low), in main wiring harness	238
7. Data bus diagnostic interface, Connection 2 (hybrid CAN bus, high) in main wiring harness, Connection 2 (hybrid CAN bus, low) in main wiring harness, Connection 2 (CAN bus, control unit 1 for information electronics, high), Connection 2 (CAN bus, control unit 1 for information electronics, low)	239
8. Data bus diagnostic interface, Connection 2 (hybrid CAN bus, high) in main wiring harness, Connection 2 (hybrid CAN bus, low) in main wiring harness	240
9. Data bus diagnostic interface, Connection (infotainment CAN bus, high), in dash panel wiring harness, Connection (infotainment CAN bus, low), in dash panel wiring harness	241
10. Data bus diagnostic interface, Connection 3 (CAN bus extended high), in main wiring harness, Connection 3 (CAN bus extended low), in main wiring harness, Connection 1 (CAN bus, onboard supply control unit, high), Connection 1 (CAN bus, onboard supply control unit, low)	242
11. Data bus diagnostic interface, Engine sound generator control unit, Connection 3 (CAN bus extended high), in main wiring harness, Connection 3 (CAN bus extended low), in main wiring harness	243
12. Data bus diagnostic interface, Connection 3 (CAN bus extended high), in main wiring harness, Connection 3 (CAN bus extended low), in main wiring harness	244
13. Data bus diagnostic interface, Connection 1 (CAN bus, control unit 1 for information electronics, high), Connection 1 (CAN bus, control unit 1 for information electronics, low)	245
14. Protective diode, Data bus diagnostic interface, Terminal 30 wiring junction 3, Connection 1 (CAN bus, engine/motor control unit, high), Connection 2 (CAN bus, engine/motor control unit, high), Connection 1 (CAN bus, engine/motor control unit, low), Connection 2 (CAN bus, engine/motor control	246

unit, low)	
15. Data bus diagnostic interface, Connection 1 (CAN bus, airbag control unit, high), Connection 1 (CAN bus, airbag control unit, low), Connection 1 (CAN bus, engine/motor control unit, high), Connection 1 (CAN bus, engine/motor control unit, low)	247
16. Emergency battery, telematics, Data bus diagnostic interface, Emergency call module aerial, Loudspeaker for emergency call module	248
17. Data bus diagnostic interface, Connection 3 (LIN bus) in main wiring harness	249
18. Connection 2 (LIN bus) in dash panel wiring harness, Connection 1 (CAN bus, running gear control unit, high), Connection 1 (CAN bus, running gear control unit, low)	250
19. Onboard supply control unit, Connection 2 (LIN bus) in main wiring harness	251
20. Onboard supply control unit, Connection 6 (LIN bus) in main wiring harness, Connection 7 (LIN bus) in main wiring harness	252
21. Convenience system central control unit, Connection 1 (LIN bus) in main wiring harness, Connection 1 (CAN bus, automatic gearbox control unit, high), Connection 1 (CAN bus, automatic gearbox control unit, low)	253
012 - Anti-lock brake system (ABS)	254-259
1. Anti-lock brake system (ABS)	254
2. ABS control unit	255
3. Brake light switch, Vacuum sender, ABS control unit, Front right ABS inlet valve, Left parking brake motor, Right parking brake motor	256
4. Front right speed sensor, Rear left speed sensor, Roof carrier detection sensor, ABS control unit, Rear left ABS outlet valve, Vehicle stabilization program high-pressure valve 1, ABS hydraulic pump	257
5. Electromechanical parking brake button, Auto-hold button, ABS control unit, Onboard supply control unit, Electromechanical parking brake warning lamp	258
6. Button for TCS and electronic stabilisation program, Hill descent control button, Operating unit 1 for driver and convenience functions, Convenience system central control unit, Onboard supply control unit	259
013 - Multifunction steering wheel , (1XP),(1XW),(2PF),(2ZM)	260-264
1. Multifunction steering wheel , (1XP),(1XW),(2PF),(2ZM)	260
2. Cruise control system switch, Steering angle sender, Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Fuse holder C	261
3. Horn plate, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	262
4. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Multifunction buttons on left in steering wheel, Multifunction steering wheel control unit, Steering column electronics control unit	263
5. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift up), Tiptronic switch (shift down), Steering wheel heater button, Multifunction steering wheel control unit	264
014 - Tail light clusters with LEDs , (8SK),(8SP)	265-267
1. Tail light clusters with LEDs , (8SK),(8SP)	265
2. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	266
3. Convenience system central control unit, Left tail light cluster, Right tail light cluster	267
015 - Head-up display , (KS1)	268-270
1. Head-up display , (KS1)	268
2. Light switch, Switch for head-up display, Onboard supply control unit, Control unit for head-up display	269
3. Earth connection 2, in dash panel wiring harness, Earth point 3, on right A-pillar	270
016 - Electromechanical steering , (QZ7)	271-274
1. Electromechanical steering , (QZ7)	271
2. Steering moment sender, Power steering control unit, Electromechanical power steering motor	272
3. Data bus diagnostic interface, Electromechanical power steering warning lamp	273
4. Positive connection 2 (15), in interior wiring harness	274
017 - Automatic anti-dazzle interior mirror	275-276
1. Automatic anti-dazzle interior mirror	275
2. Onboard supply control unit, Data bus diagnostic interface, Fuse 1 on fuse holder B, Automatic anti-dazzle interior mirror	276
018 - Front camera for driver assist systems , (QK1)	277-279
1. Front camera for driver assist systems , (QK1)	277
2. Front camera for driver assist systems, Windscreen heater for front sensors	278
3. Data bus diagnostic interface	279
019 - Reversing camera (Rear Assist) , (KA2)	280-281
1. Reversing camera (Rear Assist) , (KA2)	280
2. Reversing camera system control unit, Reversing camera	281
020 - LED headlights , (8IT)	282-292
1. LED headlights . (8IT)	282

2. Rear left vehicle level sender, Convenience system central control unit, Onboard supply control unit	283
3. Onboard supply control unit, Left light control unit, Front left headlight	284
4. Onboard supply control unit, Left light control unit, Front left headlight	285
5. Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight	286
6. Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight	287
7. Onboard supply control unit, Front right headlight	288
8. Onboard supply control unit, Front right headlight	289
9. Output module 1 for right LED headlight, Onboard supply control unit, Front right headlight	290
10. Output module 1 for right LED headlight, Front right headlight	291
11. Light for left signature lighting, Light for right signature lighting	292
021 - LED matrix beam headlights , (8G4)	293-307
1. LED matrix beam headlights , (8G4)	293
2. Onboard supply control unit	294
3. Onboard supply control unit, Left light control unit, Front left headlight	295
4. Onboard supply control unit, Left light control unit, Front left headlight	296
5. Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight	297
6. Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight	298
7. Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight	299
8. Output module 1 for left LED headlight, Onboard supply control unit, Right light control unit, Front left headlight, Front right headlight	300
9. Onboard supply control unit, Right light control unit, Front right headlight	301
10. Output module 1 for right LED headlight, Onboard supply control unit, Right light control unit, Front right headlight	302
11. Output module 1 for right LED headlight, Front right headlight	303
12. Output module 1 for right LED headlight, Front right headlight	304
13. Output module 1 for right LED headlight, Front right headlight	305
14. Light for left signature lighting, Light for right signature lighting	306
15. Rear left vehicle level sender, Front left vehicle level sender, Convenience system central control unit	307
022 - Lane change assist , (7Y1)	308-311
1. Lane change assist , (7Y1)	308
2. Lane change assist control unit	309
3. Lane change assist control unit 2	310
4. Driver door control unit, Front passenger door control unit, Lane change assist warning lamp in driver side exterior mirror, Lane change assist warning lamp in front passenger side exterior mirror	311
023 - Tyre Pressure Monitoring System , (7K3),(7K4)	312-314
1. Tyre Pressure Monitoring System , (7K3),(7K4)	312
2. Tyre Pressure Monitoring System control unit	313
3. Front left tyre pressure sensor, Front right tyre pressure sensor, Rear left tyre pressure sensor, Rear right tyre pressure sensor, Tyre Pressure Monitoring System control unit	314
024 - Night vision system , (9R1)	315-317
1. Night vision system , (9R1)	315
2. Control unit for night vision system	316
3. Control unit for night vision system, Camera for night vision system	317
025 - Overhead view camera , (KA6)	318-321
1. Overhead view camera , (KA6)	318
2. Data bus diagnostic interface, Control unit for overhead view camera	319
3. Control unit for overhead view camera, Left overhead view camera, Right overhead view camera	320
4. Control unit for overhead view camera, Front overhead view camera, Rear overhead view camera	321
026 - Sliding sunroof (open-sky system)	322-324
1. Sliding sunroof (open-sky system)	322
2. Sunroof button, Button 1 for roof roller blind, Sliding sunroof adjustment control unit	323
3. Sliding sunroof adjustment control unit, Sliding sunroof motor, Sunroof roller blind motor	324
027 - Parking aid (PDC) with park assist steering (Park Assist) , (7X5)	325-330
1. Parking aid (PDC) with park assist steering (Park Assist) , (7X5)	325
2. Onboard supply control unit	326
3. Parking aid button, Operating unit 1 for driver and convenience functions, Rear parking aid warning buzzer, Front parking aid warning buzzer, Onboard supply control unit	327
4. Front right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Onboard supply control unit	328
5. Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Rear left park assist steering sender, Rear right park assist steering sender, Onboard supply control unit	329
6. Rear left parking aid sender, Rear centre right parking aid sender, Onboard supply control unit	330
028 - Parkina aid (models with no trailer couplina) . (7X1).(7X2)	331-335

1. Parking aid (models with no trailer coupling) , (7X1),(7X2)	331
2. Onboard supply control unit	332
3. Parking aid button, Operating unit 1 for driver and convenience functions, Rear parking aid warning buzzer, Front parking aid warning buzzer, Onboard supply control unit	333
4. Front right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Onboard supply control unit	334
5. Rear left parking aid sender, Rear centre right parking aid sender, Onboard supply control unit	335
029 - Garage door opener , (VC1),(VC2)	336-337
1. Garage door opener , (VC1),(VC2)	336
2. Garage door operating unit, Garage door opener button 1, Garage door operation control unit	337
030 - Trailer coupling , (5C0)	338-343
1. Trailer coupling , (5C0)	338
2. Trailer detector control unit	339
3. Trailer articulation angle sensor, Trailer detector control unit, Hinged tow attachment ball head motor	340
4. Button for electric swivelling towing bracket, Trailer detector control unit	341
5. Trailer detector control unit, Trailer socket	342
6. Trailer detector control unit, Trailer towing attachment thermal fuse, Coupling point for electromechanical brake servo	343
031 - Adaptive cruise control , (8T3),(8T8)	344-345
1. Adaptive cruise control , (8T3),(8T8)	344
2. Adaptive cruise control unit, Control unit 2 for adaptive cruise control	345
032 - All-wheel drive , (GH2)	346-348
1. All-wheel drive , (GH2)	346
2. Oil pressure and oil temperature sender 2, Differential lock control unit, Data bus diagnostic interface, Clutch valve for all-wheel drive, Clutch valve 2 for all-wheel drive, All-wheel drive pump	347
3. Oil pressure and oil temperature sender, Differential lock control unit, Rear wheel steering control unit	348
033 - Heated windscreen , (4GR)	349-351
1. Heated windscreen , (4GR)	349
2. Heated windscreen control unit, Heated windscreen	350
3. Heated windscreen control unit	351
034 - Electromechanical rear wheel steering , (0N5)	352-354
1. Electromechanical rear wheel steering , (0N5)	352
2. Rack position sender, Data bus diagnostic interface, Rear wheel steering control unit	353
3. Data bus diagnostic interface, Electromechanical power steering warning lamp	354
035 - Adaptive suspension , (1BK),(2MA),(2MB)	355-362
1. Adaptive suspension , (1BK),(2MA),(2MB)	355
2. Running gear control unit, Adaptive suspension compressor electronics, Adaptive suspension drain valve, Adaptive suspension compressor motor	356
3. Compressor temperature sender for adaptive suspension, Running gear control unit, Driver assist systems control unit	357
4. Pressure sender for adaptive suspension, Running gear control unit, Adaptive suspension pressure accumulator valve	358
5. Button for electric swivelling towing bracket, Loading height button, Running gear control unit	359
6. Rear left vehicle level sender, Front left vehicle level sender, Running gear control unit	360
7. Running gear control unit, Front left shock absorber damping adjustment valve, Front right shock absorber damping adjustment valve, Rear left shock absorber damping adjustment valve	361
8. Data bus diagnostic interface, Front camera for driver assist systems	362
036 - Gas discharge headlights with automatic headlight range control , (8IH)	363-369
1. Gas discharge headlights with automatic headlight range control , (8IH)	363
2. Rear left vehicle level sender, Convenience system central control unit, Onboard supply control unit	364
3. Onboard supply control unit, Left light control unit, Front left headlight	365
4. Onboard supply control unit, Left light control unit, Front left headlight	366
5. Onboard supply control unit, Right light control unit, Front right headlight	367
6. Onboard supply control unit, Right light control unit, Front right headlight	368
7. Voltage supply relay for lights for signature lighting, Light for left signature lighting, Light for right signature lighting	369
037 - Auxiliary heater, supplementary heater , (9M1),(9M9)	370-372
1. Auxiliary heater, supplementary heater , (9M1),(9M9)	370
2. Auxiliary heater control unit, Metering pump	371
3. Auxiliary heater control unit, Heater coolant shut-off valve, Remote control receiver for auxiliary heater, Auxiliary heater aerial, Roof aerial	372
038 - Infotainment MOST bus	373-375

1. Infotainment MOST bus	373
2. Connection (diagnosis), in interior wiring harness, Connection 1 (diagnosis), in main wiring harness	374
3. Connection 1 (diagnosis), in main wiring harness	375
039 - Rear Seat Entertainment (RSE) , (9WE),(9WF)	376-379
1. Rear Seat Entertainment (RSE) , (9WE),(9WF)	376
2. Rear left information display and operating unit control unit, Coupling point for front left seat, Multimedia system display unit 4	377
3. Rear right information display and operating unit control unit, Coupling point for front right seat, Multimedia system display unit 3	378
4. Control unit 1 for information electronics	379
040 - Entry and start authorisation	380-384
1. Entry and start authorisation	380
2. Convenience system central control unit, Onboard supply control unit, Fuse holder C	381
3. Entry and start authorisation button, Convenience system central control unit, Control unit for electronic steering column lock	382
4. Convenience system central control unit, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Left aerial for entry and start authorisation	383
5. Convenience system central control unit, Data bus diagnostic interface, Right aerial for entry and start authorisation	384
041 - Bang & Olufsen sound system , (8RF)	385-392
1. Bang & Olufsen sound system , (8RF)	385
2. Digital sound package control unit, Control unit 1 for information electronics, Fuse 1 (30)	386
3. Digital sound package control unit, Front left treble loudspeaker, Centre loudspeaker, Centre loudspeaker 2, Control motor for front left treble speaker	387
4. Digital sound package control unit, Front right treble loudspeaker, Microphone unit in front roof module, Control motor for front right treble speaker	388
5. Digital sound package control unit, Front left bass loudspeaker, Front right bass loudspeaker, Front left mid-range loudspeaker, Front right mid-range loudspeaker	389
6. Digital sound package control unit, Rear left bass loudspeaker, Rear right bass loudspeaker, Rear left mid-range loudspeaker, Rear right mid-range loudspeaker	390
7. Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Front left treble loudspeaker 2, Front right treble loudspeaker 2, Front left mid-range loudspeaker 2, Front right mid-range loudspeaker 2	391
8. Digital sound package control unit, Left effect loudspeaker, Right effect loudspeaker, Subwoofer, Rear left treble loudspeaker 2, Rear right treble loudspeaker 2	392
042 - Digital TV tuner , (QU1),(QV1),(Q0A),(Q0B)	393-397
1. Digital TV tuner , (QU1),(QV1),(Q0A),(Q0B)	393
2. TV aerial 2, TV tuner	394
3. Aerial, TV tuner, Radio aerial 2	395
4. TV aerial 1, TV aerial 3, TV tuner, Digital radio aerial	396
5. TV tuner, TV card reader	397
043 - Radio , (I7Y)	398-408
1. Radio , (I7Y)	398
2. Driver side volume regulator, Multimedia system operating unit, Control unit 1 for information electronics	399
3. Multimedia system operating unit, Control unit 1 for information electronics	400
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Pivot mechanism for display	401
5. Control unit 1 for information electronics	402
6. Control unit 1 for information electronics	403
7. Control unit 1 for information electronics, Connection for external audio sources	404
8. Control unit 1 for information electronics, Microphone unit in front roof module	405
9. Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	406
10. Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	407
11. DVD changer	408
044 - MMI high with radio , (I8E)	409-427
1. MMI high with radio , (I8E)	409
2. Driver side volume regulator, Multimedia system operating unit, Control unit 1 for information electronics	410
3. Multimedia system operating unit, Control unit 1 for information electronics	411
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Pivot mechanism for display	412
5. Control unit 1 for information electronics. Pivot mechanism for display	413

6. Control unit 1 for information electronics, Aerial, Radio aerial 2	414
7. Control unit 1 for information electronics, Aerial amplifier 3, Roof aerial, LTE aerial 2	415
8. Control unit 1 for information electronics, Connection for external audio sources	416
9. Control unit 1 for information electronics, Front left loudspeaker	417
10. Control unit 1 for information electronics, Centre loudspeaker, Centre loudspeaker 2	418
11. Control unit 1 for information electronics, Front right loudspeaker	419
12. Control unit 1 for information electronics, Internal microphone, Telephone bracket, Front left microphone, Microphone unit in front roof module	420
13. Telephone aerial, Aerial amplifier for mobile telephone, Telephone bracket	421
14. Digital sound package control unit	422
15. Digital sound package control unit	423
16. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right bass loudspeaker	424
17. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker	425
18. Digital sound package control unit, Front right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	426
19. DVD changer	427
045 - MMI high with navigation system , (I8H)	428-450
1. MMI high with navigation system , (I8H)	428
2. Driver side volume regulator, Multimedia system operating unit, Control unit 1 for information electronics	429
3. Multimedia system operating unit, Control unit 1 for information electronics	430
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Pivot mechanism for display	431
5. Control unit 1 for information electronics, Pivot mechanism for display	432
6. Control unit 1 for information electronics, Aerial, Radio aerial 2	433
7. Control unit 1 for information electronics, Roof aerial, LTE aerial 2	434
8. Control unit 1 for information electronics, Aerial filter for GPS, Aerial amplifier 3, Roof aerial	435
9. Control unit 1 for information electronics, Front left loudspeaker, Centre loudspeaker, Centre loudspeaker 2	436
10. Control unit 1 for information electronics, Connection for external audio sources	437
11. Control unit 1 for information electronics, Connection for external audio sources	438
12. Chip card reader control unit, Control unit 1 for information electronics, Connection for external audio sources, Dedicated short-range communication aerial	439
13. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial	440
14. Control unit 1 for information electronics	441
15. Control unit 1 for information electronics, Front right loudspeaker, Internal microphone, Front left microphone, Microphone unit in front roof module	442
16. Control unit 1 for information electronics, Telephone bracket	443
17. Telephone aerial, Aerial amplifier for mobile telephone	444
18. Digital sound package control unit	445
19. Digital sound package control unit	446
20. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right bass loudspeaker	447
21. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker, Front left mid-range loudspeaker	448
22. Digital sound package control unit, Front right treble loudspeaker, Front right bass loudspeaker, Front right mid-range loudspeaker	449
23. DVD changer	450
046 - Adjustable rear seat , (5KL)	451-458
1. Adjustable rear seat , (5KL)	451
2. Data bus diagnostic interface, Control unit for seat adjustment, row 3	452
3. Left backrest adjustment button for seat, row 3, Left backrest adjustment button 2 for seat row 3, Control unit for seat adjustment, row 3, Left backrest adjustment warning lamp 1 for seat row 3	453
4. Left backrest adjustment button 3 for seat row 3, Control unit for seat adjustment, row 3, Left backrest adjustment warning lamp 3 for seat row 3	454
5. Backrest adjustment limit switch for left seat in row 3 (locked), Backrest adjustment limit switch 2 for left seat in row 3 (locked), Backrest adjustment sender for left seat in row 3, Control unit for seat adjustment, row 3, Backrest adjustment mo or for left seat, row 3	455
6. Locking pawl motor for left backrest adjustment, row 3, Locking pawl motor 2 for left backrest adjustment, row 3, Control unit for seat adjustment, row 3	456
7. Locking pawl motor for right backrest adjustment, row 3, Locking pawl motor 2 for right backrest adjustment, row 3, Control unit for seat adjustment, row 3	457
8. Backrest adjustment limit switch for right seat in row 3 (locked). Backrest adjustment limit	458

switch for right seat in row 3 (unlocked), Backrest adjustment limit switch 2 for right seat in row 3 (unlocked), Control unit for seat adjustment, row 3, Backrest adjustment motor for right seat, row 3	
047 - Adjustable driver and front passenger seats , (Q1A),(3PN)	459-468
1. Adjustable driver and front passenger seats , (Q1A),(3PN)	459
2. Onboard supply control unit, Driver seat adjustment thermal fuse 1, Fuse 2, Fuse 3	460
3. Driver door control unit, Front passenger door control unit, Onboard supply control unit, Rear left footwell light	461
4. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	462
5. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor	463
6. Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	464
7. Front passenger seat adjustment thermal fuse 1, Rear right footwell light	465
8. Front passenger seat lumbar support adjustment switch, Control unit for front passenger seat adjustment with memory function, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	466
9. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function, Front passenger seat backrest adjustment motor	467
10. Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	468
048 - Adjustable driver and front passenger seats , (Q2J)	469-481
1. Adjustable driver and front passenger seats , (Q2J)	469
2. Driver door control unit, Front passenger door control unit, Fuse 2, Fuse 3	470
3. Onboard supply control unit	471
4. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat adjustment thermal fuse 1, Coupling point for front left seat, Rear left footwell light	472
5. Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor, Driver seat depth adjustment motor, Compressor for multicontour driver seat	473
6. Switch module for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor	474
7. Control unit for seat and steering column adjustment with memory function, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor, Lumbar support adjustment motor on driver side	475
8. Control unit for seat and steering column adjustment with memory function, Lumbar support adjustment valve block on driver side, Driver seat lumbar support adjustment pump	476
9. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function, Front passenger seat adjustment thermal fuse 1, Coupling point for front right seat, Rear right footwell light	477
10. Control unit for front passenger seat adjustment with memory function, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor, Front passenger seat depth adjustment motor, Compressor for multicontour front passenger seat	478
11. Switch module for front passenger seat, Front passenger seat massage function button, Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor	479
12. Control unit for front passenger seat adjustment with memory function, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor, Lumbar support adjustment motor on passenger side	480
13. Control unit for front passenger seat adjustment with memory function, Lumbar support adjustment valve block on front passenger side, Front passenger side lumbar support adjustment pump	481
049 - Seat heating , (9AD)	482-490
1. Seat heating , (9AD)	482
2. Onboard supply control unit	483
3. Front left seat temperature sender, Front left backrest temperature sensor, Heated seat cushion for front left seat, Heated backrest for front left seat, Left bolster heater for front left seat	484
4. Front right seat temperature sender, Front right backrest temperature sensor, Heated seat cushion for front right seat, Heated backrest for front right seat, Left bolster heater for front right seat	485
5. Seat occupied recognition control unit	486
6. Seat heating control unit	487

7. Button for left seat heating, Button for right seat heating, Seat heating control unit	488
8. Rear left seat temperature sensor, Rear left backrest temperature sensor, Heated bench seat cushion for rear left seat, Heated backrest for rear left seat	489
9. Rear right seat temperature sensor, Rear right backrest temperature sensor, Heated bench seat cushion for rear right seat, Heated backrest for rear right seat	490
050 - Adjustable driver and front passenger seats , (Q1D),(Q1J)	491-502
1. Adjustable driver and front passenger seats , (Q1D),(Q1J)	491
2. Driver door control unit, Onboard supply control unit, Fuse 2, Fuse 3	492
3. Onboard supply control unit, Driver seat adjustment thermal fuse 1, Rear left footwell light	493
4. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function	494
5. Control unit for seat and steering column adjustment with memory function, Lumbar support adjustment valve block on driver side, Driver seat backrest adjustment motor, Driver seat height adjustment motor, Driver seat depth adjustment motor, Compressor for multicontour driver seat	495
6. Control unit for seat and steering column adjustment with memory function, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor, Driver seat rake adjustment motor	496
7. Switch module for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor	497
8. Front passenger door control unit, Front passenger seat adjustment thermal fuse 1, Rear right footwell light	498
9. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function	499
10. Control unit for front passenger seat adjustment with memory function, Lumbar support adjustment valve block on front passenger side, Front passenger seat backrest adjustment motor, Front passenger seat height adjustment motor, Front passenger seat depth adjustment motor, Compressor for multicontour front passenger seat	500
11. Control unit for front passenger seat adjustment with memory function, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	501
12. Switch module for front passenger seat, Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor	502
051 - Rear seat heating , (4A4)	503-508
1. Rear seat heating , (4A4)	503
2. Operating and display unit for rear air conditioning system	504
3. Operating and display unit for rear air conditioning system	505
4. Operating and display unit for rear air conditioning system	506
5. Rear left seat temperature sensor, Rear left backrest temperature sensor, Heated bench seat cushion for rear left seat, Heated backrest for rear left seat	507
6. Rear right seat temperature sensor, Rear right backrest temperature sensor, Heated bench seat cushion for rear right seat, Heated backrest for rear right seat	508
052 - Front seat heating , (4A3),(4A4)	509-517
1. Front seat heating , (4A3),(4A4)	509
2. Onboard supply control unit	510
3. Onboard supply control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	511
4. Front left seat temperature sender, Front left backrest temperature sensor, Heated seat cushion for front left seat, Heated backrest for front left seat	512
5. Left bolster heater for front left seat	513
6. Heater element for front left seat extension, Heater element for front right seat extension	514
7. Left bolster heater for front right seat	515
8. Front right seat temperature sender, Front right backrest temperature sensor, Heated seat cushion for front right seat, Heated backrest for front right seat	516
9. Seat occupied recognition control unit	517
053 - Towing bracket, only models with US equipment , (5C1),(B39)	518-521
1. Towing bracket, only models with US equipment , (5C1),(B39)	518
2. Trailer detector control unit	519
3. Trailer detector control unit, Trailer socket	520
4. Trailer detector control unit, Trailer towing attachment thermal fuse, Coupling point for electromechanical brake servo	521
054 - Tail light clusters , (8SL),(A8U)	522-525
1. Tail light clusters , (8SL),(A8U)	522
2. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	523
3. Convenience system central control unit, Left tail light cluster	524
4. Convenience system central control unit, Right tail light cluster	525
055 - Airbaa svstems (US equipment) . (4UB)	526-537

1. Airbag systems (US equipment) , (4UB)	526
2. Airbag coil connector and return ring with slip ring, Airbag control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag	527
3. Airbag control unit, Airbag igniter 1 on front passenger side, Igniter for exhaust valve for front passenger airbag	528
4. Driver side belt switch, Driver side seat position sensor, Airbag control unit, Data bus diagnostic interface, Side airbag igniter on driver side	529
5. Left backrest contact switch, Airbag control unit, Rear side airbag igniter on driver side	530
6. Hybrid battery unit, Right backrest contact switch, Airbag control unit, Rear side airbag igniter on passenger side	531
7. Front passenger side belt switch, Front passenger side seat position sensor, Airbag control unit, Seat occupied recognition control unit, Side airbag igniter on front passenger side	532
8. Seat occupied sensor on front passenger side, Airbag control unit, Seat occupied recognition control unit, Heater element with seat occupied recognition, front passenger side	533
9. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Centre crash sensor for X/Y axis, Airbag control unit, Rear belt tensioner igniter on driver side, Driver side curtain airbag igniter	534
10. Driver side belt force limiter, Airbag control unit, Control unit for front left belt tensioner, Driver seat belt tensioner igniter 1	535
11. Front passenger side belt force limiter, Airbag control unit, Front passenger seat belt tensioner igniter 1, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2	536
12. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	537
056 - Air conditioning system for models with high-voltage system , (9AU)	538-556
1. Air conditioning system for models with high-voltage system , (9AU)	538
2. Operating and display unit for front air conditioning system, Fresh air blower control unit, Fresh air blower	539
3. Operating and display unit for front air conditioning system, Air quality sensor, Humidity sender in fresh air intake duct, Data bus diagnostic interface	540
4. Operating and display unit for front air conditioning system, Sunlight penetration photosensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor	541
5. Operating and display unit for front air conditioning system, Driver side ioniser button, Driver side ioniser, Dash panel vent control motor	542
6. Operating and display unit for front air conditioning system, Dash panel vent button, Potentiometer in rear left chest vent, Potentiometer in rear right chest vent	543
7. Operating and display unit for front air conditioning system, Potentiometer in left centre dash panel vent, Potentiometer in left side vent	544
8. Operating and display unit for front air conditioning system, Potentiometer in right centre dash panel vent, Potentiometer in right side vent	545
9. Operating and display unit for front air conditioning system, Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender	546
10. Operating and display unit for front air conditioning system, Air recirculation flap control motor, Right temperature flap control motor, Fresh air flap control motor	547
11. Operating and display unit for front air conditioning system, Right footwell flap control motor, Right side vent control motor, Rear air distribution flap control motor	548
12. Operating and display unit for front air conditioning system, Defroster flap control motor, Right centre vent control motor, Control motor for right footwell temperature flap	549
13. Operating and display unit for front air conditioning system, Left centre vent control motor, Left temperature flap control motor, Left side vent control motor	550
14. Operating and display unit for front air conditioning system, Left footwell flap control motor, Rear temperature flap control motor, Control motor for left footwell temperature flap	551
15. Operating and display unit for rear air conditioning system	552
16. Operating and display unit for rear air conditioning system, Rear chest vent temperature sensor, Left B-pillar and footwell shut-off flap control motor, Rear left chest vent control motor	553
17. Operating and display unit for rear air conditioning system, Rear fresh air blower control unit, Rear fresh air blower, Right B-pillar and footwell shut-off flap control motor, Rear right chest vent control motor	554
18. Operating and display unit for rear air conditioning system, Heated bench seat cushion for rear left seat, Heated backrest for rear left seat, Heated bench seat cushion for rear right seat, Heated backrest for rear right seat	555
19. Onboard supply control unit, Rear left vent illumination bulb, Rear right vent illumination bulb	556
057 - 2.0l petrol engine , CYMC,CYRB	557-581
1. 2.0l petrol engine , CYMC,CYRB	557
2. Batterv. Batterv monitor control unit. Batterv isolation ianiter	558

3. Starter, Alternator with voltage regulator, Suppression capacitor, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	559
4. Terminal 15 voltage supply relay, Starter relay 1, Starter relay 2	560
5. Fuse carrier 1	561
6. Main relay, Engine component power supply relay	562
7. Engine/motor control unit	563
8. Accelerator pedal module, Engine/motor control unit	564
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 4 with output stage, Spark plug connector	565
10. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	566
11. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	567
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	568
13. Engine/motor control unit, Air filter bypass flap valve, Coolant circulation pump	569
14. Engine speed sender, Coolant temperature sender, Intake manifold pressure sender, Hall sender 3, Engine/motor control unit	570
15. Charge pressure sender, Engine/motor control unit, Actuator for engine temperature regulation, Charge pressure positioner	571
16. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	572
17. Cam adjustment actuator 8, Throttle valve module, Knock sensor 1, Engine/motor control unit, Fuel metering valve	573
18. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Intake manifold flap valve, Valve for oil pressure control, Coolant valve for gearbox, Continued coolant circulation pump	574
19. Fuel pressure sender for low pressure, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Piston cooling jet control valve	575
20. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Engine/motor control unit	576
21. Brake pedal switch, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	577
22. Engine/motor control unit, Radiator fan, Radiator fan 2	578
23. Oil level and oil temperature sender, Tank pressure sensor, Engine/motor control unit, Control unit for fuel tank leak detection, Metering pump	579
24. Fuel delivery unit, Fuel pump control unit	580
25. Coolant shortage indicator sender, Onboard supply control unit, Air conditioner compressor regulating valve	581
058 - 2.0l petrol engine , CVJA	582-606
1. 2.0l petrol engine , CVJA	582
2. Battery, Battery monitor control unit, Battery isolation igniter	583
3. Suppression capacitor, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	584
4. Blocking diode for disconnecting electrical system, Terminal 30 wiring junction 3	585
5. Terminal 15 voltage supply relay, Fuse carrier 1	586
6. Main relay, Engine component power supply relay, Fuse carrier 1	587
7. Engine/motor control unit	588
8. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 4 with output stage, Spark plug connector	589
9. Accelerator pedal module, Engine/motor control unit	590
10. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	591
11. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	592
12. Engine/motor control unit, Air filter bypass flap valve	593
13. Hall sender, Coolant temperature sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	594
14. Engine speed sender, Intake manifold pressure sender, Hall sender 3, Fuel pressure sender for low pressure, Engine/motor control unit	595
15. Charge pressure sender, Tank pressure sensor 2, Engine/motor control unit, Fuel pressure regulating valve, Actuator for engine temperature regulation	596
16. Throttle valve module. Knock sensor 1. Engine/motor control unit. Charge pressure positioner	597

17. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	598
18. Cam adjustment actuator 8, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control	599
19. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Engine/motor control unit, Brake servo, Gearbox mounting valve 2, Piston cooling jet control valve	600
20. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Exhaust flap control unit, Solenoid valve 7, Lambda probe heater, Lambda probe 1 heater after catalytic converter	601
21. Engine/motor control unit, Gearbox mounting valve 1, Continued coolant circulation pump	602
22. Oil level and oil temperature sender, Engine/motor control unit	603
23. Fuel delivery unit, Fuel temperature sender, Tank breather pressure sensor 1, Fuel pump control unit, Engine/motor control unit	604
24. Coolant shortage indicator sender, Onboard supply control unit, Radiator fan, Radiator fan 2	605
25. Power unit mounting sender 1, Power unit mounting sender 2, Power unit mounting control unit, Power unit mounting actuator 1, Power unit mounting actuator 2	606
059 - High-voltage system , (0K3)	607-628
1. High-voltage system , (0K3)	607
2. Battery, Battery monitor control unit, Battery isolation igniter	608
3. Starter-alternator, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket, Radiator fan, Radiator fan 2	609
4. Blocking diode for disconnecting electrical system, Terminal 30 wiring junction 3	610
5. Fuse holder F, Fuse carrier 4	611
6. Battery regulation control unit, Maintenance connector for high-voltage system	612
7. Battery regulation control unit, High-voltage battery coolant pump relay, Coolant pump for high-voltage battery	613
8. Hybrid battery unit, Coolant temperature sender 1 for high-voltage battery, Coolant temperature sender 2 for high-voltage battery, Battery regulation control unit, High-voltage battery isolation igniter, Charging unit fuse, High-voltage system fuse 1	614
9. Hybrid battery unit	615
10. Hybrid battery unit, DC/AC converter for drive motor, Power and control electronics for electric drive, Electric drive control unit	616
11. Drive motor temperature sender, Drive motor rotor position sender 1, Power and control electronics for electric drive, Automatic gearbox control unit, Three-phase current drive	617
12. Power and control electronics for electric drive, Three-phase current drive, Electric drive motor	618
13. Power and control electronics for electric drive, Thermal management control unit, Electrical air conditioner compressor	619
14. High-voltage heater (PTC) control unit, High-voltage heater (PTC)	620
15. Charging unit 1 for high-voltage battery, Module for battery charge selector buttons, Actuator for high-voltage charging flap lock 1	621
16. Charging unit 1 for high-voltage battery	622
17. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 1	623
18. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 1, Temperature sender for charging socket 1, High-voltage battery charging socket 1	624
19. Brake servo control unit, Engine sound generator control unit, Brake servo, Actuator 1 for engine sound generator	625
20. Brake servo control unit, Brake servo	626
21. Brake servo control unit, Control unit for brake pressure accumulator, Brake servo, Brake system pressure accumulator, Motor in brake pressure accumulator for energy recovery	627
22. Data bus diagnostic interface	628
060 - Heat pump , (0K3)	629-636
1. Heat pump , (0K3)	629
2. Data bus diagnostic interface, Thermal management control unit, Refrigerant shut-off valve	630
3. Coolant temperature sender 7 for thermal management, Thermal management control unit, Coolant changeover valve 1, Coolant changeover valve 2, Coolant changeover valve 3, Coolant changeover valve 4, Coolant shut-off valve 2	631
4. Coolant shortage indicator sender 2, Coolant temperature sender 1 for thermal management, Coolant temperature sender 3 for thermal management, Coolant temperature sender 4 for thermal management, Coolant temperature sender 5 for thermal management, Coolant temperature sender 6 for thermal management, Coolant temperature sender 8 for thermal management, Thermal management control unit	632
5. Thermal management control unit, Thermal management coolant pump relay, Thermal management coolant pump, Thermal management coolant pump 2, Thermal management coolant pump 4	633
6. Refrigerant pressure and temperature sender. Refrigerant pressure and temperature sender 2.	634

	Refrigerant pressure and temperature sender 3, Thermal management control unit, Radiator fan, Radiator fan 2	
	7. High-pressure sender, Refrigerant expansion valve 1, Refrigerant shut-off valve 2	635
	8. Refrigerant shut-off valve 3, Refrigerant shut-off valve 4, Refrigerant shut-off valve 5	636
061	- 3.0l diesel engine , CVZA	637-668
	1. 3.0l diesel engine , CVZA	637
	2. Battery, Battery monitor control unit, Battery isolation igniter	638
	3. Suppression capacitor, Starter-alternator, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Fuse holder F, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	639
	4. Blocking diode for disconnecting electrical system, Terminal 30 wiring junction 3	640
	5. Terminal 15 voltage supply relay, Fuse carrier 1	641
	6. Main relay, Fuse carrier 1	642
	7. Cylinder 2 combustion chamber pressure sender, Automatic glow period control unit	643
	8. Air mass meter, Biodiesel concentration sender, Engine/motor control unit	644
	9. Intake air temperature sender, Exhaust gas temperature sender 4, Engine/motor control unit	645
	10. Engine/motor control unit	646
	11. Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit	647
	12. Accelerator pedal module, Engine/motor control unit	648
	13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 6	649
	14. Throttle valve module, Intake manifold flap control unit, Charge pressure sender, Engine/motor control unit	650
	15. Fuel pressure sender, Fuel pressure sender for low pressure, Engine/motor control unit, Turbocharger 1 control unit	651
	16. Map-controlled engine cooling system thermostat, Exhaust gas recirculation valve 1, Fuel temperature sender, Coolant temperature sender 2, Engine/motor control unit, Fuel metering valve	652
	17. Coolant temperature sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit	653
	18. Oil pressure sender, Catalytic converter temperature sensor 1, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit	654
	19. Engine speed sender, Hall sender, Pressure differential sender, Engine/motor control unit, Valve for oil pressure control	655
	20. Water level sender, Engine/motor control unit, Gearbox mounting valve 1, Gearbox mounting valve 2, Air filter bypass flap valve, Fuel pressure regulating valve	656
	21. Engine/motor control unit, Exhaust flap control unit, Brake servo, Exhaust gas recirculation cooler changeover valve, Exhaust gas recirculation cooling bypass valve 2, Coolant valve for cylinder head	657
	22. Control unit 2 for NOx sender, Particulate sensor, Engine/motor control unit	658
	23. Control unit for NOx sender, Engine/motor control unit	659
	24. Engine/motor control unit	660
	25. Lambda probe 1 before catalytic converter, Lambda probe, Engine/motor control unit, Lambda probe heater	661
	26. Fuel delivery unit, Lambda probe 1 after catalytic converter, Lambda probe after catalytic converter, Oil level and oil temperature sender, Fuel pump control unit, Engine/motor control unit, Lambda probe 1 heater after catalytic converter	662
	27. Fuel delivery unit, Convenience system central control unit	663
	28. Radiator fan, Radiator fan 2	664
	29. Control unit for reducing agent metering system	665
	30. Delivery unit for reducing agent metering system, Tank sender for reducing agent, Temperature sender for reducing agent, Pressure sender for reducing agent metering system, Control unit for reducing agent metering system, Pump for reducing agent, Heater for reducing agent line (heater circuit 2)	666
	31. Delivery unit for reducing agent metering system, Reducing agent level sender, Reducing agent quality sensor, Control unit for reducing agent metering system, Heater for reducing agent tank (heater circuit 1)	667
	32. Power unit mounting sender 1, Power unit mounting sender 2, Power unit mounting control unit, Power unit mounting actuator 1, Power unit mounting actuator 2	668
062	- Basic equipment, right-hand drive , (LOR)	669-694
	1. Basic equipment, right-hand drive , (LOR)	669
	2. Intermittent wiper switch, Cruise control system switch, Steering column electronics control unit, Fuse holder C	670
	3. Windscreen wiper switch, Turn signal switch, Horn plate, Onboard supply control unit, Steering column electronics control unit	671
	4. Onboard supply control unit, Fuse carrier 5	672
	5. Onboard supply control unit	673
	6. Light switch. Onboard supply control unit	674

7. Hazard warning lights button, Operating unit 1 for driver and convenience functions, Onboard supply control unit	675
8. Treble horn, Bass horn, Wiper motor control unit, Onboard supply control unit, Windscreen wiper motor, Headlight washer system pump	676
9. Rain and light sensor, Onboard supply control unit, Washer pump, Rear window wiper motor	677
10. Glove compartment light switch, Onboard supply control unit, Glove compartment light, Left washer jet heater element, Right washer jet heater element, Centre washer jet heater element	678
11. Bonnet contact switch, Bonnet contact switch 2, Onboard supply control unit	679
12. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit	680
13. Convenience system central control unit	681
14. Convenience system central control unit	682
15. Rear lid handle release button, Rear lid contact switch for anti-theft alarm, Contact switch in lock cylinder for rear lid, anti-theft alarm system and central locking system, Convenience system central control unit, Rear lid central locking motor, Left number plate light, Right number plate light	683
16. Convenience system central control unit, High-level brake light bulb, Left luggage compartment light, Right luggage compartment light, Rear lid light, Rear lid light 2	684
17. Window aerial suppression filter, Heated rear window relay, Convenience system central control unit, Tank filler flap locking motor, Heated rear window	685
18. Brake light switch, Convenience system central control unit, Cigarette lighter, 12 V socket	686
19. 12 V socket 2, 12 V socket 3, 12 V socket 4	687
20. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	688
21. Rear left reading light button, Rear right reading light button, Front left reading light button, Front right reading light button, Rear interior light, Front roof module, Rear left reading light, Rear right reading light, Front left reading light, Front right reading light	689
22. Rear left reading light button, Rear interior light, Front roof module	690
23. Left reading light button for seat row 3, Right reading light button for seat row 3, Front roof module, Rear interior light 2, Left reading light for seat row 3, Right reading light for seat row 3	691
24. Dash panel insert operating button, Control unit in dash panel insert, Display in dash panel insert	692
25. Control unit in dash panel insert	693
26. Data bus diagnostic interface, Connection 1 (convenience CAN bus, high), in main wiring harness, Connection 6 (convenience CAN bus, high), in main wiring harness, Connection 1 (convenience CAN bus, low), in main wiring harness, Connection 6 (convenience CAN bus, low), in main wiring harness	694
063 - Convenience system, right-hand drive , (LOR)	695-739
1. Convenience system, right-hand drive , (LOR)	695
2. Coupling point for front right door	696
3. Contact sensor for front right exterior door handle, Driver door control unit, Front right exterior door handle illumination bulb, Driver door lock unit, Light for sill panel moulding background lighting, driver side	697
4. Driver door power latching system contact switch, Driver door control unit, Driver door lock unit	698
5. Driver door control unit, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Driver side window regulator motor, Driver door power latching motor, Light for driver door background lighting	699
6. Rear lid remote release button, Fuel tank flap release button, Driver door control unit, Driver side door warning lamp, Driver side entry light	700
7. Driver side interior locking button for central locking system, Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit, Central locking SAFELOCK function warning lamp, Exit warning lamp, driver side	701
8. Mirror adjustment switch, Mirror adjustment changeover switch, Driver operating unit for memory settings, Driver door control unit	702
9. Operating unit for window regulator in driver door, Driver door control unit	703
10. Operating unit for window regulator in driver door, Driver door control unit, Driver side exterior mirror	704
11. Driver door control unit, Driver side exterior mirror	705
12. Control unit for front right door storage compartment illumination, Light 1 for front right door background lighting, Light for front right door contour lighting, Light for right door storage compartment illumination, Coupling point in front right door	706
13. Light for sill panel moulding background lighting, front passenger side	707
14. Front passenger door control unit, Front passenger door lock unit, Front passenger side window regulator motor, Front passenger door power latching motor	708
15. Front passenger door power latching system contact switch, Front passenger door control unit, Front passenger door lock unit	709
16. Front passenger door control unit. Light for passenger side interior door handle illumination.	710

Light for passenger side door loudspeaker trim, Light for passenger door background lighting, Exit warning lamp, front passenger side	
17. Front passenger operating unit for memory settings, Front passenger door control unit, Front passenger side door warning lamp, Passenger side entry light	711
18. Front passenger side interior locking button for central locking system, Front passenger side window regulator button, Front passenger door control unit	712
19. Front passenger door control unit, Passenger side exterior mirror	713
20. Front passenger door control unit, Passenger side exterior mirror	714
21. Control unit for front left door storage compartment illumination, Light 1 for front left door background lighting, Light for front left door contour lighting, Light for left door storage compartment illumination, Coupling point in front left door	715
22. Coupling point for rear right door, Light for rear sill panel moulding background lighting, driver side	716
23. Rear childproof lock contact switch, driver side, Contact sensor for rear right exterior door handle, Rear driver side door control unit, Light for rear exterior door handle illumination, driver side, Rear door lock unit, driver side	717
24. Rear right door power latching system contact switch, Rear door contact switch, driver side, Rear driver side door control unit, Rear door lock unit, driver side, Rear driver side window regulator motor, Rear childproof lock motor, driver side, Rear central locking SAFELock function motor, driver side, Rear central locking motor, driver side, Rear door power latching motor, driver side	718
25. Rear driver side door control unit, Light for rear driver side interior door handle illumination, Light for rear door background lighting, driver side, Light 2 for rear door background lighting, driver side, Rear exit warning lamp, driver side	719
26. Rear driver side window regulator button, Rear driver side interior locking button for central locking system, Rear driver side door control unit	720
27. Control unit for rear right door storage compartment illumination, Light 1 for rear right door background lighting, Light for rear right door contour lighting, Light for rear right door storage compartment illumination	721
28. Light for rear sill panel moulding background lighting, passenger side	722
29. Rear childproof lock contact switch, passenger side, Contact sensor for rear left exterior door handle, Rear passenger side door control unit, Light for rear exterior door handle illumination, passenger side, Rear door lock unit, passenger side, Rear door power latching motor, passenger side	723
30. Rear left door power latching system contact switch, Rear door contact switch, passenger side, Rear passenger side door control unit, Rear door lock unit, passenger side, Rear childproof lock motor, passenger side, Rear central locking SAFELock function motor, passenger side, Rear central locking motor, passenger side	724
31. Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Rear passenger side entry light, Light for rear door background lighting, passenger side, Rear door warning lamp, passenger side, Light 2 for rear door background lighting, passenger side, Rear exit warning lamp, passenger side	725
32. Rear passenger side window regulator button, Rear passenger side interior locking button for central locking system, Rear passenger side door control unit	726
33. Control unit for rear left door storage compartment illumination, Light 1 for rear left door background lighting, Light for rear left door contour lighting, Light for rear left door storage compartment illumination	727
34. Onboard supply control unit	728
35. Onboard supply control unit	729
36. Onboard supply control unit, Light 1 for dash panel contour lighting, Light 2 for dash panel contour lighting	730
37. Onboard supply control unit, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting, Light 1 for contour lighting of multimedia system operating unit, Light 2 for contour lighting of multimedia system operating unit	731
38. Onboard supply control unit, Front left footwell light, Front right footwell light	732
39. Convenience system central control unit	733
40. Interior monitoring sensor, Vehicle inclination sender, Rear lid closed sender 1, Rear lid closed sender 2, Anti-theft alarm sensor, Alarm horn, Convenience system central control unit	734
41. Rear lid handle release button, Rear lid contact switch, Contact switch for locking pawl, Convenience system central control unit, Rear lid central locking motor, Left number plate light, Right number plate light	735
42. Rear lid power opening sender, Rear lid power opening sender 2, Convenience system central control unit, Rear lid power opening control unit	736
43. Rear lid control unit, Rear lid drive unit 2, Motor 1 for luggage compartment cover	737
44. Rear lid warning buzzer, Rear lid control unit, Rear lid drive unit, Power latching motor for rear lid	738
45. Button to close rear lid in luggage compartment. Locking button in rear lid. Rear lid control	739

unit	
064 - Fuse assignment for RHD vehicles , (L0R)	740-769
1. Fuse assignment for RHD vehicles , (L0R)	740
2. Battery, Battery monitor control unit, Battery isolation igniter	741
3. Suppression capacitor, Terminal 30 wiring junction	742
4. Starter, Alternator with voltage regulator, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2	743
5. Terminal 15 voltage supply relay, Starter relay 1, Starter relay 2	744
6. Main relay, Engine component power supply relay, Coupling point on left A-pillar, bottom	745
7. Fuse holder C	746
8. Fuse holder C	747
9. Fuse holder B, Fuse carrier 1	748
10. Fuse holder B, Fuse carrier 1	749
11. Fuse holder B, Fuse carrier 1	750
12. Fuse holder B, Fuse carrier 1	751
13. Fuse holder B, Fuse carrier 1	752
14. Coupling point in engine compartment, left	753
15. Coupling point in engine compartment, left	754
16. Fuse holder B, Fuse carrier 2	755
17. Fuse holder B, Fuse carrier 3	756
18. Fuse holder B, Fuse carrier 3	757
19. Fuse holder B, Fuse carrier 4	758
20. Fuse holder B, Fuse carrier 4	759
21. Fuse holder B, Fuse carrier 4	760
22. Fuse holder B, Fuse carrier 4	761
23. Fuse holder B, Fuse carrier 5	762
24. Fuse holder B, Fuse carrier 5	763
25. Fuse holder F, Fuse carrier 1	764
26. Fuse holder F, Fuse carrier 1, Fuse carrier 2, Fuse 1 (30)	765
27. Fuse holder F, Fuse carrier 2	766
28. Fuse holder F, Fuse carrier 3	767
29. Fuse holder F, Fuse carrier 3	768
30. Heated rear window fuse, Driver seat adjustment thermal fuse 1, Trailer towing attachment thermal fuse, Levelling system fuse, ABS control unit fuse 1, Coupling point for electromechanical brake servo	769
065 - Airbag systems for RHD vehicles , (L0R)	770-782
1. Airbag systems for RHD vehicles , (L0R)	770
2. Airbag coil connector and return ring with slip ring, Airbag control unit, Airbag igniter on driver side, Igniter for exhaust valve for driver airbag	771
3. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Igniter for exhaust valve for front passenger airbag	772
4. Front passenger side belt switch, Seat occupied sensor on front passenger side, Front passenger side seat position sensor, Airbag control unit, Data bus diagnostic interface, Side airbag igniter on front passenger side	773
5. Left backrest contact switch, Belt switch for seat row 2, centre, Belt switch for seat row 2, passenger side, Airbag control unit, Rear side airbag igniter on passenger side	774
6. Belt switch for seat row 2, driver side, Airbag control unit, Rear side airbag igniter on driver side	775
7. Driver side belt switch, Belt switch for seat row 3, driver side, Belt switch for seat row 3, passenger side, Driver side seat position sensor, Airbag control unit, Side airbag igniter on driver side	776
8. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Centre crash sensor for X/Y axis, Airbag control unit, Igniter for driver side seat belt tensioner 2, Igniter for front passenger side seat belt tensioner 2, Igniter for driver side seat belt tensioner, seat row 3, Igniter for passenger side seat belt tensioner, seat row 3	777
9. Hybrid battery unit, Airbag control unit, Rear belt tensioner igniter on driver side, Driver side curtain airbag igniter	778
10. Driver side belt force limiter, Airbag control unit, Control unit for front right belt tensioner, Driver seat belt tensioner igniter 1	779
11. Front passenger side belt force limiter, Driver side crash sensor 2 for pedestrian protection, Front passenger side crash sensor 2 for pedestrian protection, Airbag control unit, Front passenger seat belt tensioner igniter 1	780
12. Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit	781
13. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit	782

066 - Automatic gearbox , (0K3)	783-788
1. Automatic gearbox , (0K3)	783
2. Parking lock sender, Automatic gearbox control unit, Brake servo control unit, Brake servo	784
3. Gearbox oil temperature sender, Temperature sender in control unit, Automatic gearbox control unit, Solenoid valve 1, Automatic gearbox pressure regulating valve 1, Auxiliary hydraulic pump 1 for gearbox oil, Actuator for disengagement clutch	785
4. Data bus diagnostic interface	786
5. Selector lever, Selector lever position sender, Selector lever sensors control unit, Selector lever position display	787
6. Selector lever, Button for selector lever release, Parking lock button, Parking lock indicator lamp	788
067 - 4.0l diesel engine , CZAA,CZAC	789-829
1. 4.0l diesel engine , CZAA,CZAC	789
2. Battery, Battery monitor control unit, Battery isolation igniter	790
3. Starter, Alternator with voltage regulator, Suppression capacitor, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	791
4. Terminal 15 voltage supply relay, Starter relay 1	792
5. Fuse holder B, Fuse carrier 1	793
6. Automatic glow period control unit, Main relay, Glow plug 1, Glow plug 6, Fuse holder B, Fuse carrier 1	794
7. Automatic glow period control unit, Engine/motor control unit, Glow period control unit 2, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 7, Glow plug 8	795
8. Engine/motor control unit	796
9. Automatic gearbox control unit, Engine/motor control unit, Gearbox mounting valve 1, Gearbox oil cooling valve	797
10. Accelerator pedal module, Engine/motor control unit	798
11. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Gearbox mounting valve 2	799
12. Exhaust gas temperature sender 2, Engine/motor control unit, Air conditioner compressor	800
13. Radiator outlet coolant temperature sender, Biodiesel concentration sender, Engine/motor control unit, Auxiliary pump for heating	801
14. Air mass meter 2, Engine/motor control unit	802
15. Charge air recirculation module, Pressure differential sender, Engine/motor control unit	803
16. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6, Injector, cylinder 7	804
17. Map-controlled engine cooling system thermostat, Intake air temperature sender, Engine/motor control unit, Injector, cylinder 8, Pressure reduction valve, Air filter bypass flap valve, Exhaust gas recirculation cooling bypass valve, Exhaust gas recirculation cooling bypass valve 2	805
18. Intake manifold flap control unit, Intake manifold flap control unit 2, Engine/motor control unit, Fuel pressure regulating valve	806
19. Oil pressure sender, Engine speed sender, Oil level and oil temperature sender, Fuel pressure sender for low pressure, Sender 1 for turbocharger speed, Engine/motor control unit	807
20. Hall sender, Fuel pressure sender, Sender 2 for turbocharger speed, Pressure sender for exhaust gas recirculation, Temperature sender for engine cover panel, Engine/motor control unit	808
21. Oil temperature sender, Coolant temperature sender, Intake manifold pressure sender, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 1 for bank 2, Engine/motor control unit	809
22. Fuel temperature sender, Intake air temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit, Injector for reducing agent	810
23. Throttle valve module 2, Water level sender, Engine/motor control unit, Turbocharger 1 control unit	811
24. Throttle valve module, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	812
25. Brake pedal switch, Engine/motor control unit, Radiator fan, Radiator fan 2, Radiator fan 2	813
26. Inlet cam actuator 1 for cylinder 1, Exhaust cam actuator 1 for cylinder 1, Inlet cam actuator 1 for cylinder 2, Inlet cam actuator 1 for cylinder 3, Engine/motor control unit	814
27. Inlet cam actuator 1 for cylinder 4, Inlet cam actuator 1 for cylinder 5, Inlet cam actuator 1 for cylinder 6, Inlet cam actuator 1 for cylinder 7, Engine/motor control unit	815
28. Exhaust cam actuator 1 for cylinder 3, Exhaust cam actuator 1 for cylinder 4, Inlet cam actuator 1 for cylinder 8, Exhaust cam actuator 1 for cylinder 8, Engine/motor control unit	816
29. Exhaust cam actuator 1 for cylinder 2, Exhaust cam actuator 1 for cylinder 5, Exhaust cam actuator 1 for cylinder 6, Exhaust cam actuator 1 for cylinder 7, Engine/motor control unit	817
30. Engine/motor control unit, Fuel metering valve	818
31. Exhaust gas recirculation valve 1, Exhaust gas recirculation potentiometer, Coolant temperature sender 3. Engine/motor control unit. Turbocharger 2 control unit. Valve for oil pressure control.	819

Exhaust gas recirculation control motor	
32. Engine/motor control unit, Control unit for electric compressor, Electric compressor bypass flap valve, Electric compressor coolant pump	820
33. Control unit for NOx sender, Control unit 2 for NOx sender, Engine/motor control unit	821
34. Particulate sensor, Engine/motor control unit	822
35. Fuel delivery unit, Fuel pump control unit	823
36. Coolant shortage indicator sender, Onboard supply control unit, Air conditioner compressor	824
37. Control unit for structure-borne sound, Engine sound generator control unit, Actuator for structure-borne sound, Actuator 1 for engine sound generator, Actuator 2 for engine sound generator	825
38. Delivery unit for reducing agent metering system, Temperature sender for reducing agent, Control unit for reducing agent metering system, Heater for reducing agent line (heater circuit 2)	826
39. Delivery unit for reducing agent metering system, Tank sender for reducing agent, Pressure sender for reducing agent metering system, Reducing agent level sender, Control unit for reducing agent metering system, Pump for reducing agent	827
40. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Control unit for reducing agent metering system, Heater for reducing agent tank (heater circuit 1)	828
41. Power unit mounting sender 1, Power unit mounting sender 2, Power unit mounting control unit, Power unit mounting actuator 1, Power unit mounting actuator 2	829
068 - 8-speed automatic gearbox 0D5/0D6 , (FN0)	830-835
1. 8-speed automatic gearbox 0D5/0D6 , (FN0)	830
2. Gearbox oil temperature sender, Parking lock sender, Automatic gearbox control unit	831
3. Temperature sender in control unit, Automatic gearbox control unit, Solenoid valve 1, Automatic gearbox pressure regulating valve 1, Gearbox oil cooling valve	832
4. Data bus diagnostic interface	833
5. Selector lever, Selector lever position sender, Selector lever sensors control unit, Selected range display	834
6. Selector lever, Button for selector lever release, Parking lock button, Parking lock indicator lamp	835
069 - 48 V system , (VH2)	836-840
1. 48 V system , (VH2)	836
2. Battery, Battery monitor control unit, Battery isolation igniter	837
3. Voltage converter (48 V/12 V), Data bus diagnostic interface, Voltage converter fan	838
4. Battery, 48 V, Igniter for interrupting second battery, Terminal 40 wiring junction 2	839
5. Battery, 48 V, Roll stabiliser control unit, Roll stabiliser control unit 2, Control unit for electric compressor, Terminal 40 wiring junction, Battery fan 1	840
070 - Fuse assignment , (0K3)	841-872
1. Fuse assignment , (0K3)	841
2. Battery, Battery monitor control unit, Battery isolation igniter	842
3. Starter-alternator, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket, Radiator fan, Radiator fan 2	843
4. Blocking diode for disconnecting electrical system, Terminal 30 wiring junction 3	844
5. Terminal 15 voltage supply relay, Coupling point on left A-pillar, bottom	845
6. Main relay, Engine component current supply relay	846
7. Fuse holder C	847
8. Fuse holder C	848
9. Fuse holder B, Fuse carrier 1	849
10. Fuse holder B, Fuse carrier 1	850
11. Fuse holder B, Fuse carrier 1	851
12. Fuse holder B, Fuse carrier 1	852
13. Fuse holder B, Fuse carrier 1	853
14. Coupling point in engine compartment, left	854
15. Fuse holder B, Fuse carrier 2	855
16. Fuse holder B, Fuse carrier 3	856
17. Fuse holder B, Fuse carrier 3	857
18. Fuse holder B, Fuse carrier 4	858
19. Fuse holder B, Fuse carrier 4	859
20. Fuse holder B, Fuse carrier 4	860
21. Fuse holder B, Fuse carrier 4	861
22. Fuse holder B, Fuse carrier 5	862
23. Fuse holder B, Fuse carrier 5	863
24. Fuse holder F, Fuse carrier 1	864
25. Fuse holder F, Fuse carrier 1, Fuse carrier 2, Fuse 1 (30)	865
26. Fuse holder F, Fuse carrier 2	866
27. Fuse holder F, Fuse carrier 3	867
28. Fuse holder F, Fuse carrier 3	868
29. Fuse holder F. Fuse carrier 4	869

30. Fuse holder F, Fuse carrier 4	870
31. Fuse holder F, Fuse carrier 4, Fuse carrier 5	871
32. Heated rear window fuse, Driver seat adjustment thermal fuse 1, Fuse, Levelling system fuse, ABS control unit fuse 1	872
071 - Dynamic roll stabilisation , (1P7)	873-875
1. Dynamic roll stabilisation , (1P7)	873
2. Roll stabiliser control unit, Actuator for chassis stabilisation (front left), Actuator for chassis stabilisation (front right)	874
3. Roll stabiliser control unit 2, Actuator for chassis stabilisation (rear left)	875
072 - All-wheel drive , (GH2)	876-878
1. All-wheel drive , (GH2)	876
2. Oil pressure and oil temperature sender 2, Differential lock control unit, Data bus diagnostic interface, Clutch valve for all-wheel drive, Clutch valve 2 for all-wheel drive, All-wheel drive pump	877
3. Oil pressure and oil temperature sender, Differential lock control unit, Rear wheel steering control unit	878
073 - Emergency call module , (IW1),(IW3)	879-881
1. Emergency call module , (IW1),(IW3)	879
2. Control unit 1 for information electronics	880
3. GPS aerial, Front left microphone, Microphone unit in front roof module, Roof aerial, Emergency call module aerial, Loudspeaker for emergency call module	881
074 - Emergency call module , (IV0)	882-888
1. Emergency call module , (IV0)	882
2. Control unit 1 for information electronics, LTE aerial 1, LTE aerial 2	883
3. Data bus diagnostic interface, Control unit 1 for information electronics	884
4. Data bus diagnostic interface, Control unit 1 for information electronics, Loudspeaker for emergency call module	885
5. Data bus diagnostic interface, Front left microphone, Front right microphone, Microphone unit in front roof module	886
6. Data bus diagnostic interface, GPS aerial, Roof aerial, Emergency call module aerial	887
7. Data bus diagnostic interface, Aerial filter for GPS, Emergency call module aerial	888
075 - Heated windscreen , (4GR)	889-890
1. Heated windscreen , (4GR)	889
2. Heated windscreen control unit, Heated windscreen	890
076 - Adjustable driver and front passenger seats , (Q1A),(3L5),(4D0)	891-898
1. Adjustable driver and front passenger seats , (Q1A),(3L5),(4D0)	891
2. Onboard supply control unit, Driver seat adjustment thermal fuse 1, Fuse 2, Fuse 3, Coupling point for front left seat, Rear left footwell light	892
3. Driver seat adjustment operating unit, Driver seat rake adjustment motor	893
4. Driver seat lumbar support adjustment switch, Driver seat adjustment operating unit, Driver seat backrest adjustment motor, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	894
5. Airbag control unit, Front passenger seat adjustment thermal fuse 1, Coupling point for front right seat, Rear right footwell light	895
6. Front passenger seat adjustment operating unit, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	896
7. Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor	897
8. Front passenger seat lumbar support adjustment switch, Front passenger seat backrest adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	898
077 - Adjustable driver and front passenger seats , (Q1A),(3L4)	899-907
1. Adjustable driver and front passenger seats , (Q1A),(3L4)	899
2. Onboard supply control unit, Driver seat adjustment thermal fuse 1, Fuse 2, Fuse 3	900
3. Driver door control unit, Onboard supply control unit, Rear left footwell light	901
4. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	902
5. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor	903
6. Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	904
7. Airbag control unit, Front passenger seat adjustment thermal fuse 1, Rear right footwell light	905
8. Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor. Front passenger seat rake adjustment motor. Front passenger seat height adjustment motor	906

9. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment operating unit, Front passenger seat backrest adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	907
078 - Adjustable driver and front passenger seats , (Q1A),(3L4),(3L5)	908-917
1. Adjustable driver and front passenger seats , (Q1A),(3L4),(3L5)	908
2. Onboard supply control unit, Driver seat adjustment thermal fuse 1, Fuse 2, Fuse 3	909
3. Driver door control unit, Front passenger door control unit, Onboard supply control unit, Rear left footwell light	910
4. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	911
5. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat backrest adjustment motor	912
6. Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	913
7. Front passenger seat adjustment thermal fuse 1, Rear right footwell light	914
8. Front passenger seat lumbar support adjustment switch, Control unit for front passenger seat adjustment with memory function, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	915
9. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function, Front passenger seat backrest adjustment motor	916
10. Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	917
079 - Adjustable driver and front passenger seats , (Q1A),(3L5)	918-926
1. Adjustable driver and front passenger seats , (Q1A),(3L5)	918
2. Onboard supply control unit, Driver seat adjustment thermal fuse 1, Fuse 2, Fuse 3, Rear left footwell light	919
3. Airbag control unit, Data bus diagnostic interface	920
4. Driver seat lumbar support adjustment switch, Driver seat adjustment operating unit, Driver seat backrest adjustment motor, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	921
5. Driver seat adjustment operating unit, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	922
6. Front passenger seat adjustment thermal fuse 1, Rear right footwell light	923
7. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment operating unit, Front passenger seat backrest adjustment motor, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	924
8. Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	925
9. Front passenger seat adjustment operating unit	926
080 - Communication , (0K3),(B1P)	927-929
1. Communication , (0K3),(B1P)	927
2. Data bus diagnostic interface, Interface control unit for telematics, Coupling point 1 for high-voltage battery regulation	928
3. Telephone and telematics control unit, Interface control unit for telematics, Aerial module for telephone and telematics	929
081 - Auxiliary heater , (9M9),(9M1),(9M5)	930-932
1. Auxiliary heater , (9M9),(9M1),(9M5)	930
2. Auxiliary heater control unit, Metering pump	931
3. Auxiliary heater control unit, Heater coolant shut-off valve, Remote control receiver for auxiliary heater, Auxiliary heater aerial, Roof aerial	932
082 - Emergency call module , (IV1),(IV2),(IV4),(IV5),(IV6),(IV7),(IV8)	933-938
1. Emergency call module , (IV1),(IV2),(IV4),(IV5),(IV6),(IV7),(IV8)	933
2. Data bus diagnostic interface, Emergency call module control unit and communication unit	934
3. Emergency call module control unit and communication unit, Emergency call module aerial, Loudspeaker for emergency call module	935
4. Emergency call module control unit and communication unit, Microphone unit in front roof module	936
5. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Roof aerial, Emergency call module aerial 2	937
6. Control unit 1 for information electronics, LTE aerial 1, LTE aerial 2	938
083 - Data bus network (FlexRay bus)	939-947
1. Data bus network (FlexRay bus)	939
2. Differential lock control unit, Data bus diagnostic interface, Rear wheel steering control unit	940
3. Automatic gearbox control unit. Power steering control unit. Data bus diagnostic interface	941

4. Airbag control unit, Data bus diagnostic interface	942
5. ABS control unit, Data bus diagnostic interface, Engine/motor control unit	943
6. Data bus diagnostic interface, Diagnostic connection	944
7. Steering column electronics control unit, Data bus diagnostic interface	945
8. Data bus diagnostic interface, Running gear control unit, Front camera for driver assist systems	946
9. Power and control electronics for electric drive, Adaptive cruise control unit, Data bus diagnostic interface, Brake servo control unit, Control unit 2 for adaptive cruise control	947
084 - 4.0l diesel engine , DMVA	948-990
1. 4.0l diesel engine , DMVA	948
2. Battery, Airbag control unit, Battery monitor control unit, Power steering control unit, Battery isolation igniter	949
3. Starter, Alternator with voltage regulator, Suppression capacitor, Terminal 30 wiring junction, Jump start socket	950
4. Main relay, Fuse holder B, Fuse carrier 1	951
5. Fuse holder B, Fuse carrier 1	952
6. Starter relay 2, Fuse holder B, Relay and fuse carrier 1, Fuse carrier 1, Fuse carrier 2	953
7. Terminal 15 voltage supply relay, Fuse holder B, Fuse carrier 4, Fuse carrier 5	954
8. Glow period control unit 2, Fuse holder F, Fuse carrier 2, Terminal 40 wiring junction	955
9. Automatic glow period control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	956
10. Automatic glow period control unit, Engine/motor control unit, Glow plug 7, Glow plug 8	957
11. Engine/motor control unit, Fuse (50)	958
12. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Gearbox mounting valve 2	959
13. Charge air recirculation module, Air mass meter, Engine/motor control unit	960
14. Engine/motor control unit, Air conditioner compressor	961
15. Air mass meter 2, Pressure differential sender, Engine/motor control unit	962
16. Oil level and oil temperature sender, Exhaust gas temperature sender 2, Engine/motor control unit, Starter-alternator coolant pump	963
17. Exhaust cam actuator 1 for cylinder 3, Exhaust cam actuator 1 for cylinder 4, Radiator outlet coolant temperature sender, Engine/motor control unit, Auxiliary pump for heating	964
18. Exhaust cam actuator 1 for cylinder 6, Exhaust cam actuator 1 for cylinder 7, Engine/motor control unit, Metering pump 2	965
19. Inlet cam actuator 1 for cylinder 1, Exhaust cam actuator 1 for cylinder 1, Exhaust cam actuator 1 for cylinder 2, Exhaust cam actuator 1 for cylinder 5, Engine/motor control unit	966
20. Inlet cam actuator 1 for cylinder 2, Inlet cam actuator 1 for cylinder 3, Inlet cam actuator 1 for cylinder 4, Inlet cam actuator 1 for cylinder 5, Engine/motor control unit	967
21. Inlet cam actuator 1 for cylinder 6, Inlet cam actuator 1 for cylinder 7, Inlet cam actuator 1 for cylinder 8, Exhaust cam actuator 1 for cylinder 8, Engine/motor control unit, Injector, cylinder 1	968
22. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6, Injector, cylinder 7, Injector, cylinder 8	969
23. Map-controlled engine cooling system thermostat, Intake air temperature sender, Engine/motor control unit, Pressure reduction valve, Exhaust gas recirculation cooling bypass valve, Exhaust gas recirculation cooling bypass valve 2	970
24. Intake manifold flap control unit, Intake manifold flap control unit 2, Engine/motor control unit, Fuel pressure regulating valve	971
25. Throttle valve module, Throttle valve module 2, Engine/motor control unit, Injector for reducing agent	972
26. Fuel pressure sender, Fuel pressure sender for low pressure, Pressure sender for exhaust gas recirculation, Engine/motor control unit, Charge pressure positioner 2	973
27. Engine speed sender, Hall sender, Sender 1 for turbocharger speed, Sender 2 for turbocharger speed, Engine/motor control unit	974
28. Oil temperature sender, Oil pressure sender, Coolant temperature sender, Intake manifold pressure sender, Fuel temperature sender, Engine/motor control unit	975
29. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 1 for bank 2, Intake air temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Temperature sender for engine cover panel, Engine/motor control unit	976
30. Exhaust gas recirculation valve 1, Engine/motor control unit, Turbocharger 2 control unit	977
31. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Coolant temperature sender 3, Engine/motor control unit, Valve for oil pressure control	978
32. Engine/motor control unit, Radiator fan, Radiator fan 2	979
33. Control unit for NOx sender, Engine/motor control unit, Control unit for electric compressor, Electric compressor bypass flap valve, Electric compressor coolant pump	980
34. Starter-alternator. Control unit 2 for NOx sender. Particulate sensor. Data bus diagnostic	981

interface, Engine/motor control unit	
35. Brake pedal switch, ABS control unit, Data bus diagnostic interface, Engine/motor control unit	982
36. Automatic gearbox control unit, Engine/motor control unit, Gearbox mounting valve 1, Gearbox oil cooling valve, Terminal 40 wiring junction	983
37. Fuel delivery unit, Fuel pump control unit	984
38. Fuel delivery unit, Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit	985
39. Control unit for structure-borne sound, Engine sound generator control unit, Actuator for structure-borne sound, Actuator 1 for engine sound generator, Actuator 2 for engine sound generator	986
40. Delivery unit for reducing agent metering system, Control unit for reducing agent metering system, Heater for reducing agent line (heater circuit 2)	987
41. Delivery unit for reducing agent metering system, Control unit for reducing agent metering system	988
42. Reducing agent quality sensor, Control unit for reducing agent metering system, Power unit mounting control unit, Power unit mounting actuator 1, Power unit mounting actuator 2	989
43. Power unit mounting sender 1, Power unit mounting sender 2, Power unit mounting control unit	990
085 - 3.0l diesel engine , DHXA,DHXB	991-1019
1. 3.0l diesel engine , DHXA,DHXB	991
2. Battery, Battery monitor control unit, Battery isolation igniter	992
3. Starter, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	993
4. Main relay, Fuse holder B, Fuse carrier 1	994
5. Fuse holder B, Fuse carrier 1	995
6. Starter relay 2, Fuse holder B, Relay and fuse carrier 1, Fuse carrier 1, Fuse carrier 2	996
7. Automatic glow period control unit, Glow plug 1, Glow plug 2, Glow plug 3, Fuse holder B, Fuse holder F, Fuse carrier 2, Fuse carrier 4, Fuse carrier 5	997
8. Automatic glow period control unit, Engine/motor control unit, Glow plug 4, Glow plug 5, Glow plug 6	998
9. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Fuse (50)	999
10. Oil level and oil temperature sender, Engine/motor control unit	1000
11. Air mass meter, Charge air temperature sender after charge air cooler, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	1001
12. Exhaust gas recirculation valve 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	1002
13. Engine speed sender, Hall sender, Coolant temperature sender, Fuel temperature sender, Engine/motor control unit	1003
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	1004
15. Engine/motor control unit, Air filter bypass flap valve, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Injector for reducing agent, Coolant valve for cylinder head, Coolant circulation pump	1005
16. Throttle valve module, Exhaust gas recirculation valve 2, Oil temperature sender 2, Engine/motor control unit	1006
17. Oil pressure sender, Charge pressure sender, Engine/motor control unit, Exhaust flap control unit	1007
18. Exhaust gas recirculation temperature sensor, Water level sender, Fuel pressure sender, Fuel pressure sender for low pressure, Coolant temperature sender 2, Engine/motor control unit	1008
19. Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Pressure differential sender, Pressure differential sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit	1009
20. Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 3 for NOx sender, Engine/motor control unit	1010
21. Lambda probe 1 before catalytic converter, Particulate sensor, Data bus diagnostic interface, Engine/motor control unit	1011
22. Intake manifold flap control unit, Automatic gearbox control unit, Engine/motor control unit, Turbocharger 1	1012
23. Engine/motor control unit, Radiator fan, Radiator fan 2, Radiator blind control motor	1013
24. Brake pedal switch, ABS control unit, Engine/motor control unit	1014
25. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	1015
26. Fuel delivery unit, Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Air conditioner compressor	1016
27. Starter-alternator, Control unit for reducing agent metering system, Terminal 40 wiring junction, Starter-alternator coolant pump	1017
28. Delivery unit for reducing agent metering system. Control unit for reducing agent metering	1018

system, Heater for reducing agent line (heater circuit 2)	
29. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Control unit for reducing agent metering system	1019
086 - 3.0l diesel engine , DHXC	1020-1048
1. 3.0l diesel engine , DHXC	1020
2. Battery, Battery monitor control unit, Battery isolation igniter	1021
3. Starter, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	1022
4. Main relay, Fuse holder B, Fuse carrier 1	1023
5. Fuse holder B	1024
6. Starter relay 1, Starter relay 2, Fuse holder B, Relay and fuse carrier 1, Fuse carrier 2, Fuse carrier 4	1025
7. Automatic glow period control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6, Fuse holder B, Fuse holder F, Fuse carrier 2, Fuse carrier 5	1026
8. Automatic glow period control unit, Engine/motor control unit	1027
9. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Fuse (50)	1028
10. Oil level and oil temperature sender, Engine/motor control unit	1029
11. Air mass meter, Charge air temperature sender after charge air cooler, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	1030
12. Exhaust gas recirculation valve 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	1031
13. Engine speed sender, Hall sender, Coolant temperature sender, Fuel temperature sender, Engine/motor control unit	1032
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	1033
15. Engine/motor control unit, Air filter bypass flap valve, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Injector for reducing agent, Coolant valve for cylinder head, Coolant circulation pump	1034
16. Throttle valve module, Exhaust gas recirculation valve 2, Oil temperature sender 2, Engine/motor control unit	1035
17. Oil pressure sender, Charge pressure sender, Engine/motor control unit, Exhaust flap control unit	1036
18. Exhaust gas recirculation temperature sensor, Water level sender, Fuel pressure sender, Fuel pressure sender for low pressure, Coolant temperature sender 2, Engine/motor control unit	1037
19. Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Pressure differential sender, Pressure differential sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit	1038
20. Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 3 for NOx sender, Engine/motor control unit	1039
21. Lambda probe 1 before catalytic converter, Particulate sensor, Data bus diagnostic interface, Engine/motor control unit	1040
22. Intake manifold flap control unit, Automatic gearbox control unit, Engine/motor control unit, Turbocharger 1	1041
23. Engine/motor control unit, Radiator fan, Radiator fan 2, Radiator blind control motor	1042
24. Brake pedal switch, ABS control unit, Engine/motor control unit	1043
25. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	1044
26. Fuel delivery unit, Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Air conditioner compressor	1045
27. Starter-alternator, Control unit for reducing agent metering system, Terminal 40 wiring junction, Starter-alternator coolant pump	1046
28. Delivery unit for reducing agent metering system, Control unit for reducing agent metering system, Heater for reducing agent line (heater circuit 2)	1047
29. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Control unit for reducing agent metering system	1048
087 - 2.0l petrol engine , DFKA	1049-1074
1. 2.0l petrol engine , DFKA	1049
2. Battery, Airbag control unit, Battery monitor control unit, Battery isolation igniter, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	1050
3. Terminal 30 wiring junction 3	1051
4. Fuse holder B, Fuse carrier 1	1052
5. Engine component power supply relay, Fuse holder B, Fuse carrier 1, Fuse carrier 2	1053
6. Main relay, Terminal 15 voltage supply relay, Fuse holder B, Fuse carrier 4, Fuse carrier 5	1054
7. Engine/motor control unit	1055
8. Engine/motor control unit. Ignition coil 1 with output stage. Ignition coil 2 with output stage.	1056

Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector	
9. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Active accelerator pedal control unit	1057
10. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1058
11. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	1059
12. Coolant temperature sender, Radiator outlet coolant temperature sender, Engine/motor control unit	1060
13. Engine speed sender, Intake manifold pressure sender, Hall sender 3, Engine/motor control unit	1061
14. Charge pressure sender, Tank pressure sensor 2, Engine/motor control unit, Fuel pressure regulating valve, Actuator for engine temperature regulation	1062
15. Throttle valve module, Knock sensor 1, Engine/motor control unit, Charge pressure positioner	1063
16. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	1064
17. Cam adjustment actuator 8, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control	1065
18. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Sender 1 for secondary air pressure, Engine/motor control unit, Secondary air inlet valve, Piston cooling jet control valve	1066
19. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine/motor control unit	1067
20. Engine/motor control unit, Exhaust flap control unit, Brake servo, Solenoid valve 7	1068
21. ABS control unit, Data bus diagnostic interface, Engine/motor control unit, Air filter bypass flap valve	1069
22. Fuel tank leak detection module, Automatic gearbox control unit, Engine/motor control unit, Continued coolant circulation pump	1070
23. Fuel delivery unit, Tank breather pressure sensor 1, Fuel pump control unit, Engine/motor control unit	1071
24. Fuel delivery unit, Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Engine/motor control unit	1072
25. Secondary air pump relay, Thermal management control unit, Radiator fan, Secondary air pump motor, Radiator fan 2	1073
26. Power unit mounting sender 1, Power unit mounting sender 2, Power unit mounting control unit, Power unit mounting actuator 1, Power unit mounting actuator 2, Coupling point in engine compartment, left	1074
088 - 2.0l petrol engine , DMFA,DMFB	1075-1099
1. 2.0l petrol engine , DMFA,DMFB	1075
2. Battery, Battery monitor control unit, Battery isolation igniter	1076
3. Starter, Alternator with voltage regulator, Suppression capacitor, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	1077
4. Terminal 15 voltage supply relay, Starter relay 1, Starter relay 2	1078
5. Fuse carrier 1	1079
6. Main relay, Engine component power supply relay	1080
7. Engine/motor control unit	1081
8. Accelerator pedal module, Engine/motor control unit	1082
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 4 with output stage, Spark plug connector	1083
10. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1084
11. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	1085
12. Engine/motor control unit, Air filter bypass flap valve, Coolant circulation pump	1086
13. Engine speed sender, Coolant temperature sender, Intake manifold pressure sender, Hall sender 3, Engine/motor control unit	1087
14. Charge pressure sender, Tank breather pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve, Actuator for engine temperature regulation	1088
15. Throttle valve module, Knock sensor 1, Engine/motor control unit, Charge pressure positioner	1089
16. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	1090
17. Cam adjustment actuator 8, Fuel tank leak detection module, Engine/motor control unit	1091
18. Secondary air pump relay, Engine/motor control unit, Continued coolant circulation pump, Secondary air pump motor, Radiator blind control motor	1092
19. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve. Valve for oil pressure control. Coolant valve for	1093

gearbox	
20. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Piston cooling jet control valve	1094
21. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Sender 2 for secondary air pressure, Data bus diagnostic interface, Engine/motor control unit	1095
22. Brake pedal switch, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1096
23. Engine/motor control unit, Radiator fan, Radiator fan 2	1097
24. Fuel delivery unit, Oil level and oil temperature sender, Fuel pump control unit, Engine/motor control unit	1098
25. Fuel delivery unit, Coolant shortage indicator sender, Onboard supply control unit, Air conditioner compressor regulating valve	1099
089 - Rear Seat Entertainment (RSE) , (9WQ)	1100-1101
1. Rear Seat Entertainment (RSE) , (9WQ)	1100
2. Coupling point for front left seat, Coupling point for front right seat	1101
090 - Electromechanical steering	1102-1105
1. Electromechanical steering	1102
2. Steering moment sender, Power steering control unit, Electromechanical power steering motor	1103
3. Data bus diagnostic interface, Electromechanical power steering warning lamp	1104
4. Automatic gearbox control unit, Convenience system central control unit	1105
091 - Dash panel insert , (9S7),(9S8),(9S9)	1106-1109
1. Dash panel insert , (9S7),(9S8),(9S9)	1106
2. Control unit in dash panel insert, Data bus diagnostic interface	1107
3. Control unit in dash panel insert, Control unit 1 for information electronics	1108
4. Control unit in dash panel insert, Control unit 1 for information electronics, Control unit for night vision system, Control unit for head-up display	1109
092 - Dual tone horn	1110-1111
1. Dual tone horn	1110
2. Treble horn, Bass horn, Onboard supply control unit	1111
093 - Steering column adjustment , (2C7)	1112-1113
1. Steering column adjustment , (2C7)	1112
2. Steering column adjustment switch, Onboard supply control unit, Control unit for electrically adjustable steering column	1113
094 - Light switch	1114-1115
1. Light switch	1114
2. Rotary light switch, Onboard supply control unit	1115
095 - Window wash/wipe system , (9PF)	1116-1119
1. Window wash/wipe system , (9PF)	1116
2. Rain and light sensor, Onboard supply control unit, Rear window washer pump	1117
3. Wiper motor control unit, Onboard supply control unit, Windscreen washer pump control unit, Washer pump, Headlight washer system pump	1118
4. Convenience system central control unit, Windscreen washer pump control unit, Rear window wiper motor, Heater element 1, in driver side wiper arm, Heater element 1, in passenger side wiper arm	1119
096 - Window wash/wipe system , (9PA)	1120-1123
1. Window wash/wipe system , (9PA)	1120
2. Rain and light sensor, Onboard supply control unit, Headlight washer system pump, Rear window washer pump	1121
3. Wiper motor control unit, Onboard supply control unit, Left washer jet heater element, Right washer jet heater element, Centre washer jet heater element	1122
4. Convenience system central control unit, Onboard supply control unit, Windscreen washer pump control unit, Washer pump, Rear window wiper motor	1123
097 - TV tuner , (Q0A),(Q0B),(QU1),(QV1)	1124-1127
1. TV tuner , (Q0A),(Q0B),(QU1),(QV1)	1124
2. Digital sound package control unit, TV tuner	1125
3. Aerial amplifier, TV aerial 1, TV aerial 2, TV tuner, Aerial amplifier 2	1126
4. TV tuner, Aerial amplifier 3 for TV, TV card reader	1127
098 - Rear seat, row 3 , (5KL)	1128-1134
1. Rear seat, row 3 , (5KL)	1128
2. Data bus diagnostic interface, Control unit for seat adjustment, row 3	1129
3. Left backrest adjustment button for seat, row 3, Left backrest adjustment button 2 for seat row 3, Control unit for seat adjustment, row 3, Left backrest adjustment warning lamp 1 for seat row 3	1130
4. Left backrest adjustment button 3 for seat row 3, Control unit for seat adjustment, row 3, Left backrest adjustment warning lamp 3 for seat row 3	1131
5. Backrest adjustment limit switch for left seat in row 3 (locked). Backrest adjustment limit	1132

switch 2 for left seat in row 3 (locked), Backrest adjustment sender for left seat in row 3, Control unit for seat adjustment, row 3, Backrest adjustment motor for left seat, row 3	
6. Locking pawl motor for left backrest adjustment, row 3, Locking pawl motor for right backrest adjustment, row 3, Locking pawl motor 2 for left backrest adjustment, row 3, Locking pawl motor 2 for right backrest adjustment, row 3, Control unit for seat adjustment, row 3	1133
7. Backrest adjustment limit switch for right seat in row 3 (locked), Backrest adjustment limit switch for right seat in row 3 (unlocked), Backrest adjustment limit switch 2 for right seat in row 3 (unlocked), Control unit for seat adjustment, row 3, Backrest adjustment motor for right seat, row 3	1134
099 - Infotainment MOST bus	1135-1137
1. Infotainment MOST bus	1135
2. Connection (diagnosis), in interior wiring harness	1136
3. Connection 1 (diagnosis), in main wiring harness	1137
100 - Steering wheel	1138-1143
1. Steering wheel	1138
2. Cruise control system switch, Steering angle sender, Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Fuse holder C	1139
3. Horn plate, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	1140
4. Windscreen wiper switch, Turn signal switch, Intermittent wiper switch, Multifunction steering wheel control unit, Steering column electronics control unit	1141
5. Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Tiptronic switch (shift down), Steering wheel heater button, Multifunction steering wheel control unit	1142
6. Tiptronic switch (shift up), Multifunction steering wheel control unit	1143
101 - Front camera for driver assist systems , (QK1)	1144-1147
1. Front camera for driver assist systems , (QK1)	1144
2. Driver assist systems control unit, Front camera for driver assist systems, Windscreen heater for front sensors	1145
3. Running gear control unit, Control unit 1 for information electronics, Driver assist systems control unit	1146
4. Data bus diagnostic interface, Running gear control unit	1147
102 - Brake system	1148-1159
1. Brake system	1148
2. ABS control unit, Engine/motor control unit, Relay and fuse carrier 2, ABS control unit fuse 2	1149
3. Vacuum sender, ABS control unit, Convenience system central control unit, Left parking brake motor, Right parking brake motor	1150
4. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit, Connection 7 (speed sensor), in main wiring harness	1151
5. Roof carrier detection sensor, ABS control unit	1152
6. Parking brake button, Centre switch module in dash panel, ABS control unit	1153
7. ABS control unit, Adaptive cruise control unit, Data bus diagnostic interface	1154
8. Brake fluid level warning contact, Onboard supply control unit	1155
9. Front left brake pad wear sender, Front right brake pad wear sender, Rear left brake pad wear sender, Rear right brake pad wear sender	1156
10. Brake servo control unit, Brake servo, Fuse holder F, Fuse carrier 4, Terminal 30 wiring junction 3	1157
11. Brake servo	1158
12. Brake pedal switch, Control unit for brake pressure accumulator, Brake servo, Brake system pressure accumulator, Motor in brake pressure accumulator for energy recovery	1159
103 - Assist systems , (JX1)	1160-1161
1. Assist systems , (JX1)	1160
2. Data bus diagnostic interface, Front left radar sensor control unit for object detection, Front right radar sensor control unit for object detection, Driver assist systems control unit, Earth connection 11, in main wiring harness	1161
104 - Centre console switches	1162-1164
1. Centre console switches	1162
2. Centre switch module in dash panel, Operating unit 1 for driver and convenience functions, Onboard supply control unit	1163
3. Centre switch module in dash panel, Switch module 1 in centre console, Driver assist systems control unit	1164
105 - Adaptive cruise control , (8T3),(8T8)	1165-1167
1. Adaptive cruise control , (8T3),(8T8)	1165
2. Adaptive cruise control unit, Control unit for laser distance control	1166
3. ABS control unit, Adaptive cruise control unit, Heater element for adaptive cruise control radar sensor	1167

106 - Sound system , (9VD)	1168-1171
1. Sound system , (9VD)	1168
2. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Centre loudspeaker	1169
3. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker, Subwoofer	1170
4. Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	1171
107 - Sound system , (9VS)	1172-1177
1. Sound system , (9VS)	1172
2. Digital sound package control unit, Front left loudspeaker, Internal microphone, Microphone unit in front roof module, Centre loudspeaker, Centre loudspeaker 2	1173
3. Digital sound package control unit, Front left door loudspeaker, Front right loudspeaker, Front left treble loudspeaker	1174
4. Digital sound package control unit, Front right door loudspeaker, Rear left treble loudspeaker, Rear left bass loudspeaker, Front right treble loudspeaker	1175
5. Digital sound package control unit, Rear right treble loudspeaker, Rear right bass loudspeaker, Subwoofer	1176
6. Digital sound package control unit, Left effect loudspeaker, Right effect loudspeaker, Front left treble loudspeaker 2, Front right treble loudspeaker 2	1177
108 - Head-up display , (KS1)	1178-1180
1. Head-up display , (KS1)	1178
2. Data bus diagnostic interface, Control unit for head-up display	1179
3. Control unit in dash panel insert, Control unit 1 for information electronics, Control unit for head-up display	1180
109 - Electromechanical rear wheel steering , (0N5)	1181-1183
1. Electromechanical rear wheel steering , (0N5)	1181
2. Rack position sender, Data bus diagnostic interface, Rear wheel steering control unit	1182
3. Data bus diagnostic interface, Rear wheel steering control unit	1183
110 - Lane change assist , (7Y1)	1184-1188
1. Lane change assist , (7Y1)	1184
2. Lane change assist control unit	1185
3. Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2	1186
4. Data bus diagnostic interface, Lane change assist control unit 2	1187
5. Driver door control unit, Front passenger door control unit, Lane change assist warning lamp in driver side exterior mirror, Lane change assist warning lamp in passenger side exterior mirror	1188
111 - Airbag systems for LHD vehicles , (4UE),(4UF),(L0L)	1189-1202
1. Airbag systems for LHD vehicles , (4UE),(4UF),(L0L)	1189
2. Airbag control unit, Battery monitor control unit, Steering column electronics control unit, Airbag igniter on driver side, Battery isolation igniter, Diagnostic connection	1190
3. Airbag control unit, Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2, Coupling point in luggage compartment, left	1191
4. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Convenience system central control unit, Onboard supply control unit, Front passenger airbag unit, Front roof module	1192
5. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	1193
6. Battery, 48 V, Storage capacitor for 48 V electrical system, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	1194
7. Front passenger side belt switch, Seat occupied sensor on front passenger side, Driver side seat position sensor, Front passenger side seat position sensor, Airbag control unit	1195
8. Left backrest contact switch, Right backrest contact switch, Belt switch for seat row 2, driver side, Belt switch for seat row 2, centre, Belt switch for seat row 2, passenger side, Airbag control unit	1196
9. Hybrid battery unit, Belt switch for seat row 3, driver side, Belt switch for seat row 3, passenger side, Airbag control unit, Rear belt tensioner igniter on passenger side, Coupling point 1 for high-voltage battery regulation	1197
10. Airbag control unit, Front left seat belt	1198
11. Airbag control unit, Front right seat belt	1199
12. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit, Igniter for driver side seat belt tensioner, seat row 3, Igniter for passenger side seat belt tensioner, seat row 3	1200
13. Front pressure hose sensor for pedestrian protection, Airbag control unit	1201
14. Crash sensor for power and control electronics. Crash sensor 2 for power and control electronics.	1202

Airbag control unit, Fuse holder F	
112 - Entry and start authorisation , (2F0)	1203-1208
1. Entry and start authorisation , (2F0)	1203
2. Convenience system central control unit, Front aerial for entry and start authorisation	1204
3. Entry and start authorisation button, Convenience system central control unit, Onboard supply control unit, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system	1205
4. Contact sensor for rear left exterior door handle, Contact sensor for rear right exterior door handle, Convenience system central control unit, Left aerial for entry and start authorisation, Right aerial for entry and start authorisation	1206
5. Contact sensor for front left exterior door handle, Contact sensor for front right exterior door handle, Convenience system central control unit	1207
6. Data bus diagnostic interface, Control unit for electronic steering column lock	1208
113 - Parking aid (PDC) , (7X1),(7X2)	1209-1213
1. Parking aid (PDC) , (7X1),(7X2)	1209
2. Onboard supply control unit	1210
3. Switch module 1 in centre console, Front parking aid warning buzzer, Onboard supply control unit	1211
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Onboard supply control unit	1212
5. Rear left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Onboard supply control unit	1213
114 - Parking aid (PDC) , (7X5),(9X9)	1214-1219
1. Parking aid (PDC) , (7X5),(9X9)	1214
2. Onboard supply control unit	1215
3. Switch module 1 in centre console, Front parking aid warning buzzer, Onboard supply control unit	1216
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Onboard supply control unit	1217
5. Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Rear left park assist steering sender, Rear right park assist steering sender, Onboard supply control unit	1218
6. Rear left parking aid sender, Rear centre right parking aid sender, Onboard supply control unit	1219
115 - Parking aid (PDC) , (KA6)	1220-1224
1. Parking aid (PDC) , (KA6)	1220
2. Front parking aid warning buzzer, Driver assist systems control unit	1221
3. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Driver assist systems control unit	1222
4. Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Rear left park assist steering sender, Rear right park assist steering sender, Driver assist systems control unit	1223
5. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Driver assist systems control unit	1224
116 - Entry and start authorisation , (2F1)	1225-1232
1. Entry and start authorisation , (2F1)	1225
2. Convenience system central control unit	1226
3. Entry and start authorisation button, Convenience system central control unit, Onboard supply control unit, Near field communication control unit 2	1227
4. Convenience system central control unit, Charging unit 1 for mobile devices, Near field communication control unit 2, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Near field communication aerial 2, Front aerial for entry and start authorisation	1228
5. Convenience system central control unit, Near field communication control unit	1229
6. Contact sensor for front right exterior door handle, Convenience system central control unit	1230
7. Contact sensor for rear left exterior door handle, Contact sensor for rear right exterior door handle, Convenience system central control unit, Left aerial for entry and start authorisation, Right aerial for entry and start authorisation	1231
8. Data bus diagnostic interface, Control unit for electronic steering column lock	1232
117 - CD changer , (7D5)	1233-1235
1. CD changer , (7D5)	1233
2. Onboard supply control unit, Control unit 1 for information electronics, DVD player	1234
3. Control unit in dash panel insert, Control unit 1 for information electronics	1235
118 - Sound system , (8RF)	1236-1242
1. Sound system , (8RF)	1236
2. Digital sound package control unit, Front left treble loudspeaker, Centre loudspeaker, Centre loudspeaker 2, Fuse 1 (30), Control motor for front left treble speaker	1237
3. Digital sound package control unit, Front right treble loudspeaker, Microphone unit in front roof module. Control motor for front right treble speaker	1238

4. Digital sound package control unit, Front left door loudspeaker, Front right door loudspeaker	1239
5. Digital sound package control unit, Rear left door loudspeaker, Rear right door loudspeaker	1240
6. Digital sound package control unit, Rear left treble loudspeaker, Rear right treble loudspeaker, Front left treble loudspeaker 2, Front right treble loudspeaker 2, Front left mid-range loudspeaker 2, Front right mid-range loudspeaker 2	1241
7. Digital sound package control unit, Rear left loudspeaker, Rear right loudspeaker, Left effect loudspeaker, Subwoofer, Rear right treble loudspeaker 2	1242
119 - Emergency call module , (IV1),(IV2),(IV4),(IV5),(IV6),(IV7),(IV8)	1243-1247
1. Emergency call module , (IV1),(IV2),(IV4),(IV5),(IV6),(IV7),(IV8)	1243
2. Data bus diagnostic interface, Emergency call module control unit and communication unit	1244
3. Emergency call module control unit and communication unit, Microphone unit in front roof module, Loudspeaker for emergency call module	1245
4. Emergency call module control unit and communication unit, Microphone unit in front roof module, Roof aerial, Emergency call module aerial, Emergency call module aerial 2	1246
5. Control unit 1 for information electronics, Emergency call module control unit and communication unit, LTE aerial 1, LTE aerial 2	1247
120 - Emergency call module , (IV0)	1248-1255
1. Emergency call module , (IV0)	1248
2. Airbag control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder B	1249
3. Data bus diagnostic interface, Control unit 1 for information electronics, Loudspeaker for emergency call module	1250
4. Data bus diagnostic interface, Control unit 1 for information electronics	1251
5. Data bus diagnostic interface, Control unit 1 for information electronics	1252
6. Data bus diagnostic interface, Microphone unit in front roof module, LTE aerial 2	1253
7. Data bus diagnostic interface, Microphone unit in front roof module, Roof aerial	1254
8. Data bus diagnostic interface, Aerial filter for GPS, Roof aerial, Emergency call module aerial	1255
121 - Mobile telephone systems , (9ZE),(9ZV),(9ZX)	1256-1261
1. Mobile telephone systems , (9ZE),(9ZV),(9ZX)	1256
2. Control unit 1 for information electronics, Microphone unit in front roof module	1257
3. Control unit 1 for information electronics, Charging unit 1 for mobile devices, Near field communication control unit 2, Microphone unit in front roof module	1258
4. Aerial amplifier for mobile telephone	1259
5. Aerial amplifier for mobile telephone, LTE aerial 3	1260
6. Roof aerial	1261
122 - Overhead view camera , (KA6)	1262-1265
1. Overhead view camera , (KA6)	1262
2. Switch module 1 in centre console, Onboard supply control unit, Driver assist systems control unit	1263
3. Driver assist systems control unit, Front overhead view camera, Driver side exterior mirror, Passenger side exterior mirror	1264
4. Control unit 1 for information electronics, Driver assist systems control unit, Roof aerial, Rear overhead view camera	1265
123 - Reversing camera (Rear Assist) , (KA2)	1266-1267
1. Reversing camera (Rear Assist) , (KA2)	1266
2. Reversing camera system control unit, Reversing camera	1267
124 - Air conditioning system , (KH5)	1268-1280
1. Air conditioning system , (KH5)	1268
2. High-pressure sender, Fresh air blower control unit, Onboard supply control unit	1269
3. Potentiometer in left centre dash panel vent, Potentiometer in left side vent, Onboard supply control unit	1270
4. Dash panel temperature sensor, Air quality sensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Onboard supply control unit	1271
5. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Onboard supply control unit, Air recirculation flap control motor, Fresh air flap control motor	1272
6. Onboard supply control unit, Defroster flap control motor, Right centre vent control motor, Right temperature flap control motor, Rear air distribution flap control motor	1273
7. Onboard supply control unit, Defroster flap control motor, Left centre vent control motor, Rear temperature flap control motor, Left temperature flap control motor	1274
8. Rear fresh air blower control unit, Onboard supply control unit, Rear fresh air blower	1275
9. Onboard supply control unit, Right B-pillar and footwell shut-off flap control motor, Left B-pillar and footwell shut-off flap control motor, Rear right chest vent control motor	1276
10. Rear chest vent temperature sensor, Onboard supply control unit, Rear left vent illumination bulb, Rear right vent illumination bulb, Rear left chest vent control motor	1277
11. Onboard supply control unit, Data bus diagnostic interface, Central rear vent illumination bulb, Coolant shut-off valve	1278

12. Operating and display unit for rear air conditioning system, Auxiliary air heater control unit	1279
13. Operating and display unit for rear air conditioning system, Coupling point for rear left seat	1280
125 - Air conditioning system , (9AD)	1281-1289
1. Air conditioning system , (9AD)	1281
2. High-pressure sender, Fresh air blower control unit, Onboard supply control unit	1282
3. Potentiometer in left centre dash panel vent, Potentiometer in left side vent, Onboard supply control unit	1283
4. Dash panel temperature sensor, Air quality sensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Onboard supply control unit	1284
5. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Onboard supply control unit, Air recirculation flap control motor, Fresh air flap control motor	1285
6. Onboard supply control unit, Defroster flap control motor, Right centre vent control motor, Right temperature flap control motor, Rear air distribution flap control motor	1286
7. Onboard supply control unit, Defroster flap control motor, Left centre vent control motor, Rear temperature flap control motor, Left temperature flap control motor	1287
8. Onboard supply control unit, Central rear vent illumination bulb, Coolant shut-off valve	1288
9. Onboard supply control unit, Data bus diagnostic interface, Auxiliary air heater control unit	1289
126 - Air conditioning system , (9AQ)	1290-1307
1. Air conditioning system , (9AQ)	1290
2. Fresh air blower control unit, Onboard supply control unit	1291
3. Function unit for fragrance diffuser system, Onboard supply control unit, Ioniser control unit, Control unit for fragrance diffuser system	1292
4. High-pressure sender, External air quality and air humidity sensor, Onboard supply control unit	1293
5. Dash panel temperature sensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Onboard supply control unit	1294
6. Potentiometer in left centre dash panel vent, Potentiometer in left side vent, Onboard supply control unit	1295
7. Potentiometer in rear left chest vent, Onboard supply control unit	1296
8. Rear fresh air blower control unit, Onboard supply control unit, Rear left vent illumination bulb, Rear right vent illumination bulb	1297
9. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Onboard supply control unit, Coolant shut-off valve	1298
10. Onboard supply control unit, Air recirculation flap control motor, Right temperature flap control motor, Fresh air flap control motor, Rear air quantity control motor	1299
11. Onboard supply control unit, Defroster flap control motor, Right centre vent control motor, Right side vent control motor, Control motor for right footwell temperature flap, Rear air quantity control motor	1300
12. Onboard supply control unit, Defroster flap control motor, Left centre vent control motor, Left temperature flap control motor, Left side vent control motor	1301
13. Onboard supply control unit, Rear temperature flap control motor, Left side vent control motor, Control motor for left footwell temperature flap	1302
14. Onboard supply control unit, Right B-pillar and footwell shut-off flap control motor, Left B-pillar and footwell shut-off flap control motor, Rear right temperature flap control motor, Rear right chest vent control motor	1303
15. Onboard supply control unit, Left B-pillar and footwell shut-off flap control motor, Rear left temperature flap control motor, Rear left chest vent control motor, Rear air recirculation flap control motor	1304
16. Rear left chest vent temperature sender, Rear right chest vent temperature sender, Vent temperature sender for rear left footwell, Vent temperature sender for rear right footwell, Onboard supply control unit	1305
17. Operating and display unit for rear air conditioning system, Auxiliary air heater control unit, Wiring junction	1306
18. Operating and display unit for rear air conditioning system	1307
127 - Air conditioning system , (9AE)	1308-1324
1. Air conditioning system , (9AE)	1308
2. Fresh air blower control unit, Onboard supply control unit	1309
3. Function unit for fragrance diffuser system, Onboard supply control unit, Ioniser control unit, Control unit for fragrance diffuser system	1310
4. High-pressure sender, External air quality and air humidity sensor, Onboard supply control unit	1311
5. Dash panel temperature sensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Onboard supply control unit	1312
6. Potentiometer in left centre dash panel vent, Potentiometer in left side vent, Onboard supply control unit	1313
7. Potentiometer in rear left chest vent, Onboard supply control unit	1314
8. Rear fresh air blower control unit. Onboard supply control unit. Rear left vent illumination bulb.	1315

	Rear right vent illumination bulb	
	9. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Onboard supply control unit, Air recirculation flap control motor, Fresh air flap control motor	1316
	10. Onboard supply control unit, Right footwell flap control motor, Right temperature flap control motor, Right side vent control motor, Rear air distribution flap control motor	1317
	11. Onboard supply control unit, Defroster flap control motor, Left centre vent control motor, Right centre vent control motor, Right side vent control motor, Control motor for right footwell temperature flap	1318
	12. Onboard supply control unit, Left centre vent control motor, Rear temperature flap control motor, Left temperature flap control motor, Left side vent control motor	1319
	13. Onboard supply control unit, Left footwell flap control motor, Rear temperature flap control motor, Control motor for left footwell temperature flap	1320
	14. Vent temperature sender for rear left footwell, Vent temperature sender for rear right footwell, Onboard supply control unit, Coolant shut-off valve, Rear left chest vent control motor	1321
	15. Right B-pillar and footwell shut-off flap control motor, Left B-pillar and footwell shut-off flap control motor, Rear right chest vent control motor	1322
	16. Operating and display unit for rear air conditioning system, Auxiliary air heater control unit, Wiring junction	1323
	17. Operating and display unit for rear air conditioning system	1324
128 -	Air conditioning system , (9AU)	1325-1342
	1. Air conditioning system , (9AU)	1325
	2. Fresh air blower control unit, Onboard supply control unit	1326
	3. Function unit for fragrance diffuser system, Onboard supply control unit, Ioniser control unit, Control unit for fragrance diffuser system	1327
	4. Air quality sensor, Onboard supply control unit	1328
	5. Dash panel temperature sensor, Front left chest vent temperature sensor, Front right chest vent temperature sensor, Onboard supply control unit	1329
	6. Potentiometer in left centre dash panel vent, Potentiometer in left side vent, Onboard supply control unit	1330
	7. Potentiometer in rear left chest vent, Onboard supply control unit	1331
	8. Rear fresh air blower control unit, Onboard supply control unit, Rear left vent illumination bulb, Rear right vent illumination bulb	1332
	9. Left footwell vent temperature sender, Right footwell vent temperature sender, Evaporator output temperature sender, Onboard supply control unit, Auxiliary air heater control unit	1333
	10. Onboard supply control unit, Air recirculation flap control motor, Right temperature flap control motor, Fresh air flap control motor, Rear air quantity control motor	1334
	11. Onboard supply control unit, Defroster flap control motor, Right centre vent control motor, Right side vent control motor, Control motor for right footwell temperature flap, Rear air quantity control motor	1335
	12. Onboard supply control unit, Defroster flap control motor, Left centre vent control motor, Left temperature flap control motor, Left side vent control motor	1336
	13. Onboard supply control unit, Rear temperature flap control motor, Left side vent control motor, Control motor for left footwell temperature flap	1337
	14. Rear chest vent temperature sensor, Onboard supply control unit, Left B-pillar and footwell shut-off flap control motor, Rear left chest vent control motor	1338
	15. Right B-pillar and footwell shut-off flap control motor, Rear right chest vent control motor	1339
	16. Operating and display unit for rear air conditioning system, Wiring junction	1340
	17. Operating and display unit for rear air conditioning system	1341
	18. Convenience system central control unit, Remote-controlled air conditioning relay	1342
129 -	Airbag systems for RHD vehicles , (L0R)	1343-1356
	1. Airbag systems for RHD vehicles , (L0R)	1343
	2. Airbag control unit, Battery monitor control unit, Steering column electronics control unit, Airbag igniter on driver side, Battery isolation igniter, Diagnostic connection	1344
	3. Airbag control unit, Data bus diagnostic interface, Lane change assist control unit, Coupling point in luggage compartment, left	1345
	4. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Convenience system central control unit, Onboard supply control unit, Front passenger airbag unit, Front roof module	1346
	5. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	1347
	6. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	1348
	7. Front passenger side belt switch, Seat occupied sensor on front passenger side, Driver side seat position sensor, Front passenger side seat position sensor, Airbag control unit	1349
	8. Left backrest contact switch. Right backrest contact switch. Belt switch for seat row 2. driver	1350

side, Belt switch for seat row 2, centre, Belt switch for seat row 2, passenger side, Airbag control unit	
9. Battery, 48 V, Belt switch for seat row 3, driver side, Belt switch for seat row 3, passenger side, Airbag control unit	1351
10. Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit, Front right seat belt	1352
11. Airbag control unit, Front left seat belt	1353
12. Front pressure hose sensor for pedestrian protection, Airbag control unit	1354
13. Hybrid battery unit, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Airbag control unit	1355
14. Crash sensor for power and control electronics, Crash sensor 2 for power and control electronics, Airbag control unit	1356
130 - Airbag systems (US equipment) , (4UB)	1357-1371
1. Airbag systems (US equipment) , (4UB)	1357
2. Airbag control unit, Battery monitor control unit, Steering column electronics control unit, Airbag igniter on driver side, Battery isolation igniter, Diagnostic connection	1358
3. Airbag control unit, Data bus diagnostic interface, Lane change assist control unit, Coupling point in luggage compartment, left	1359
4. Battery, 48 V, Storage capacitor for 48 V electrical system, Airbag control unit, Convenience system central control unit, Onboard supply control unit, Front passenger airbag unit, Front roof module	1360
5. Front airbag crash sensor for driver side, Front airbag crash sensor for front passenger side, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	1361
6. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	1362
7. Front passenger side belt switch, Seat occupied sensor on front passenger side, Driver side seat position sensor, Front passenger side seat position sensor, Airbag control unit	1363
8. Seat occupied sensor on front passenger side, Airbag control unit, Seat occupied recognition control unit, Heater element with seat occupied recognition, front passenger side	1364
9. Left backrest contact switch, Right backrest contact switch, Belt switch for seat row 2, driver side, Belt switch for seat row 2, centre, Belt switch for seat row 2, passenger side, Airbag control unit	1365
10. Belt switch for seat row 3, driver side, Belt switch for seat row 3, passenger side, Airbag control unit	1366
11. Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit, Front left seat belt	1367
12. Airbag control unit, Front right seat belt	1368
13. Front pressure hose sensor for pedestrian protection, Centre crash sensor for pedestrian protection, Airbag control unit	1369
14. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for power and control electronics, Crash sensor 2 for power and control electronics, Airbag control unit	1370
15. Hybrid battery unit, Airbag control unit, Coupling point 1 for high-voltage battery regulation	1371
131 - Data bus network (FlexRay bus)	1372-1384
1. Data bus network (FlexRay bus)	1372
2. Differential lock control unit, Data bus diagnostic interface, Rear wheel steering control unit	1373
3. Automatic gearbox control unit, Data bus diagnostic interface, Rear wheel steering control unit	1374
4. Airbag control unit, Power steering control unit, Data bus diagnostic interface	1375
5. Data bus diagnostic interface, Front left radar sensor control unit for object detection, Front right radar sensor control unit for object detection	1376
6. Adaptive cruise control unit, Data bus diagnostic interface, Control unit for laser distance control	1377
7. Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2	1378
8. Data bus diagnostic interface, Engine/motor control unit	1379
9. Power and control electronics for electric drive, ABS control unit, Data bus diagnostic interface, Engine/motor control unit, Driver assist systems control unit	1380
10. Data bus diagnostic interface, Driver assist systems control unit	1381
11. Steering column electronics control unit, Data bus diagnostic interface, Driver assist systems control unit	1382
12. Running gear control unit	1383
13. Brake servo	1384
132 - 12 V sockets	1385-1388
1. 12 V sockets	1385
2. Onboard supply control unit, Cigarette lighter, 12 V socket	1386
3. 12 V socket 2, 12 V socket 3	1387
4. 12 V socket 4	1388

133 - Tail light clusters , (8VP),(AV0),(AV1),(AV4)	1389-1391
1. Tail light clusters , (8VP),(AV0),(AV1),(AV4)	1389
2. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	1390
3. Convenience system central control unit, Left tail light cluster, Right tail light cluster	1391
134 - Tail light clusters , (8VM),(AV0),(AV1),(AV4)	1392-1394
1. Tail light clusters , (8VM),(AV0),(AV1),(AV4)	1392
2. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	1393
3. Convenience system central control unit, Left tail light cluster, Right tail light cluster	1394
135 - Tail light clusters , (8VG),(AV0),(AV1),(AV4)	1395-1397
1. Tail light clusters , (8VG),(AV0),(AV1),(AV4)	1395
2. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	1396
3. Convenience system central control unit, Left tail light cluster, Right tail light cluster	1397
136 - Tail light clusters , (8VP),(AV2)	1398-1401
1. Tail light clusters , (8VP),(AV2)	1398
2. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	1399
3. Convenience system central control unit, Left tail light cluster	1400
4. Convenience system central control unit, Right tail light cluster	1401
137 - Tail light clusters , (8VM),(AV2)	1402-1405
1. Tail light clusters , (8VM),(AV2)	1402
2. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	1403
3. Convenience system central control unit, Left tail light cluster	1404
4. Convenience system central control unit, Right tail light cluster	1405
138 - Headlights , (8EX)	1406-1409
1. Headlights , (8EX)	1406
2. Rear left vehicle level sender, Convenience system central control unit, Onboard supply control unit, Fuse holder B, Fuse carrier 3	1407
3. Output module 1 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Front left side marker bulb, Left headlight range control motor	1408
4. Output module 1 for right LED headlight, Onboard supply control unit, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Front right side marker bulb, Elevated side light, front right, Right all-weather light bulb, Right headlight range control motor	1409
139 - Headlights , (8IY)	1410-1414
1. Headlights , (8IY)	1410
2. Onboard supply control unit, Fuse holder B, Fuse carrier 3	1411
3. Output module 1 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Front left side marker bulb, Left headlight range control motor	1412
4. Output module 1 for right LED headlight, Onboard supply control unit, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Front right side marker bulb, Right headlight range control motor	1413
5. Rear left vehicle level sender, Front left vehicle level sender, Convenience system central control unit, Driver assist systems control unit	1414
140 - Headlights , (8IZ)	1415-1419
1. Headlights , (8IZ)	1415
2. Onboard supply control unit, Fuse holder B, Fuse carrier 2, Fuse carrier 3	1416
3. Output module 1 for left LED headlight, Onboard supply control unit, Left LED module for daytime running light and side light, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Front left side marker bulb, Left additional main beam bulb, Left headlight range control motor, Left headlight fan	1417
4. Output module 1 for right LED headlight, Onboard supply control unit, Right LED module for daytime running light and side light, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Front right side marker bulb, Right additional main beam bulb, Right headlight range control motor, Right headlight fan	1418
5. Rear left vehicle level sender, Front left vehicle level sender, Convenience system central control unit, Driver assist systems control unit	1419
141 - Data bus network	1420-1450
1. Data bus network	1420
2. Alternator with voltage regulator, Battery monitor control unit, Data bus diagnostic interface, Fuse holder B, Fuse carrier 4, Fuse carrier 5	1421
3. Data bus diagnostic interface, Diagnostic connection	1422
4. Data bus diagnostic interface. Engine/motor control unit	1423

5. Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 3 for NOx sender, Particulate sensor, Data bus diagnostic interface, Engine/motor control unit, Control unit for electric compressor	1424
6. Starter-alternator, Accelerator pedal module, Automatic glow period control unit, Data bus diagnostic interface, Clutch actuator	1425
7. Interior mirror, Auxiliary heater control unit, Data bus diagnostic interface, Control unit for night vision system, Control unit for structure-borne sound, Control unit for reducing agent metering system, Remote control receiver for auxiliary heater	1426
8. Tyre Pressure Monitoring System control unit, Data bus diagnostic interface, Reversing camera system control unit, Power unit mounting control unit, Engine sound generator control unit	1427
9. Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2, Control unit 1 for information electronics, Rear lid power opening control unit, Roof aerial	1428
10. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Display unit 2 for front information display and operating unit control unit	1429
11. Control unit in dash panel insert, Trailer detector control unit, Data bus diagnostic interface, Rear lid control unit, Control unit for head-up display	1430
12. Front passenger door control unit, Data bus diagnostic interface, Control unit for seat adjustment, row 3	1431
13. Control unit for front passenger seat adjustment with memory function, Data bus diagnostic interface, Front right seat backrest fan 1, Front right seat cushion fan 1	1432
14. Sliding sunroof adjustment control unit, Driver door control unit, Data bus diagnostic interface, Near field communication control unit	1433
15. High-pressure sender, Control unit for seat and steering column adjustment with memory function, Data bus diagnostic interface, Control unit for electronic steering column lock, Front left seat backrest fan 1, Front left seat cushion fan 1	1434
16. Battery, 48 V, Voltage converter (48 V/12 V), Storage capacitor for 48 V electrical system, Data bus diagnostic interface	1435
17. Telephone and telematics control unit, Data bus diagnostic interface, Control unit for high-voltage battery charging unit, Interface control unit for telematics	1436
18. Hybrid battery unit, Power and control electronics for electric drive, Data bus diagnostic interface, Battery regulation control unit, Coupling point on high-voltage battery	1437
19. Refrigerant pressure and temperature sender, Refrigerant pressure and temperature sender 2, Data bus diagnostic interface, High-voltage heater (PTC) control unit, Thermal management control unit, Refrigerant expansion valve 1	1438
20. Steering column electronics control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Refrigerant shut-off valve 2, Refrigerant shut-off valve 3, Refrigerant shut-off valve 4, Refrigerant shut-off valve 5	1439
21. Onboard supply control unit, Data bus diagnostic interface, Driver assist systems control unit, Front left headlight	1440
22. Rain and light sensor, Wiper motor control unit, Onboard supply control unit, Garage door operation control unit, Windscreen washer pump control unit, Front right headlight, Front roof module	1441
23. Operating and display unit for rear air conditioning system, Onboard supply control unit	1442
24. Rotary light switch, Air quality sensor, External air quality and air humidity sensor, Rear fresh air blower control unit, Onboard supply control unit, Control unit for electrically adjustable steering column	1443
25. Air conditioner sensor for fine particle concentration, Fresh air blower control unit, Onboard supply control unit, Ioniser control unit, Control unit for fragrance diffuser system, Coupling point for front heater and air conditioning system	1444
26. Onboard supply control unit, Light 1 for dash panel background lighting, Light 2 for dash panel background lighting, Light 3 for dash panel background lighting, Background lighting for emblem in dash panel, passenger side	1445
27. Convenience system central control unit, Near field communication control unit 2, Left tail light cluster 2, Right tail light cluster 2	1446
28. Anti-theft alarm sensor, Alarm horn, Airbag control unit, Convenience system central control unit, Heated windscreen control unit, Front left seat belt, Front right seat belt	1447
29. Centre switch module in dash panel, Switch module 1 in centre console, Driver side volume regulator, Running gear control unit, Roll stabiliser control unit, Roll stabiliser control unit 2, Adaptive suspension compressor motor	1448
30. Selector lever, Rear driver side door control unit, Rear passenger side door control unit, Charging unit 1 for mobile devices, Light 2 for front centre console background lighting, Light 3 for front centre console background lighting	1449
31. Brake servo, Brake system pressure accumulator, Radiator blind control motor	1450
142 - Convenience system	1451-1457
1. Convenience system	1451

2. Onboard supply control unit	1452
3. Bonnet contact switch, Bonnet contact switch 2, Onboard supply control unit, Data bus diagnostic interface	1453
4. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Windscreen washer fluid level sender, Onboard supply control unit	1454
5. Convenience system central control unit	1455
6. Convenience system central control unit, High-level brake light bulb, Left number plate light, Right number plate light	1456
7. Convenience system central control unit, Tank filler flap locking motor	1457
143 - Automatic gearbox , (FM0)	1458-1465
1. Automatic gearbox , (FM0)	1458
2. Gearbox input speed sender, Parking lock sender, Automatic gearbox control unit, Gearbox oil cooling valve	1459
3. Gearbox oil temperature sender, Temperature sender in control unit, Automatic gearbox control unit, Solenoid valve 1, Automatic gearbox pressure regulating valve 1	1460
4. Automatic gearbox control unit	1461
5. Automatic gearbox control unit	1462
6. Selector lever, Selector lever sensors control unit	1463
7. Selector lever, Selector lever position sender, Selector lever position display	1464
8. Selector lever, Button for selector lever release, Parking lock button, Parking lock indicator lamp	1465
144 - High-voltage system , (OK3)	1466-1488
1. High-voltage system , (OK3)	1466
2. Battery, Battery monitor control unit, Battery isolation igniter	1467
3. Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket, Radiator fan, Radiator fan 2	1468
4. Terminal 30 wiring junction 3	1469
5. Fuse holder F, Fuse carrier 4	1470
6. Battery regulation control unit, Maintenance connector for high-voltage system	1471
7. Battery regulation control unit, High-voltage battery coolant pump relay, Coolant pump for high-voltage battery	1472
8. Battery regulation control unit	1473
9. Coolant temperature sender 1 for high-voltage battery, Coolant temperature sender 2 for high-voltage battery, Battery regulation control unit	1474
10. Hybrid battery unit, Charging unit fuse, High-voltage system fuse 1	1475
11. Hybrid battery unit	1476
12. Hybrid battery unit	1477
13. DC/AC converter for drive motor, Power and control electronics for electric drive, Electric drive control unit	1478
14. Drive motor temperature sender, Drive motor rotor position sender 1, Power and control electronics for electric drive, Automatic gearbox control unit, Three-phase current drive	1479
15. Power and control electronics for electric drive, Three-phase current drive, Electric drive motor	1480
16. Power and control electronics for electric drive, Thermal management control unit, Electrical air conditioner compressor	1481
17. High-voltage heater (PTC) control unit, High-voltage heater (PTC)	1482
18. Charging unit 1 for high-voltage battery, Module for battery charge selector buttons, Actuator for high-voltage charging flap lock 1	1483
19. Charging unit 1 for high-voltage battery	1484
20. Charging unit 1 for high-voltage battery, High-voltage battery charging socket 1	1485
21. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 1, Temperature sender for charging socket 1, High-voltage battery charging socket 1	1486
22. Power steering control unit	1487
23. Data bus diagnostic interface	1488
145 - Thermal management , (OK3)	1489-1497
1. Thermal management , (OK3)	1489
2. Data bus diagnostic interface, Thermal management control unit, Refrigerant shut-off valve	1490
3. Coolant temperature sender 5 for thermal management, Coolant temperature sender 7 for thermal management, Thermal management control unit, Coolant changeover valve 1, Coolant changeover valve 2, Coolant changeover valve 3, Coolant changeover valve 4	1491
4. Coolant shortage indicator sender 2, Coolant temperature sender 1 for thermal management, Coolant temperature sender 4 for thermal management, Coolant temperature sender 6 for thermal management, Coolant temperature sender 8 for thermal management, Thermal management control unit	1492
5. Thermal management control unit, Thermal management coolant pump relay, Thermal management coolant pump, Thermal management coolant pump 2	1493
6. Refrigerant pressure and temperature sender. Refrigerant pressure and temperature sender 2.	1494

Thermal management control unit, Radiator fan, Radiator fan 2	
7. Refrigerant expansion valve 1, Refrigerant shut-off valve 2, Refrigerant shut-off valve 3	1495
8. Refrigerant shut-off valve 4, Refrigerant shut-off valve 5	1496
9. Coolant temperature sender 3 for thermal management, Thermal management coolant pump 4	1497
146 - 48 V system , (VH2),(VH3)	1498-1503
1. 48 V system , (VH2),(VH3)	1498
2. Battery, Battery monitor control unit, Battery isolation igniter	1499
3. Voltage converter (48 V/12 V), Data bus diagnostic interface, Voltage converter fan	1500
4. Battery, 48 V, Igniter for interrupting second battery	1501
5. Battery, 48 V, Storage capacitor for 48 V electrical system, Igniter for interrupting second battery, Terminal 40 wiring junction 2, Battery fan 1	1502
6. Roll stabiliser control unit, Roll stabiliser control unit 2, Control unit for electric compressor, Terminal 40 wiring junction	1503
147 - Automatic gearbox , (FN0)	1504-1510
1. Automatic gearbox , (FN0)	1504
2. Gearbox oil temperature sender, Parking lock sender, Automatic gearbox control unit	1505
3. Temperature sender in control unit, Automatic gearbox control unit, Solenoid valve 1, Automatic gearbox pressure regulating valve 1, Gearbox oil cooling valve	1506
4. Data bus diagnostic interface	1507
5. Selector lever	1508
6. Selector lever, Selector lever position sender, Selector lever sensors control unit, Selector lever position display	1509
7. Selector lever, Button for selector lever release, Parking lock button, Parking lock indicator lamp	1510
148 - Automatic gearbox , (0K3)	1511-1517
1. Automatic gearbox , (0K3)	1511
2. Parking lock sender, Automatic gearbox control unit	1512
3. Gearbox oil temperature sender, Temperature sender in control unit, Automatic gearbox control unit, Solenoid valve 1, Automatic gearbox pressure regulating valve 1, Auxiliary hydraulic pump 1 for gearbox oil, Actuator for disengagement clutch	1513
4. Data bus diagnostic interface	1514
5. Selector lever	1515
6. Selector lever, Selector lever position sender, Selector lever sensors control unit, Selector lever position display	1516
7. Selector lever, Button for selector lever release, Parking lock button, Parking lock indicator lamp	1517
149 - Rear seat heating , (4A4)	1518-1520
1. Rear seat heating , (4A4)	1518
2. Heated bench seat cushion for rear left seat, Heated backrest for rear left seat	1519
3. Heated bench seat cushion for rear right seat, Heated backrest for rear right seat	1520
150 - Adjustable driver and front passenger seats , (Q2J),(Q4Q)	1521-1530
1. Adjustable driver and front passenger seats , (Q2J),(Q4Q)	1521
2. Control unit for seat and steering column adjustment with memory function, Rear left footwell light	1522
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat rake adjustment motor, Driver seat height adjustment motor, Driver seat depth adjustment motor	1523
4. Switch module for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor	1524
5. Control unit for seat and steering column adjustment with memory function, Valve block 1 in driver seat, Valve block 2 in driver seat, Compressor for multicontour driver seat	1525
6. Control unit for front passenger seat adjustment with memory function, Rear right footwell light	1526
7. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor, Front passenger seat depth adjustment motor	1527
8. Switch module for front passenger seat, Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor	1528
9. Control unit for front passenger seat adjustment with memory function, Valve block 1 in front passenger seat, Valve block 2 in front passenger seat, Compressor for multicontour front passenger seat	1529
10. Onboard supply control unit, Data bus diagnostic interface	1530
151 - Adjustable driver and front passenger seats , (Q1D)	1531-1540
1. Adjustable driver and front passenger seats , (Q1D)	1531
2. Control unit for seat and steering column adjustment with memory function, Rear left footwell light	1532

3. Driver seat adjustment operating unit, Switch module for driver seat, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor	1533
4. Control unit for seat and steering column adjustment with memory function, Driver seat rake adjustment motor, Driver seat height adjustment motor, Driver seat depth adjustment motor	1534
5. Control unit for seat and steering column adjustment with memory function, Lumbar support for driver seat, Driver seat backrest adjustment motor	1535
6. Control unit for front passenger seat adjustment with memory function, Rear right footwell light	1536
7. Front passenger seat adjustment operating unit, Switch module for front passenger seat, Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor	1537
8. Control unit for front passenger seat adjustment with memory function, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor, Front passenger seat depth adjustment motor	1538
9. Control unit for front passenger seat adjustment with memory function, Lumbar support for front passenger seat, Front passenger seat backrest adjustment motor	1539
10. Onboard supply control unit, Data bus diagnostic interface	1540
152 - Adjustable driver and front passenger seats , (3PN),(Q1A)	1541-1548
1. Adjustable driver and front passenger seats , (3PN),(Q1A)	1541
2. Control unit for seat and steering column adjustment with memory function, Rear left footwell light	1542
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	1543
4. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Lumbar support for driver seat, Driver seat backrest adjustment motor	1544
5. Control unit for front passenger seat adjustment with memory function, Rear right footwell light	1545
6. Front passenger seat adjustment operating unit, Control unit for front passenger seat adjustment with memory function, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor	1546
7. Front passenger seat lumbar support adjustment switch, Control unit for front passenger seat adjustment with memory function, Lumbar support for front passenger seat, Front passenger seat backrest adjustment motor, Front passenger seat height adjustment motor	1547
8. Onboard supply control unit, Data bus diagnostic interface	1548
153 - Adjustable driver and front passenger seats , (3L4),(Q1A)	1549-1556
1. Adjustable driver and front passenger seats , (3L4),(Q1A)	1549
2. Control unit for seat and steering column adjustment with memory function, Rear left footwell light	1550
3. Driver seat adjustment operating unit, Control unit for seat and steering column adjustment with memory function, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	1551
4. Driver seat lumbar support adjustment switch, Control unit for seat and steering column adjustment with memory function, Lumbar support for driver seat, Driver seat backrest adjustment motor	1552
5. Airbag control unit, Front passenger seat adjustment thermal fuse 1, Rear right footwell light	1553
6. Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	1554
7. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment operating unit, Data bus diagnostic interface, Lumbar support for front passenger seat	1555
8. Onboard supply control unit	1556
154 - Adjustable driver and front passenger seats , (3L5),(Q1A)	1557-1563
1. Adjustable driver and front passenger seats , (3L5),(Q1A)	1557
2. Driver seat adjustment thermal fuse 1, Rear left footwell light	1558
3. Driver seat adjustment operating unit, Onboard supply control unit, Driver seat longitudinal adjustment motor, Driver seat rake adjustment motor, Driver seat height adjustment motor	1559
4. Driver seat lumbar support adjustment switch, Driver seat adjustment operating unit, Lumbar support for driver seat, Driver seat backrest adjustment motor	1560
5. Front passenger seat adjustment thermal fuse 1, Rear right footwell light	1561
6. Front passenger seat adjustment operating unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	1562
7. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment operating unit, Airbag control unit, Lumbar support for front passenger seat	1563
155 - Fuse assignment	1564-1593
1. Fuse assignment	1564

2. Battery, Battery monitor control unit, Power steering control unit, Battery isolation igniter	1565
3. Heated windscreen control unit, Battery isolation igniter	1566
4. Airbag control unit, Battery isolation igniter, Wiring junction	1567
5. Voltage converter (48 V/12 V), Starter, Rear wheel steering control unit, Wiring junction, Terminal 30 wiring junction, Terminal 30 wiring junction 2	1568
6. Alternator with voltage regulator, Automatic glow period control unit, Glow period control unit 2, Terminal 30 wiring junction 2, Radiator fan, Radiator fan 2	1569
7. Voltage converter, Terminal 30 wiring junction 3	1570
8. Engine/motor control unit, Brake servo, Fuse (50), Terminal 30 wiring junction 3	1571
9. Main relay, Secondary air pump relay, Engine/motor control unit, Fuse holder B, Fuse carrier 1, Secondary air pump motor	1572
10. Terminal 15 voltage supply relay, Convenience system central control unit, Engine component power supply relay	1573
11. Starter relay 2, Relay and fuse carrier 1	1574
12. Power unit mounting control unit, Windscreen washer pump control unit, Fuse holder B, Fuse carrier 2	1575
13. Fresh air blower control unit, Emergency call module control unit and communication unit, Driver assist systems control unit, Fuse holder B, Fuse carrier 2	1576
14. Sliding sunroof adjustment control unit, Wiper motor control unit, Onboard supply control unit, Front right headlight, Fuse holder B, Fuse carrier 2, Actuator for disengagement clutch	1577
15. Onboard supply control unit, Rear driver side door control unit, Front left headlight, Fuse holder B	1578
16. Interior mirror, Operating and display unit for rear air conditioning system, Auxiliary heater control unit, Driver door control unit, Rear passenger side door control unit, Fuse holder B, Fuse carrier 4, Diagnostic connection	1579
17. Control unit for seat and steering column adjustment with memory function, Fuse holder B, Fuse carrier 4, Front left seat cushion fan 1, Front right seat cushion fan 1	1580
18. Data bus diagnostic interface, Control unit for structure-borne sound, Engine sound generator control unit, Fuse holder B, Fuse carrier 4	1581
19. Power and control electronics for electric drive, Gearbox oil cooling valve, Fuse holder B, Fuse carrier 4	1582
20. Accelerator pedal module, Control unit for night vision system, Roll stabiliser control unit, Roll stabiliser control unit 2, Fuse holder B, Fuse carrier 4	1583
21. Adaptive cruise control unit, Control unit for laser distance control, Fuse holder B, Fuse carrier 4, Heater element for adaptive cruise control radar sensor	1584
22. Front left radar sensor control unit for object detection, Front right radar sensor control unit for object detection, Front camera for driver assist systems, Fuse holder B, Fuse carrier 4	1585
23. Anti-theft alarm sensor, Alarm horn, Fuse holder B, Fuse carrier 5	1586
24. Rain and light sensor, Front passenger door control unit, Fuse holder B, Fuse carrier 5, Front roof module	1587
25. Automatic gearbox control unit, Driver seat adjustment thermal fuse 1, Fuse, Fuse holder B, Fuse carrier 5, Front passenger seat adjustment thermal fuse 1, Brake system pressure accumulator	1588
26. ABS control unit, Chip card reader control unit, Charging unit 1 for mobile devices, Control unit with Android operating system, Fuse holder C, Relay and fuse carrier 2, ABS control unit fuse 2	1589
27. Centre switch module in dash panel, Switch module 1 in centre console, Selector lever, Air conditioner sensor for fine particle concentration, Control unit for fragrance diffuser system, USB hub, Fuse holder C, USB connection 1	1590
28. Control unit for electronic steering column lock, Control unit for head-up display, Fuse holder C	1591
29. Rotary light switch, Control unit in dash panel insert, Steering column electronics control unit, Display unit for front information display and operating unit control unit, Display unit 2 for front information display and operating unit control unit, DVD player, Fuse holder C	1592
30. Parking brake button, Driver side volume regulator, Control unit 1 for information electronics, Control unit for electrically adjustable steering column, Fuse holder C	1593
156 - Fuses in luggage compartment	1594-1608
1. Fuses in luggage compartment	1594
2. Battery isolation igniter, Front passenger seat adjustment thermal fuse 1, Trailer towing attachment thermal fuse, Fuse 1 (30), Terminal 30 wiring junction 3	1595
3. Heated rear window relay, Adaptive suspension compressor electronics, Heated rear window fuse, Levelling system fuse, Rear window	1596
4. Thermal management coolant pump relay, High-voltage battery coolant pump relay, Coolant pump for high-voltage battery, Thermal management coolant pump, Thermal management coolant pump 2, Thermal management coolant pump 4	1597
5. Refrigerant pressure and temperature sender, Refrigerant pressure and temperature sender 2, Running gear control unit, High-voltage heater (PTC) control unit, Refrigerant expansion valve 1, Refrigerant expansion valve 2. Fuse holder F. Fuse carrier 1	1598

6. Operating and display unit for rear air conditioning system, Automatic gearbox control unit, Control unit for seat adjustment, row 3, Fuse holder F, Fuse carrier 1	1599
7. Rear fresh air blower control unit, Convenience system central control unit, Rear lid control unit, Control unit for front left belt tensioner, Fuse holder F, Fuse carrier 1, Fuse carrier 2	1600
8. Trailer detector control unit, Digital sound package control unit, Control unit for reducing agent metering system, Fuse holder F, Fuse carrier 2	1601
9. Differential lock control unit, Driver assist systems control unit, Aerial amplifier for mobile telephone, Roof aerial, Fuse holder F, Fuse carrier 2, Fuse carrier 3	1602
10. Tyre Pressure Monitoring System control unit, Lane change assist control unit, Lane change assist control unit 2, Fuse holder F, Fuse carrier 3	1603
11. Telephone and telematics control unit, Control unit for fuel tank leak detection, Interface control unit for telematics, Remote control receiver for auxiliary heater, TV tuner, Fuse holder F, Fuse carrier 3, Metering pump	1604
12. Garage door operation control unit, Reversing camera system control unit, Near field communication control unit, Near field communication control unit 2, Fuse holder F, Fuse carrier 3	1605
13. Control unit for front right belt tensioner, Roll stabiliser control unit, Roll stabiliser control unit 2, Fuse holder F, Fuse carrier 3, Fuse carrier 4	1606
14. Battery, 48 V, Voltage converter, Storage capacitor for 48 V electrical system, Power and control electronics for electric drive, Brake servo control unit, Control unit for air conditioner compressor, Fuse holder F, Fuse carrier 4	1607
15. Charging unit 1 for high-voltage battery, Thermal management control unit, Remote-controlled air conditioning relay, Fuse holder F, Fuse carrier 4, Coupling point on high-voltage battery	1608
157 - MMI (information electronics 1)	1609-1623
1. MMI (information electronics 1)	1609
2. Control unit 1 for information electronics, Fuse holder C	1610
3. Driver side volume regulator, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Display unit 2 for front information display and operating unit control unit	1611
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Display unit 2 for front information display and operating unit control unit	1612
5. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Control unit for head-up display	1613
6. Control unit in dash panel insert, Control unit 1 for information electronics	1614
7. Control unit 1 for information electronics, Driver assist systems control unit	1615
8. Reversing camera system control unit, Control unit 1 for information electronics, Aerial amplifier 2	1616
9. Control unit 1 for information electronics, Aerial amplifier	1617
10. Control unit 1 for information electronics	1618
11. Control unit 1 for information electronics, Remote control receiver for auxiliary heater, Roof aerial	1619
12. Control unit 1 for information electronics, Roof aerial	1620
13. Control unit 1 for information electronics, Aerial amplifier 3, LTE aerial 1, LTE aerial 2	1621
14. Data bus diagnostic interface, Control unit 1 for information electronics, Aerial filter for GPS, Internal vehicle communication aerial, Coupling point in interior, centre	1622
15. Control unit 1 for information electronics, Microphone unit in front roof module	1623
158 - USB connections for data transfer , (UF7),(UF8),(UE8)	1624-1627
1. USB connections for data transfer , (UF7),(UF8),(UE8)	1624
2. Onboard supply control unit, Control unit 1 for information electronics, Fuse holder B, Fuse holder C	1625
3. Control unit 1 for information electronics, USB hub, USB connection 1	1626
4. USB hub, USB connection 1	1627
159 - Communication, Japan , (ER5)	1628-1631
1. Communication, Japan , (ER5)	1628
2. Chip card reader control unit, Control unit 1 for information electronics, Fuse holder C	1629
3. Chip card reader control unit, Control unit 1 for information electronics, Traffic data aerial	1630
4. Chip card reader control unit, Dedicated short-range communication aerial	1631
160 - Heated rear window	1632-1633
1. Heated rear window	1632
2. Heated rear window relay, Convenience system central control unit, Heated rear window	1633
161 - Door control units, driver side	1634-1647
1. Door control units, driver side	1634
2. Driver door control unit, Onboard supply control unit	1635
3. Driver door control unit, Driver assist systems control unit, Light for exterior door handle illumination, driver side, Driver door lock unit	1636
4. Driver door power latchina system contact switch. Driver door control unit. Driver door lock unit.	1637

Driver side window regulator motor	
5. Rear lid remote release button, Fuel tank flap release button, Driver door control unit, Driver door power latching motor	1638
6. Driver side interior locking button for central locking system, Driver door control unit, Central locking SAFELOCK function warning lamp, Exit warning lamp, driver side	1639
7. Exterior mirror adjuster, Mirror adjustment changeover switch, Driver operating unit for memory settings, Driver door control unit	1640
8. Operating unit for window regulator in driver door, Driver door control unit	1641
9. Operating unit for window regulator in driver door, Driver door control unit, Driver side exterior mirror	1642
10. Driver door control unit, Driver side exterior mirror	1643
11. Rear childproof lock contact switch, driver side, Rear driver side door control unit, Light for rear exterior door handle illumination, driver side, Rear door lock unit, driver side	1644
12. Rear door contact switch, driver side, Rear driver side door control unit, Rear door lock unit, driver side, Rear childproof lock motor, driver side, Rear central locking SAFELOCK function motor, driver side, Rear central locking motor, driver side	1645
13. Rear driver side door control unit, Rear driver side window regulator motor, Rear door power latching motor, driver side, Rear exit warning lamp, driver side	1646
14. Operating unit in rear door, driver side, Rear driver side interior locking button for central locking system, Rear driver side door control unit	1647
162 - Door control units, passenger side	1648-1659
1. Door control units, passenger side	1648
2. Front passenger door control unit, Onboard supply control unit	1649
3. Front passenger door control unit, Driver assist systems control unit, Light for exterior door handle illumination, front passenger side, Front passenger door lock unit	1650
4. Front passenger door power latching system contact switch, Front passenger door control unit, Front passenger door lock unit, Front passenger side window regulator motor, Front passenger door power latching motor	1651
5. Front passenger operating unit for memory settings, Front passenger door control unit, Light for passenger side interior door handle illumination, Exit warning lamp, front passenger side	1652
6. Window regulator switch in front passenger door, Front passenger side interior locking button for central locking system, Front passenger door control unit	1653
7. Front passenger door control unit, Passenger side exterior mirror	1654
8. Front passenger door control unit, Passenger side exterior mirror	1655
9. Rear childproof lock contact switch, passenger side, Rear passenger side door control unit, Light for rear exterior door handle illumination, passenger side, Rear door lock unit, passenger side	1656
10. Rear door contact switch, passenger side, Rear passenger side door control unit, Rear door lock unit, passenger side, Rear childproof lock motor, passenger side, Rear central locking SAFELOCK function motor, passenger side, Rear central locking motor, passenger side	1657
11. Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Rear door power latching motor, passenger side, Rear door warning lamp, passenger side, Rear exit warning lamp, passenger side	1658
12. Operating unit in rear door, passenger side, Rear passenger side interior locking button for central locking system, Rear passenger side door control unit	1659
163 - Interior lights , (QQ0),(QQ1)	1660-1673
1. Interior lights , (QQ0),(QQ1)	1660
2. Onboard supply control unit, Rear left footwell light, Rear right footwell light	1661
3. Onboard supply control unit, Light 1 for front centre console background lighting, Light 4 for front centre console background lighting, Light 1 for dash panel background lighting, Light 2 for dash panel background lighting, Light 3 for dash panel background lighting	1662
4. Onboard supply control unit, Light for sill panel moulding background lighting, driver side, Light for sill panel moulding background lighting, front passenger side, Light for rear sill panel moulding background lighting, passenger side, Light for rear sill panel moulding background lighting, driver side	1663
5. Glove compartment light switch, Onboard supply control unit, Front left footwell illumination bulb, Front right footwell illumination bulb	1664
6. Driver door control unit, Onboard supply control unit, Light for driver side interior door handle illumination, Light for driver side door loudspeaker trim, Glove compartment light, Light for driver door background lighting, Driver side entry light, Light 2 for driver door background lighting	1665
7. Driver door control unit, Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger side door loudspeaker trim, Light for passenger door background lighting, Passenger side entry light, Light 2 for passenger door background lighting	1666
8. Front passenger door control unit, Rear driver side door control unit, Light 1 for rear left door background lighting, Light for rear driver side interior door handle illumination, Light for rear left door contour lighting, Rear door warning lamp, driver side	1667
9. Rear passenger side door control unit. Light 1 for rear right door background lighting. Light for	1668

rear passenger side interior door handle illumination, Light for rear right door contour lighting, Rear door warning lamp, passenger side	
10. Convenience system central control unit, Left luggage compartment light, Right luggage compartment light, Rear lid light, Rear lid light 2	1669
11. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	1670
12. Driver side reading light button, Front passenger side reading light button, Rear interior light, Front roof module, Front passenger reading light, Driver side reading light, Rear left interior light, Rear right interior light	1671
13. Right reading light button for seat row 3, Rear interior light, Front roof module, Rear interior light 2, Left reading light for seat row 3, Right reading light for seat row 3	1672
14. Fuse holder B, Fuse carrier 5, Front roof module, Rear interior light 2	1673
164 - Interior lights , (QQ2)	1674-1691
1. Interior lights , (QQ2)	1674
2. Onboard supply control unit, Rear left footwell light, Rear right footwell light	1675
3. Onboard supply control unit, Light 1 for dash panel background lighting, Light 2 for dash panel background lighting	1676
4. Onboard supply control unit, Light 3 for dash panel background lighting, Background lighting for emblem in dash panel, passenger side	1677
5. Onboard supply control unit, Light 1 for front centre console background lighting, Light 2 for front centre console background lighting, Light 3 for front centre console background lighting, Light 4 for front centre console background lighting	1678
6. Onboard supply control unit	1679
7. Glove compartment light switch, Onboard supply control unit, Rear driver side door control unit, Rear passenger side door control unit, Glove compartment light	1680
8. Driver door control unit, Onboard supply control unit, Front left footwell illumination bulb, Front right footwell illumination bulb, Light for driver side door loudspeaker trim, Driver side entry light	1681
9. Light 1 for front left door background lighting, Light for front left door contour lighting, Light for sill panel moulding background lighting, driver side	1682
10. Front passenger door control unit, Light for passenger side door loudspeaker trim, Passenger side entry light, Light for sill panel moulding background lighting, front passenger side	1683
11. Light 1 for front right door background lighting, Light for front right door contour lighting	1684
12. Light 1 for rear left door background lighting, Light for rear left door contour lighting, Light for rear sill panel moulding background lighting, driver side	1685
13. Light 1 for rear right door background lighting, Light for rear right door contour lighting, Light for rear sill panel moulding background lighting, passenger side	1686
14. Convenience system central control unit, Left luggage compartment light, Right luggage compartment light, Rear lid light, Rear lid light 2	1687
15. Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	1688
16. Driver side reading light button, Front passenger side reading light button, Rear interior light, Front roof module, Front passenger reading light, Driver side reading light, Rear left interior light, Rear right interior light	1689
17. Right reading light button for seat row 3, Rear interior light, Front roof module, Rear interior light 2, Left reading light for seat row 3, Right reading light for seat row 3	1690
18. Fuse holder B, Fuse carrier 5, Front roof module, Rear interior light 2	1691
165 - Anti-theft alarm system	1692-1695
1. Anti-theft alarm system	1692
2. Button for deactivating interior monitoring and vehicle inclination sensor, Driver door control unit, Convenience system central control unit, Onboard supply control unit	1693
3. Interior monitoring sensor, Vehicle inclination sender, Anti-theft alarm sensor, Alarm horn, Convenience system central control unit, Data bus diagnostic interface	1694
4. Rear left side window glass breakage sensor, Rear right side window glass breakage sensor, Glass breakage sensor for rear window, Convenience system central control unit	1695
166 - Rear lid remote release	1696-1700
1. Rear lid remote release	1696
2. Rear lid remote release button, Fuel tank flap release button, Driver door control unit	1697
3. Driver door control unit, Convenience system central control unit, Onboard supply control unit, Data bus diagnostic interface, Coupling point for front left door	1698
4. Rear lid handle release button, Rear lid closed sender 1, Rear lid closed sender 2, Convenience system central control unit, Rear lid lock unit	1699
5. Rear lid power opening sender, Rear lid power opening sender 2, Convenience system central control unit, Rear lid power opening control unit	1700
167 - Electrically operated rear lid	1701-1704
1. Electrically operated rear lid	1701

2. Onboard supply control unit, Rear lid control unit, Drive unit for luggage compartment cover	1702
3. Rear lid warning buzzer, Rear lid control unit, Rear lid drive unit, Rear lid drive unit 2	1703
4. Operating unit for rear lid control, Convenience system central control unit, Rear lid control unit, Power latching for rear lid	1704
168 - Rain and light sensor	1705-1706
1. Rain and light sensor	1705
2. Rain and light sensor, Onboard supply control unit	1706
169 - 2.0l petrol engine , CYMC,CYRB	1707-1733
1. 2.0l petrol engine , CYMC,CYRB	1707
2. Battery, Airbag control unit, Battery monitor control unit, Power steering control unit, Battery isolation igniter	1708
3. Starter, Alternator with voltage regulator, Suppression capacitor, Terminal 30 wiring junction, Jump start socket	1709
4. Main relay, Fuse holder B	1710
5. Engine component power supply relay, Fuse holder B, Fuse carrier 2	1711
6. Terminal 15 voltage supply relay, Starter relay 1, Starter relay 2, Relay and fuse carrier 1, Fuse (50)	1712
7. Engine/motor control unit	1713
8. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	1714
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug connector	1715
10. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1716
11. Fuel pressure sender, Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	1717
12. Hall sender, Intake manifold flap potentiometer, Secondary air pump relay, Engine/motor control unit, Secondary air pump motor	1718
13. Oil level and oil temperature sender, Engine/motor control unit, Coolant circulation pump	1719
14. Engine speed sender, Coolant temperature sender, Radiator outlet coolant temperature sender, Fuel pressure sender for low pressure, Engine/motor control unit, Air filter bypass flap valve	1720
15. Knock sensor 1, Intake manifold pressure sender, Hall sender 3, Engine/motor control unit, Charge pressure positioner	1721
16. Charge pressure sender, Tank pressure sensor 2, Engine/motor control unit, Actuator for engine temperature regulation	1722
17. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Engine/motor control unit	1723
18. Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve	1724
19. Throttle valve module, Engine/motor control unit, Fuel metering valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve	1725
20. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, ABS control unit, Data bus diagnostic interface, Engine/motor control unit	1726
21. Lambda probe 1 before catalytic converter, Engine/motor control unit	1727
22. Brake pedal switch, Lambda probe 1 after catalytic converter, Fuel tank leak detection module, Engine/motor control unit	1728
23. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Coolant valve for gearbox	1729
24. Engine/motor control unit, Continued coolant circulation pump, Radiator blind control motor	1730
25. Automatic gearbox control unit, Engine/motor control unit, Radiator fan, Radiator fan 2	1731
26. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	1732
27. Fuel delivery unit, Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit	1733
170 - 2.0l petrol engine , DFKA	1734-1756
1. 2.0l petrol engine , DFKA	1734
2. Battery, Airbag control unit, Battery monitor control unit, Battery isolation igniter, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	1735
3. Terminal 15 voltage supply relay, Engine component power supply relay, Fuse carrier 2, Fuse carrier 4, Terminal 30 wiring junction 3	1736
4. Fuse holder B, Fuse carrier 1	1737
5. Main relay, Engine/motor control unit, Fuse holder B, Fuse carrier 5	1738
6. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	1739
7. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Active accelerator pedal control unit	1740

8. Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1741
9. Hall sender, Power unit mounting sender 1, Power unit mounting sender 2, Engine/motor control unit, Coupling point in engine compartment, left	1742
10. Engine speed sender, Coolant temperature sender, Hall sender 3, Engine/motor control unit, Coupling point in engine compartment, left	1743
11. Knock sensor 1, Radiator outlet coolant temperature sender, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Pressure differential sender for particulate filter, Engine/motor control unit	1744
12. Charge pressure sender, Intake manifold pressure sender, Tank pressure sensor 2, Engine/motor control unit, Fuel pressure regulating valve	1745
13. Sender 1 for secondary air pressure, Engine/motor control unit, Actuator for engine temperature regulation, Charge pressure positioner	1746
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Throttle valve module, Engine/motor control unit	1747
15. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	1748
16. Cam adjustment actuator 8, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control	1749
17. Fuel tank leak detection module, Oil level and oil temperature sender, Engine/motor control unit, Secondary air inlet valve, Air filter bypass flap valve, Piston cooling jet control valve	1750
18. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Exhaust flap control unit, Solenoid valve 7	1751
19. ABS control unit, Engine/motor control unit, Brake servo	1752
20. Tank breather pressure sensor 1, Automatic gearbox control unit, Engine/motor control unit, Continued coolant circulation pump	1753
21. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit, Engine/motor control unit	1754
22. Coolant shortage indicator sender, Secondary air pump relay, Onboard supply control unit, Thermal management control unit, Radiator fan, Secondary air pump motor, Radiator fan 2	1755
23. Data bus diagnostic interface, Power unit mounting control unit, Power unit mounting actuator 1, Power unit mounting actuator 2	1756
171 - 3.0l petrol engine , DCBD	1757-1783
1. 3.0l petrol engine , DCBD	1757
2. Battery, Airbag control unit, Battery monitor control unit, Power steering control unit, Battery isolation igniter	1758
3. Starter, Terminal 30 wiring junction, Terminal 40 wiring junction, Jump start socket	1759
4. Main relay, Fuse holder B, Fuse carrier 1	1760
5. Engine component power supply relay, Fuse holder B, Fuse carrier 1, Fuse carrier 2, Fuse carrier 5	1761
6. Starter relay 1, Starter relay 2, Fuse holder B, Relay and fuse carrier 1, Fuse carrier 4, Fuse (50)	1762
7. Engine/motor control unit	1763
8. Accelerator pedal module, Charge pressure sender, Steering column electronics control unit, Engine/motor control unit	1764
9. Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Piston cooling jet control valve	1765
10. Oil pressure switch, Oil temperature sender, Coolant temperature sender, Engine outlet coolant temperature sender, Oil level and oil temperature sender, Temperature sender for engine temperature regulation, Engine/motor control unit	1766
11. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug connector, Continued coolant circulation pump	1767
12. Engine/motor control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Spark plug connector	1768
13. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	1769
14. Inlet cam actuator 1 for cylinder 1, Inlet cam actuator 1 for cylinder 2, Inlet cam actuator 1 for cylinder 3, Inlet cam actuator 1 for cylinder 4, Engine/motor control unit	1770
15. Map-controlled engine cooling system thermostat, Inlet cam actuator 1 for cylinder 5, Inlet cam actuator 1 for cylinder 6, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Overrun air recirculation valve for bank 1	1771
16. Radiator outlet coolant temperature sender, Engine/motor control unit, Charge pressure control solenoid valve, Camshaft control valve 1, Camshaft control valve 2, Exhaust camshaft control valve 1, Exhaust camshaft control valve 2	1772

17. Oil pressure sender, Hall sender, Hall sender 2, Temperature sender for engine cover panel, Engine/motor control unit	1773
18. Knock sensor 1, Knock sensor 2, Hall sender 3, Hall sender 4, Engine/motor control unit, Fuel metering valve, Valve for oil pressure control	1774
19. Fuel pressure sender, Fuel pressure sender for low pressure, Tank breather pressure sensor 1, Engine/motor control unit, Coolant valve for cylinder block, Switch valve for mechanical coolant pump	1775
20. Engine speed sender, Fuel tank leak detection module, Engine/motor control unit, Radiator blind control motor	1776
21. Throttle valve module, Exhaust gas temperature sender 3, Pressure differential sender for particulate filter, Engine/motor control unit, Coolant circulation pump	1777
22. Lambda probe 1 after catalytic converter, Intake manifold sender, Lambda probe 1 before catalytic converter, Engine/motor control unit	1778
23. Automatic gearbox control unit, Engine/motor control unit, Radiator fan, Radiator fan 2	1779
24. Starter-alternator, Data bus diagnostic interface, Engine/motor control unit	1780
25. Brake pedal switch, ABS control unit, Engine/motor control unit	1781
26. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	1782
27. Fuel delivery unit, Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Air conditioner compressor	1783
172 - 3.0l petrol engine , DCBE	1784-1811
1. 3.0l petrol engine , DCBE	1784
2. Battery, Airbag control unit, Battery monitor control unit, Heated windscreen control unit, Battery isolation igniter	1785
3. Terminal 30 wiring junction, Terminal 30 wiring junction 3, Jump start socket	1786
4. Fuse holder B, Fuse carrier 1	1787
5. Engine component power supply relay, Fuse holder B, Fuse carrier 1, Fuse carrier 2, Fuse carrier 4	1788
6. Main relay, Engine/motor control unit, Fuse holder B, Fuse carrier 5	1789
7. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Active accelerator pedal control unit	1790
8. Charge pressure sender, Engine/motor control unit	1791
9. Oil pressure switch, Oil temperature sender, Coolant temperature sender, Engine outlet coolant temperature sender, Oil level and oil temperature sender, Temperature sender for engine temperature regulation, Engine/motor control unit, Piston cooling jet control valve	1792
10. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug connector, Continued coolant circulation pump	1793
11. Engine/motor control unit, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage, Spark plug connector	1794
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6, Gearbox mounting valve 2	1795
13. Inlet cam actuator 1 for cylinder 1, Inlet cam actuator 1 for cylinder 2, Inlet cam actuator 1 for cylinder 3, Inlet cam actuator 1 for cylinder 4, Engine/motor control unit	1796
14. Map-controlled engine cooling system thermostat, Inlet cam actuator 1 for cylinder 5, Inlet cam actuator 1 for cylinder 6, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Overrun air recirculation valve for bank 1	1797
15. Engine/motor control unit, Charge pressure control solenoid valve, Camshaft control valve 1, Camshaft control valve 2, Fuel tank switch-off valve, Exhaust camshaft control valve 1, Exhaust camshaft control valve 2	1798
16. Oil pressure sender, Hall sender, Hall sender 2, Engine/motor control unit	1799
17. Knock sensor 1, Knock sensor 2, Radiator outlet coolant temperature sender, Hall sender 3, Hall sender 4, Temperature sender for engine cover panel, Engine/motor control unit	1800
18. Fuel pressure sender, Fuel pressure sender for low pressure, Engine/motor control unit, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder block, Switch valve for mechanical coolant pump	1801
19. Engine speed sender, Exhaust gas temperature sender 3, Tank breather pressure sensor 1, Pressure differential sender for particulate filter, Engine/motor control unit	1802
20. Throttle valve module, Intake manifold pressure sender, ABS control unit, Engine/motor control unit, Exhaust flap control unit	1803
21. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Automatic gearbox control unit, Engine/motor control unit, Gearbox mounting valve 1	1804
22. Data bus diagnostic interface, Engine/motor control unit	1805
23. Engine/motor control unit, Brake servo	1806
24. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	1807
25. Temperature and pressure sender for fuel tank, Engine/motor control unit, Radiator blind control motor	1808
26. Coolant shortage indicator sender. Convenience system central control unit. Onboard supply	1809

control unit, Engine/motor control unit	
27. Power unit mounting control unit, Thermal management control unit, Radiator fan, Radiator fan 2	1810
28. Power unit mounting sender 1, Power unit mounting sender 2, Power unit mounting control unit, Power unit mounting actuator 1, Power unit mounting actuator 2	1811
173 - 3.0l diesel engine , CVMD,CVMG	1812-1837
1. 3.0l diesel engine , CVMD,CVMG	1812
2. Battery, Battery monitor control unit, Battery isolation igniter	1813
3. Starter, Alternator with voltage regulator, Suppression capacitor, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	1814
4. Terminal 15 voltage supply relay, Starter relay 1, Starter relay 2	1815
5. Fuse carrier 1	1816
6. Automatic glow period control unit, Main relay	1817
7. Automatic glow period control unit, Engine/motor control unit	1818
8. Intake air temperature sender, Air mass meter, Exhaust gas temperature sender 4, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Injector for reducing agent	1819
9. Engine/motor control unit, Coolant circulation pump	1820
10. Coolant shortage indicator sender, Onboard supply control unit, Engine/motor control unit, Air conditioner compressor	1821
11. Accelerator pedal module, Engine/motor control unit	1822
12. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6, Valve for oil pressure control	1823
13. Throttle valve module, Intake manifold flap control unit, Charge pressure sender, Engine/motor control unit	1824
14. Hall sender, Fuel pressure sender, Fuel pressure sender for low pressure, Engine/motor control unit, Turbocharger 1 control unit	1825
15. Oil pressure sender, Engine speed sender, Exhaust gas recirculation temperature sensor, Pressure differential sender, Engine/motor control unit	1826
16. Exhaust gas temperature sender 1, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Oil temperature sender 2, Temperature sender for engine temperature regulation, Engine/motor control unit, Air filter bypass flap valve	1827
17. Exhaust gas recirculation valve 1, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	1828
18. Map-controlled engine cooling system thermostat, Coolant temperature sender, Fuel temperature sender, Water level sender, Oil level and oil temperature sender, Coolant temperature sender 2, Engine/motor control unit	1829
19. Brake pedal switch, Lambda probe, Engine/motor control unit, Lambda probe heater	1830
20. Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Coolant valve for cylinder head, Radiator fan, Radiator fan 2	1831
21. Control unit for NOx sender, Control unit 2 for NOx sender, Particulate sensor, Engine/motor control unit	1832
22. Engine/motor control unit	1833
23. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit	1834
24. Convenience system central control unit, Control unit for reducing agent metering system	1835
25. Delivery unit for reducing agent metering system, Tank sender for reducing agent, Temperature sender for reducing agent, Pressure sender for reducing agent metering system, Control unit for reducing agent metering system, Pump for reducing agent, Heater for reducing agent line (heater circuit 2)	1836
26. Delivery unit for reducing agent metering system, Reducing agent level sender, Reducing agent quality sensor, Control unit for reducing agent metering system, Heater for reducing agent tank (heater circuit 1)	1837
174 - 3.0l diesel engine , DHXA,DHXC	1838-1863
1. 3.0l diesel engine , DHXA,DHXC	1838
2. Battery, Starter, Airbag control unit, Battery monitor control unit, Battery isolation igniter, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	1839
3. Fuse holder B, Fuse carrier 1, Terminal 30 wiring junction 2	1840
4. Starter relay 1, Starter relay 2, Relay and fuse carrier 1, Fuse (50), Fuse holder B, Fuse carrier 2, Fuse carrier 4	1841
5. Automatic glow period control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	1842
6. Main relay, Engine/motor control unit, Fuse holder B, Fuse carrier 5	1843
7. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	1844
8. Oil level and oil temperature sender, Engine/motor control unit	1845
9. Air mass meter, Charge air temperature sender after charge air cooler, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve. Right electrohydraulic engine mounting	1846

solenoid valve	
10. Exhaust gas recirculation valve 1, Coolant temperature sender, Fuel temperature sender, Engine/motor control unit, Fuel metering valve	1847
11. Engine speed sender, Hall sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Fuel pressure regulating valve	1848
12. Oil temperature sender, Engine/motor control unit, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6, Valve for oil pressure control, Injector for reducing agent	1849
13. Throttle valve module, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Coolant valve for cylinder head, Coolant circulation pump	1850
14. Exhaust gas recirculation valve 2, Oil pressure sender, Exhaust gas recirculation temperature sensor, Engine/motor control unit	1851
15. Intake manifold pressure sender, Radiator outlet coolant temperature sender, Fuel pressure sender, Engine/motor control unit, Exhaust flap control unit	1852
16. Exhaust gas temperature sender 1, Fuel pressure sender for low pressure, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Pressure differential sender, Temperature sender for engine temperature regulation, Engine/motor control unit	1853
17. Control unit for NOx sender, Control unit 2 for NOx sender, Pressure differential sender 2, Engine/motor control unit	1854
18. Particulate sensor, Automatic gearbox control unit, Data bus diagnostic interface, Engine/motor control unit	1855
19. Lambda probe 1 before catalytic converter, Intake manifold flap control unit, Engine/motor control unit	1856
20. Engine/motor control unit, Turbocharger 1, Radiator fan, Radiator fan 2	1857
21. Brake pedal switch, ABS control unit, Engine/motor control unit	1858
22. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	1859
23. Fuel delivery unit, Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Air conditioner compressor	1860
24. Starter-alternator, Control unit for reducing agent metering system, Fuse holder F, Fuse carrier 2, Terminal 40 wiring junction, Starter-alternator coolant pump	1861
25. Delivery unit for reducing agent metering system, Control unit for reducing agent metering system, Heater for reducing agent line (heater circuit 2)	1862
26. Delivery unit for reducing agent metering system, Control unit for reducing agent metering system	1863
175 - 4.0l petrol engine , DCUE,DWRB	1864-1898
1. 4.0l petrol engine , DCUE,DWRB	1864
2. Battery, Airbag control unit, Battery monitor control unit, Power steering control unit, Battery isolation igniter	1865
3. Starter, Alternator with voltage regulator, Terminal 30 wiring junction, Jump start socket	1866
4. Fuse carrier 1	1867
5. Engine component power supply relay, Fuse carrier 1, Fuse carrier 2	1868
6. Relay and fuse carrier 1, Fuse carrier 4, Fuse (50)	1869
7. Main relay, Engine/motor control unit, Fuse carrier 5	1870
8. Engine/motor control unit	1871
9. Accelerator pedal module, Charge pressure sender, Steering column electronics control unit, Engine/motor control unit	1872
10. Engine/motor control unit	1873
11. Oil pressure switch, Oil temperature sender, Oil level and oil temperature sender, Engine/motor control unit, Piston cooling jet control valve, Overrun air recirculation valve for bank 2	1874
12. Charge pressure sender 2, Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plugs, Gearbox oil cooling pump	1875
13. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Ignition coil 5 with output stage, Ignition coil 6 with output stage	1876
14. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Ignition coil 7 with output stage, Ignition coil 8 with output stage	1877
15. Engine/motor control unit, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6, Injector, cylinder 7, Injector, cylinder 8, Fuel metering valve, Fuel metering valve 2	1878
16. Engine speed sender, Fuel pressure sender, Fuel pressure sender for low pressure, Fuel pressure sender 2, Engine/motor control unit, Switch valve for mechanical coolant pump	1879
17. Engine/motor control unit, Heater element for crankcase breather, Activated charcoal filter solenoid valve 1, Heater element 2 for crankcase breather, Crankcase breather valve, Overrun air recirculation valve for bank 1, Continued coolant circulation pump	1880
18. Map-controlled engine cooling system thermostat, Inlet cam actuator 1 for cylinder 2, Inlet cam actuator 1 for cylinder 3, Inlet cam actuator 1 for cylinder 5, Inlet cam actuator 1 for cylinder 8, Engine/motor control unit	1881
19. Exhaust cam actuator 1 for cvlinder 2. Exhaust cam actuator 1 for cvlinder 3. Exhaust cam	1882

actuator 1 for cylinder 5, Exhaust cam actuator 1 for cylinder 8, Engine/motor control unit	
20. Engine/motor control unit, Charge pressure control solenoid valve, Activated charcoal filter solenoid valve 2, Camshaft control valve 1, Camshaft control valve 2, Charge pressure control solenoid valve 2, Exhaust camshaft control valve 2	1883
21. Oil pressure sender, Radiator outlet coolant temperature sender, Engine temperature sender, Engine/motor control unit, Exhaust camshaft control valve 1, Valve for oil pressure control	1884
22. Hall sender, Hall sender 2, Hall sender 3, Hall sender 4, Engine/motor control unit	1885
23. Knock sensor 1, Knock sensor 2, Knock sensor 3, Knock sensor 4, Pressure differential sender for particulate filter, Pressure differential sender 2 for particulate filter, Engine/motor control unit	1886
24. Throttle valve module, Intake manifold sender, Intake manifold sender 2, Temperature sender for engine cover panel, Engine/motor control unit	1887
25. Throttle valve module 2, Tank breather pressure sensor 1, Tank breather pressure sensor 2, Engine/motor control unit	1888
26. Lambda probe 1 before catalytic converter, Lambda probe 2 before catalytic converter, Engine/motor control unit	1889
27. Lambda probe 1 after catalytic converter, Lambda probe 2 after catalytic converter, Dual exhaust gas temperature sensor 1, Engine/motor control unit	1890
28. Fuel tank leak detection module, Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	1891
29. Automatic gearbox control unit, Engine/motor control unit, Gearbox mounting valve 1, Gearbox oil cooling valve, Radiator fan, Radiator fan 2	1892
30. Brake pedal switch, ABS control unit, Engine/motor control unit, Gearbox mounting valve 2, Coolant circulation pump	1893
31. Data bus diagnostic interface, Engine/motor control unit	1894
32. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit, Engine/motor control unit	1895
33. Power unit mounting control unit, Power unit mounting actuator 1, Power unit mounting actuator 2	1896
34. Power unit mounting sender 1, Power unit mounting sender 2, Control unit for structure-borne sound, Power unit mounting control unit, Actuator for structure-borne sound	1897
35. Coolant shortage indicator sender, Onboard supply control unit, Air conditioner compressor	1898
176 - 4.0l diesel engine , DMVA,CZAA,CZAC	1899-1939
1. 4.0l diesel engine , DMVA,CZAA,CZAC	1899
2. Battery, Airbag control unit, Battery monitor control unit, Power steering control unit, Battery isolation igniter	1900
3. Starter, Alternator with voltage regulator, Suppression capacitor, Terminal 30 wiring junction, Jump start socket	1901
4. Fuse holder B, Fuse carrier 1	1902
5. Terminal 15 voltage supply relay, Fuse holder B, Fuse holder F, Fuse carrier 1, Fuse carrier 2, Fuse carrier 4	1903
6. Starter relay 1, Starter relay 2, Relay and fuse carrier 1, Fuse (50), Fuse holder B, Fuse carrier 2	1904
7. Automatic glow period control unit, Glow plug 1, Glow plug 4, Glow plug 6, Glow plug 7	1905
8. Glow period control unit 2, Glow plug 2, Glow plug 3, Glow plug 5, Glow plug 8	1906
9. Main relay, Engine/motor control unit, Fuse holder B, Fuse carrier 5	1907
10. Engine/motor control unit	1908
11. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit, Gearbox mounting valve 2	1909
12. Charge air recirculation module, Air mass meter, Engine/motor control unit	1910
13. Engine/motor control unit, Air conditioner compressor	1911
14. Air mass meter 2, Pressure differential sender, Engine/motor control unit	1912
15. Radiator outlet coolant temperature sender, Oil level and oil temperature sender, Exhaust gas temperature sender 2, Engine/motor control unit	1913
16. Exhaust cam actuator 1 for cylinder 3, Exhaust cam actuator 1 for cylinder 4, Exhaust cam actuator 1 for cylinder 6, Engine/motor control unit, Auxiliary pump for heating	1914
17. Exhaust cam actuator 1 for cylinder 7, Engine/motor control unit, Fuel metering valve	1915
18. Inlet cam actuator 1 for cylinder 1, Exhaust cam actuator 1 for cylinder 1, Exhaust cam actuator 1 for cylinder 2, Exhaust cam actuator 1 for cylinder 5, Engine/motor control unit	1916
19. Inlet cam actuator 1 for cylinder 2, Inlet cam actuator 1 for cylinder 3, Inlet cam actuator 1 for cylinder 4, Inlet cam actuator 1 for cylinder 5, Engine/motor control unit	1917
20. Inlet cam actuator 1 for cylinder 6, Inlet cam actuator 1 for cylinder 7, Inlet cam actuator 1 for cylinder 8, Exhaust cam actuator 1 for cylinder 8, Engine/motor control unit, Injector, cylinder 1	1918
21. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6, Injector, cylinder 7, Injector, cylinder 8	1919
22. Map-controlled engine cooling system thermostat, Intake air temperature sender, Engine/motor control unit. Pressure reduction valve. Exhaust gas recirculation cooling bypass valve. Exhaust gas	1920

recirculation cooling bypass valve 2	
23. Intake manifold flap control unit, Intake manifold flap control unit 2, Engine/motor control unit, Fuel pressure regulating valve	1921
24. Throttle valve module, Throttle valve module 2, Engine/motor control unit, Injector for reducing agent	1922
25. Fuel pressure sender, Fuel pressure sender for low pressure, Pressure sender for exhaust gas recirculation, Engine/motor control unit, Turbocharger 1 control unit	1923
26. Engine speed sender, Hall sender, Sender 1 for turbocharger speed, Sender 2 for turbocharger speed, Engine/motor control unit	1924
27. Oil temperature sender, Oil pressure sender, Coolant temperature sender, Intake manifold pressure sender, Fuel temperature sender, Engine/motor control unit	1925
28. Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Exhaust gas temperature sender 1 for bank 2, Intake air temperature sender 2, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Temperature sender for engine cover panel, Engine/motor control unit	1926
29. Exhaust gas recirculation valve 1, Engine/motor control unit, Turbocharger 2 control unit, Exhaust gas recirculation control motor	1927
30. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Coolant temperature sender 3, Engine/motor control unit, Valve for oil pressure control	1928
31. Water level sender, Engine/motor control unit, Radiator fan, Radiator fan 2	1929
32. Control unit for NOx sender, Engine/motor control unit, Control unit for electric compressor, Electric compressor bypass flap valve, Electric compressor coolant pump	1930
33. Control unit 2 for NOx sender, Particulate sensor, Data bus diagnostic interface, Engine/motor control unit	1931
34. Brake pedal switch, ABS control unit, Automatic gearbox control unit, Engine/motor control unit, Gearbox mounting valve 1	1932
35. Fuel delivery unit, Fuel pump control unit, Terminal 40 wiring junction	1933
36. Fuel delivery unit, Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit	1934
37. Control unit for structure-borne sound, Engine sound generator control unit, Actuator for structure-borne sound, Actuator 1 for engine sound generator, Actuator 2 for engine sound generator	1935
38. Delivery unit for reducing agent metering system, Control unit for reducing agent metering system	1936
39. Delivery unit for reducing agent metering system, Control unit for reducing agent metering system	1937
40. Reducing agent quality sensor, Control unit for reducing agent metering system, Power unit mounting control unit, Power unit mounting actuator 1, Heater for reducing agent line (heater circuit 2)	1938
41. Power unit mounting sender 1, Power unit mounting sender 2, Power unit mounting control unit, Power unit mounting actuator 2	1939
177 - Adaptive cruise control , (8T4),(8T5)	1940-1941
1. Adaptive cruise control , (8T4),(8T5)	1940
2. ABS control unit, Adaptive cruise control unit, Heater element for adaptive cruise control radar sensor	1941
178 - 2.0l petrol engine , DNEA	1942-1967
1. 2.0l petrol engine , DNEA	1942
2. Battery, Battery monitor control unit, Battery isolation igniter	1943
3. Starter, Alternator with voltage regulator, Suppression capacitor, Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	1944
4. Terminal 15 voltage supply relay, Starter relay 1, Starter relay 2, Relay and fuse carrier 1	1945
5. Fuse carrier 1	1946
6. Main relay, Engine component power supply relay	1947
7. Engine/motor control unit	1948
8. Accelerator pedal module, Engine/motor control unit	1949
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 4 with output stage, Spark plug connector	1950
10. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1951
11. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	1952
12. Engine/motor control unit, Coolant circulation pump	1953
13. Coolant temperature sender, Exhaust gas temperature sender 3, Exhaust gas temperature sender 4, Engine/motor control unit, Air filter bypass flap valve	1954
14. Engine speed sender, Intake manifold pressure sender, Hall sender 3, Engine/motor control unit	1955
15. Charge pressure sender, Tank breather pressure sensor 1, Engine/motor control unit, Fuel pressure regulating valve. Actuator for engine temperature regulation	1956

16. Throttle valve module, Knock sensor 1, Engine/motor control unit, Charge pressure positioner	1957
17. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	1958
18. Cam adjustment actuator 8, Fuel tank leak detection module, Sender 2 for secondary air pressure, Pressure differential sender for particulate filter, Engine/motor control unit	1959
19. Secondary air pump relay, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve, Continued coolant circulation pump, Secondary air pump motor	1960
20. Engine/motor control unit, Intake manifold flap valve, Valve for oil pressure control, Coolant valve for gearbox, Radiator blind control motor	1961
21. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Turbocharger air recirculation valve, Piston cooling jet control valve	1962
22. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Data bus diagnostic interface, Engine/motor control unit	1963
23. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	1964
24. Engine/motor control unit, Radiator fan, Radiator fan 2	1965
25. Brake pedal switch, Fuel delivery unit, Fuel pump control unit, Engine/motor control unit	1966
26. Fuel delivery unit, Coolant shortage indicator sender, Onboard supply control unit, Air conditioner compressor regulating valve	1967
179 - 3.0l diesel engine , DPXA,DPXB	1968-1992
1. 3.0l diesel engine , DPXA,DPXB	1968
2. Battery, Starter, Airbag control unit, Battery monitor control unit, Battery isolation igniter, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket	1969
3. Fuse holder B, Fuse carrier 1, Terminal 30 wiring junction 2	1970
4. Starter relay 1, Starter relay 2, Fuse holder B, Relay and fuse carrier 1, Fuse carrier 1, Fuse carrier 2, Fuse carrier 4, Fuse (50)	1971
5. Automatic glow period control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4, Glow plug 5, Glow plug 6	1972
6. Coolant temperature sender for charge air cooler, Main relay, Engine/motor control unit, Fuse holder B, Fuse carrier 5	1973
7. Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	1974
8. Engine/motor control unit, Injector 2 for reducing agent, Connection 12 (LIN bus) in main wiring harness	1975
9. Fuel temperature sender, Oil level and oil temperature sender, Charge air temperature sender after charge air cooler, Engine/motor control unit, Charge air cooling pump	1976
10. Exhaust gas recirculation valve 1, Coolant temperature sender, Coolant temperature sender 2, Engine/motor control unit, Fuel metering valve	1977
11. Map-controlled engine cooling system thermostat, Hall sender, Engine/motor control unit, Fuel pressure regulating valve, Coolant valve for cylinder head, Coolant circulation pump	1978
12. Temperature sender for engine temperature regulation, Engine/motor control unit, Injector, cylinder 4, Injector, cylinder 5, Injector, cylinder 6	1979
13. Oil temperature sender 2, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	1980
14. Throttle valve module, Exhaust gas recirculation valve 2, Exhaust gas recirculation temperature sensor, Exhaust gas temperature sender 1, Engine/motor control unit	1981
15. Oil pressure sender, Charge pressure sender, Fuel pressure sender, Exhaust gas temperature sender 2, Engine/motor control unit	1982
16. Engine speed sender, Fuel pressure sender for low pressure, Pressure differential sender 2, Engine/motor control unit, Valve for oil pressure control, Injector for reducing agent	1983
17. Control unit 2 for NOx sender, Exhaust gas temperature sender 3, Pressure differential sender, Charge air temperature sender before charge air cooler, Engine/motor control unit	1984
18. Control unit for NOx sender, Control unit 3 for NOx sender, Particulate sensor, Data bus diagnostic interface, Engine/motor control unit	1985
19. Intake manifold flap control unit, ABS control unit, Data bus diagnostic interface, Engine/motor control unit	1986
20. Exhaust gas temperature sender 4, Engine/motor control unit, Exhaust flap control unit, Turbocharger 1	1987
21. Air mass meter, Engine/motor control unit, Radiator fan, Radiator fan 2	1988
22. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Right electrohydraulic engine mounting solenoid valve	1989
23. Brake pedal switch, Automatic gearbox control unit, Engine/motor control unit, Radiator blind control motor. Earth connection 15. in main wiring harness	1990

24. Fuel delivery unit, Convenience system central control unit, Fuel pump control unit, Engine/motor control unit	1991
25. Coolant shortage indicator sender, Convenience system central control unit, Onboard supply control unit, Air conditioner compressor	1992
180 - MMI (information electronics 1)	1993-2002
1. MMI (information electronics 1)	1993
2. Control unit 1 for information electronics, Fuse holder C	1994
3. Driver side volume regulator, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Display unit 2 for front information display and operating unit control unit	1995
4. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Display unit 2 for front information display and operating unit control unit	1996
5. Control unit in dash panel insert, Control unit 1 for information electronics, TV tuner	1997
6. Data bus diagnostic interface, Control unit 1 for information electronics, Control unit for head-up display	1998
7. Control unit 1 for information electronics, Aerial amplifier 2, Aerial amplifier 3	1999
8. Control unit 1 for information electronics, Aerial amplifier	2000
9. Control unit 1 for information electronics	2001
10. Control unit 1 for information electronics, Roof aerial	2002
181 - Infotainment MOST bus	2003-2005
1. Infotainment MOST bus	2003
2. Connection (diagnosis), in interior wiring harness	2004
3. TV tuner	2005
182 - Dash panel insert , (9S8),(9S9)	2006-2009
1. Dash panel insert , (9S8),(9S9)	2006
2. Control unit in dash panel insert, Data bus diagnostic interface	2007
3. Control unit in dash panel insert, Control unit 1 for information electronics	2008
4. Control unit in dash panel insert, Control unit 1 for information electronics, Control unit for night vision system, Control unit for head-up display	2009
183 - Dash panel insert , (9S7)	2010-2012
1. Dash panel insert , (9S7)	2010
2. Control unit in dash panel insert, Data bus diagnostic interface	2011
3. Control unit in dash panel insert, Control unit for night vision system	2012
184 - Sound system , (9VD)	2013-2016
1. Sound system , (9VD)	2013
2. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Centre loudspeaker	2014
3. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Front right treble loudspeaker, Front right bass loudspeaker, Subwoofer	2015
4. Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	2016
185 - Sound system , (9VS)	2017-2023
1. Sound system , (9VS)	2017
2. Digital sound package control unit, Right effect loudspeaker	2018
3. Digital sound package control unit, Front left door loudspeaker, Front right door loudspeaker, Front left treble loudspeaker, Front right treble loudspeaker	2019
4. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	2020
5. Digital sound package control unit, Emergency call module control unit and communication unit, Subwoofer, Front left treble loudspeaker 2, Front right treble loudspeaker 2	2021
6. Control unit 1 for information electronics, Left effect loudspeaker	2022
7. Control unit 1 for information electronics, Internal microphone, Microphone unit in front roof module, Centre loudspeaker, Centre loudspeaker 2, Front left mid-range loudspeaker 2, Front right mid-range loudspeaker 2	2023
186 - Sound system , (8RF)	2024-2032
1. Sound system , (8RF)	2024
2. Digital sound package control unit, Front left treble loudspeaker, Centre loudspeaker, Centre loudspeaker 2, Control motor for front left treble speaker	2025
3. Digital sound package control unit, Rear left treble loudspeaker, Rear left loudspeaker, Left effect loudspeaker, Front left treble loudspeaker 2, Front left mid-range loudspeaker 2	2026
4. Digital sound package control unit, Rear right treble loudspeaker, Front right treble loudspeaker, Front right treble loudspeaker 2, Front right mid-range loudspeaker 2, Control motor for front right treble speaker	2027
5. Digital sound package control unit, Emergency call module control unit and communication unit, Rear right loudspeaker. Subwoofer. Rear right treble loudspeaker 2	2028

6. Digital sound package control unit, Front left door loudspeaker, Front right door loudspeaker	2029
7. Digital sound package control unit, Rear left door loudspeaker, Rear right door loudspeaker	2030
8. Control unit 1 for information electronics, Microphone unit in front roof module	2031
9. Control unit 1 for information electronics	2032
187 - Communication , (0K3),(B1P)	2033-2035
1. Communication , (0K3),(B1P)	2033
2. Data bus diagnostic interface, Interface control unit for telematics, Coupling point 1 for high-voltage battery regulation	2034
3. Telephone and telematics control unit, Interface control unit for telematics, Aerial module for telephone and telematics	2035
188 - Mobile telephone systems , (9ZE),(9ZV),(9ZX)	2036-2039
1. Mobile telephone systems , (9ZE),(9ZV),(9ZX)	2036
2. Charging unit 1 for mobile devices, Near field communication control unit 2	2037
3. Aerial amplifier for mobile telephone	2038
4. Control unit 1 for information electronics, Aerial amplifier for mobile telephone, LTE aerial 3	2039
189 - Interface for external use , (IU3),(IU4)	2040-2041
1. Interface for external use , (IU3),(IU4)	2040
2. Control unit 1 for information electronics, Control unit with Android operating system, Fuse holder C	2041
190 - Communication , (IV1),(IV2),(IV3),(IV4),(IV5),(IV6),(IV7),(IV8),(IV9),(JE0),(JE1),(JE3),(JE4)	2042-2049
1. Communication , (IV1),(IV2),(IV3),(IV4),(IV5),(IV6),(IV7),(IV8),(IV9),(JE0),(JE1),(JE3),(JE4)	2042
2. Data bus diagnostic interface, Emergency call module control unit and communication unit	2043
3. Emergency call module control unit and communication unit, Loudspeaker for emergency call module, Wireless data transfer aerial 2	2044
4. Emergency call module control unit and communication unit, Microphone unit in front roof module, Emergency call module aerial	2045
5. Emergency call module control unit and communication unit, Aerial amplifier, Aerial amplifier 3	2046
6. Emergency call module control unit and communication unit, Roof aerial, Emergency call module aerial 2	2047
7. Emergency call module control unit and communication unit, Roof aerial	2048
8. Digital sound package control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Emergency call module aerial 3	2049
191 - Reducing agent metering system	2050-2053
1. Reducing agent metering system	2050
2. Control unit for reducing agent metering system, Fuse holder F, Fuse carrier 2	2051
3. Delivery unit for reducing agent metering system, Reducing agent quality sensor, Data bus diagnostic interface, Control unit for reducing agent metering system, Heater for reducing agent line (heater circuit 2)	2052
4. Delivery unit for reducing agent metering system, Control unit for reducing agent metering system	2053
193 - High-voltage battery system , (0K3)	2054-2059
1. High-voltage battery system , (0K3)	2054
2. Battery module 1, Battery module 2, Battery module 3	2055
3. Battery module 2, Battery module 3, Battery module 4, Battery module 5	2056
4. Battery module 5, Battery module 6, Coupling point on high-voltage battery	2057
5. Battery module 6, Battery module 7, Battery module 8, Coupling point on high-voltage battery	2058
6. Battery module 7, Battery module 8	2059
194 - Engine sound generator , (GM4)	2060-2061
1. Engine sound generator , (GM4)	2060
2. Data bus diagnostic interface, Engine sound generator control unit, Actuator 1 for engine sound generator	2061
195 - Toll detection system , (9B1),(B1P)	2062-2063
1. Toll detection system , (9B1),(B1P)	2062
2. Toll collection sender	2063
196 - 2.0l petrol engine , DUVA	2064-2089
1. 2.0l petrol engine , DUVA	2064
2. Battery, Airbag control unit, Battery monitor control unit, Battery isolation igniter	2065
3. Starter, Alternator with voltage regulator, Terminal 30 wiring junction	2066
4. Terminal 15 voltage supply relay, Starter relay 1, Starter relay 2, Fuse (50)	2067
5. Main relay, Engine component power supply relay, Fuse carrier 1	2068
6. Fuse carrier 1	2069
7. Automatic gearbox control unit, Engine/motor control unit	2070
8. Cruise control system switch, Accelerator pedal module, Steering column electronics control unit, Engine/motor control unit	2071
9. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage	2072
10. Engine/motor control unit. Injector. cvlinder 1. Iniection. cvlinder 2. Iniection. cvlinder 3.	2073

Injector, cylinder 4	
11. Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit, Piston cooling jet control valve	2074
12. Engine/motor control unit, Coolant circulation pump	2075
13. Coolant temperature sender, Radiator outlet coolant temperature sender, Hall sender 3, Engine/motor control unit, Air filter bypass flap valve	2076
14. Intake manifold sender, Engine speed sender, Dual exhaust gas temperature sensor 1, Engine/motor control unit	2077
15. Charge pressure sender, Tank breather pressure sensor 1, Engine/motor control unit, Fuel metering valve, Actuator for engine temperature regulation	2078
16. Throttle valve module, Charge pressure control module, Knock sensor 1, Position sender for charge pressure positioner, Engine/motor control unit	2079
17. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Cam adjustment actuator 7, Engine/motor control unit	2080
18. Cam adjustment actuator 8, Fuel tank leak detection module, Sender 2 for secondary air pressure, Pressure differential sender for particulate filter, Engine/motor control unit	2081
19. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Secondary air inlet valve, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Valve for oil pressure control	2082
20. Secondary air pump relay, Engine/motor control unit, Left electrohydraulic engine mounting solenoid valve, Continued coolant circulation pump, Secondary air pump motor	2083
21. Engine/motor control unit, Right electrohydraulic engine mounting solenoid valve, Coolant valve for gearbox, Radiator blind control motor	2084
22. Oil pressure switch, Oil pressure switch for reduced oil pressure, Stage 3 oil pressure switch, Data bus diagnostic interface, Engine/motor control unit	2085
23. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Oil level and oil temperature sender, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	2086
24. Engine/motor control unit, Radiator fan, Radiator fan, Radiator fan 2, Radiator fan 2	2087
25. Brake light switch, Brake pedal switch, Fuel delivery unit, Brake pedal position sender, ABS control unit, Fuel pump control unit, Engine/motor control unit	2088
26. Fuel delivery unit, Coolant shortage indicator sender, Fuel gauge sender 2, Convenience system central control unit, Onboard supply control unit, Air conditioner compressor regulating valve	2089
197 - Seat ventilation , (L0L),(4D3),(4D8)	2090-2093
1. Seat ventilation , (L0L),(4D3),(4D8)	2090
2. Onboard supply control unit, Coupling point for front left seat, Coupling point for front right seat	2091
3. Front left seat backrest fan 1, Front left seat cushion fan 1	2092
4. Front right seat backrest fan 1, Front right seat cushion fan 1	2093
198 - Seat ventilation , (L0L),(4D3),(4D8)	2094-2097
1. Seat ventilation , (L0L),(4D3),(4D8)	2094
2. Onboard supply control unit, Coupling point for front left seat, Coupling point for front right seat	2095
3. Front left seat backrest fan 1, Front left seat cushion fan 1	2096
4. Front right seat backrest fan 1, Front right seat cushion fan 1	2097
199 - Seat ventilation , (4D3),(4D8),(L0R)	2098-2101
1. Seat ventilation , (4D3),(4D8),(L0R)	2098
2. Onboard supply control unit, Coupling point for front left seat, Coupling point for front right seat	2099
3. Front left seat backrest fan 1, Front left seat cushion fan 1	2100
4. Front right seat backrest fan 1, Front right seat cushion fan 1	2101
200 - Seat ventilation , (4D3),(4D8),(L0R)	2102-2105
1. Seat ventilation , (4D3),(4D8),(L0R)	2102
2. Onboard supply control unit, Coupling point for front left seat, Coupling point for front right seat	2103
3. Front left seat backrest fan 1, Front left seat cushion fan 1	2104
4. Front right seat backrest fan 1, Front right seat cushion fan 1	2105
201 - High-voltage battery system , (0K3)	2106-2110
1. High-voltage battery system , (0K3)	2106
2. Battery regulation control unit, Coupling point on high-voltage battery	2107
3. Battery regulation control unit, Coupling point on high-voltage battery	2108
4. Battery regulation control unit, High-voltage battery isolation igniter, Switching unit for high-voltage battery, Charging unit fuse, High-voltage system fuse 1	2109
5. Battery regulation control unit, Battery modules control unit, Battery modules control unit 2, Battery modules control unit 3. Battery modules control unit 4. Switching unit for high-voltage	2110

battery	
202 - High-voltage system , (0K3)	2111-2128
1. High-voltage system , (0K3)	2111
2. Battery, Battery monitor control unit, Battery isolation igniter	2112
3. Radiator fan single fuse, Radiator fan fuse for 2nd speed, Terminal 30 wiring junction, Terminal 30 wiring junction 2, Jump start socket, Radiator fan, Radiator fan 2	2113
4. Terminal 30 wiring junction 3	2114
5. Fuse holder F, Fuse carrier 4	2115
6. Voltage converter, Maintenance connector for high-voltage system	2116
7. Coupling point on high-voltage battery	2117
8. Coolant temperature sender 1 for high-voltage battery, Coolant temperature sender 2 for high-voltage battery, High-voltage battery coolant pump relay, Coupling point on high-voltage battery, Coolant pump for high-voltage battery	2118
9. Hybrid battery unit	2119
10. Hybrid battery unit, Control unit for air conditioner compressor, High-voltage heater (PTC) control unit, Electrical air conditioner compressor, High-voltage heater (PTC)	2120
11. Control unit for air conditioner compressor, High-voltage heater (PTC) control unit, Thermal management control unit	2121
12. DC/AC converter for drive motor, Power and control electronics for electric drive, Electric drive control unit, Power unit mounting control unit	2122
13. Drive motor temperature sender, Drive motor rotor position sender 1, Power and control electronics for electric drive, Three-phase current drive	2123
14. Power and control electronics for electric drive, Three-phase current drive, Electric drive motor	2124
15. Charging unit 1 for high-voltage battery, Module for battery charge selector buttons	2125
16. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 1	2126
17. Charging unit 1 for high-voltage battery, Temperature sender for charging socket 1, High-voltage battery charging socket 1	2127
18. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging socket lock 1, Data bus diagnostic interface	2128
203 - Engine sound generator , (GM4)	2129-2130
1. Engine sound generator , (GM4)	2129
2. Data bus diagnostic interface, Engine sound generator control unit, Actuator 1 for engine sound generator	2130
204 - Headlights , (8EX)	2131-2134
1. Headlights , (8EX)	2131
2. Rear left vehicle level sender, Convenience system central control unit, Onboard supply control unit, Fuse holder B, Fuse carrier 3	2132
3. Output module 1 for left LED headlight, Onboard supply control unit, Front left headlight, Left headlight range control motor	2133
4. Output module 1 for right LED headlight, Onboard supply control unit, Front right headlight, Right headlight range control motor	2134
205 - Tail light clusters , (8SC),(AV0),(AV1),(AV4)	2135-2137
1. Tail light clusters , (8SC),(AV0),(AV1),(AV4)	2135
2. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	2136
3. Convenience system central control unit, Left tail light cluster, Right tail light cluster	2137
206 - Tail light clusters , (8SC),(AV2)	2138-2141
1. Tail light clusters , (8SC),(AV2)	2138
2. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	2139
3. Convenience system central control unit, Left tail light cluster	2140
4. Convenience system central control unit, Right tail light cluster	2141
207 - Tail light clusters , (8VM),(AV0),(AV1),(AV4)	2142-2144
1. Tail light clusters , (8VM),(AV0),(AV1),(AV4)	2142
2. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	2143
3. Convenience system central control unit, Left tail light cluster, Right tail light cluster	2144
208 - Tail light clusters , (8VM),(AV2)	2145-2148
1. Tail light clusters , (8VM),(AV2)	2145
2. Convenience system central control unit, Left tail light cluster 2, Right tail light cluster 2	2146
3. Convenience system central control unit, Left tail light cluster	2147
4. Convenience system central control unit, Right tail light cluster	2148
209 - Thermal management , (0K3)	2149-2154
1. Thermal management , (0K3)	2149
2. Data bus diagnostic interface, Thermal management control unit, Coolant changeover valve 1, Refrigerant shut-off valve	2150
3. Coolant temperature sender 5 for thermal management, Coolant temperature sender 7 for thermal management. Coolant temperature sender 16 for thermal management. Thermal management control unit.	2151

Coolant changeover valve 2, Coolant changeover valve 3	
4. Coolant shortage indicator sender 2, Coolant temperature sender 1 for thermal management, Coolant temperature sender 3 for thermal management, Coolant temperature sender 4 for thermal management, Coolant temperature sender 6 for thermal management, Coolant temperature sender 8 for thermal management, Thermal management control unit	2152
5. Thermal management control unit, Thermal management coolant pump relay, Radiator fan, Radiator fan 2, Thermal management coolant pump 2, Thermal management coolant pump 4	2153
6. Refrigerant pressure and temperature sender, Refrigerant pressure and temperature sender 2, Thermal management control unit, Refrigerant expansion valve 2	2154
801 -- Fitting locations: Earth points - 1	2155-2171
1. Earth points	2155-2171
1.1 Earth points in front part	2155-2163
1.1.1 Earth points in front part, all models	2155
1.1.2 Earth points in front part, models with 48-volt onboard supply system (VH2/VH3), before product upgrade	2156
1.1.3 Earth points in front part, models with 48-volt onboard supply system (VH2/VH3), from product upgrade	2157
1.1.4 Earth points in front part, on engine, right, except for 6 cylinder diesel engine DHXA, DHXB, DHXC, DPXA, DPXB	2158
1.1.5 Earth points in front part, on front of engine, only for 6 cylinder diesel engine DHXA, DHXB, DHXC, DPXA, DPXB	2159
1.1.6 Earth points in front part, above on engine, 4 cylinder petrol engine	2160
1.1.7 Earth points in front part, above on engine, 6 cylinder petrol engine CREC	2161
1.1.8 Earth points in front part, above on engine, 6 cylinder petrol engine DCBD, DCBE	2162
1.1.9 Earth points in front part, above on engine, 8 cylinder petrol engine	2163
1.2 Earth points in middle part	2164-2167
1.2.1 Earth points in middle part, view from left	2165
1.2.2 Earth points in middle part, view from right	2165
1.2.3 Earth points in middle part, earth point on steering wheel	2166
1.2.4 Earth points in middle part, earth point on front passenger seat	2167
1.3 Earth points in rear part	2168-2171
1.3.1 Earth points in rear part, view from left, all models	2169
1.3.2 Earth points in rear part, view from left, models with 48-volt onboard supply system (VH2/VH3)	2169
1.3.3 Earth points in rear part, view from right	2170-2171
802 -- Fitting locations: Fuses - 1	2172-2240
1. Fuses	2172-2240
1.1 Overview of fuses	2172-2174
1.2 Fitting location, relay and fuse carrier 1 -SR1-	2175
1.3 Fitting location, relay and fuse carrier 2 -SR2- with fuse holder B -SB-	2176-2180
1.3.1 Fitting location, relay and fuse carrier 2 -SR2- with fuse holder B -SB-, left-hand drive models	2177
1.3.2 Fitting location, relay and fuse carrier 2 -SR2- with fuse holder B -SB-, right-hand drive models	2178-2180
1.4 Fuse assignment on fuse holder B -SB-	2181-2208
1.4.1 Fuse assignment, fuse carrier 1 -ST1-, brown, models with 4-cylinder petrol engine, before product upgrade	2181-2183
1.4.2 Fuse assignment, fuse carrier 1 -ST1-, brown, models with 4-cylinder petrol engine, from product upgrade	2184-2185
1.4.3 Fuse assignment, fuse carrier 1 -ST1-, brown, models with 6-cylinder petrol engine, before product upgrade	2186
1.4.4 Fuse assignment, fuse carrier 1 -ST1-, brown, models with 6-cylinder petrol engine, from product upgrade	2187-2188
1.4.5 Fuse assignment, fuse carrier 1 -ST1-, brown, models with 6-cylinder diesel engine, before product upgrade	2189-2190
1.4.6 Fuse assignment, fuse carrier 1 -ST1-, brown, models with 6-cylinder diesel engine, from product upgrade	2191
1.4.7 Position of fuses, fuse carrier 1 -ST1-, brown, models with 8-cylinder petrol engine	2192-2193
1.4.8 Fuse assignment, fuse carrier 1 -ST1-, brown, models with 8-cylinder diesel engine, before product upgrade	2194-2196
1.4.9 Fuse assignment, fuse carrier 1 -ST1-, brown, models with 8-cylinder diesel engine, from product upgrade	2197
1.4.10 Fuse assignment, fuse carrier 2 -ST2-, red, before product upgrade	2198-2199
1.4.11 Fuse assignment, fuse carrier 2 -ST2-, red, from product upgrade	2200
1.4.12 Fuse assignment, fuse carrier 3 -ST3-, black, before product upgrade	2201
1.4.13 Fuse assignment, fuse carrier 3 -ST3-, black, from product upgrade	2202
1.4.14 Fuse assignment, fuse carrier 4 -ST4-, brown, before product upgrade	2203-2204

1.4.15 Fuse assignment, fuse carrier 4 -ST4-, brown, from product upgrade	2205
1.4.16 Fuse assignment, fuse carrier 5 -ST5-, red, before product upgrade	2206-2207
1.4.17 Fuse assignment, fuse carrier 5 -ST5-, red, from product upgrade	2208
1.5 Fitting location of fuse holder C -SC-	2209
1.6 Fuse assignment, fuse holder C -SC-	2210-2212
1.6.1 Fuse assignment, fuse holder C -SC-, before product upgrade	2211
1.6.2 Fuse assignment, fuse holder C -SC-, from product upgrade	2212
1.7 Fitting location Relay and fuse carrier 3 -SR3- with fuse holder F -SF-	2213-2215
1.7.1 Fitting location, relay and fuse carrier 3 -SR3- with fuse holder F -SF-, models without high-voltage system (0K0/0K4)	2213-2214
1.7.2 Fitting location, Relay and fuse carrier 3 -SR3- with fuse holder F -SF-, only models with high-voltage system (0K3)	2215
1.8 Fuse assignment on fuse holder F -SF-	2216-2227
1.8.1 Fuse assignment, fuse carrier 1 -ST1-, black, before product upgrade	2217
1.8.2 Fuse assignment, fuse carrier 1 -ST1-, black, from product upgrade	2218
1.8.3 Fuse assignment, fuse carrier 2 -ST2-, red, before product upgrade	2219
1.8.4 Fuse assignment, fuse carrier 2 -ST2-, red, from product upgrade	2220
1.8.5 Fuse assignment, fuse carrier 3 -ST3-, brown, before product upgrade	2221-2222
1.8.6 Fuse assignment, fuse carrier 3 -ST3-, brown, from product upgrade	2223
1.8.7 Fuse assignment, fuse carrier 4 -ST4-, red, before product upgrade	2224
1.8.8 Fuse assignment, fuse carrier 4 -ST4-, red, from product upgrade	2225-2226
1.8.9 Fuse assignment, fuse carrier 5 -ST5-, brown, before product upgrade	2227
1.9 Fitting location, main fuse carrier/battery isolation igniter -N253- on battery -A-	2228-2230
1.9.1 Fitting location of main fuse carrier on battery -A-, models without high-voltage system (0K0), before product upgrade	2228
1.9.2 Fitting location, battery isolation igniter -N253- on battery -A-, models without high-voltage system (0K0/0K4), from product upgrade	2229
1.9.3 Fitting location, main fuse carrier/battery isolation igniter -N253- on battery -A-, models with high-voltage system (0K3)	2230
1.10 Fitting location of wiring junction -TV1-	2231-2233
1.10.1 Fitting location, wiring junction -TV1-, models without 48-volt system (VH0)	2232
1.10.2 Fitting location, wiring junction -TV1-, models with 48-volt system (VH2/VH3), before product upgrade	2232
1.10.3 Fitting location, wiring junction -TV1-, models with 48-volt system (VH2), from product upgrade	2233
1.11 Fitting location, terminal 30 wiring junction -TV2-/Terminal 30 wiring junction 2 -TV22-	2234
1.12 Fitting location, terminal 30 wiring junction 3 -TV28-	2235-2236
1.12.1 Fitting location, terminal 30 wiring junction 3 -TV28-, models with high-voltage system (0K3)	2236
1.12.2 Fitting location, terminal 30 wiring junction 3 -TV28-, models with alternative drive system (0K4)	2236
1.13 Fitting location, terminal 40 wiring junction -TV66-	2237
1.14 Fitting location, terminal 40 wiring junction 2 -TV67-	2238-2240
1.14.1 Fitting location of wiring junction 2 for terminal 40 -TV67-, 5-seater models (3NM/5KA)	2239
1.14.2 Fitting location of wiring junction 2 for terminal 40 -TV67-, 7-seater models (5KL)	2239-2240
803 - - Fitting locations: Relays - 1	2241-2246
1. Relays	2241-2246
1.1 Overview of relay carriers	2241
1.2 Fitting location, relay and fuse carrier 1 -SR1-	2241
1.3 Fitting location, relay and fuse carrier 2 -SR2-	2242-2243
1.3.1 Fitting location, relay and fuse carrier 2 -SR2-, left-hand drive models	2242
1.3.2 Fitting location, relay and fuse carrier 2 -SR2-, right-hand drive models	2243
1.4 Fitting location, relay and fuse carrier 3 -SR3-	2244-2246
1.4.1 Fitting location, relay and fuse carrier 3 -SR3-, models without high-voltage system (0K0/0K4)	2244
1.4.2 Fitting location, relay and fuse carrier 3 -SR3-, models with high-voltage system (0K3)	2245-2246
804 - -Fitting locations: Control units in front part of vehicle - 1	2247-2328
1. Control units in front part of vehicle	2247-2328
1.1 Overview of control units in front part of vehicle	2247-2251
1.2 Overview of additional control units in front part of vehicle for models with high-voltage system (0K3)	2252
1.3 Fitting location of particle sensor -G784-	2252-2253
1.4 Fitting location, control unit for NOx sender -GX30-	2254-2257
1.4.1 Fitting location, NOx sender control unit -GX30-, models without high voltage system (0K0)	2254-2255
1.4.2 Fitting location, NOx sender control unit -GX30-, models with high voltage system (0K3)	2256-2257
1.5 Fitting location, control unit 2 for NOx sender -GX46-	2258-2261
1.5.1 Fitting location, control unit 2 for NOx sender -GX46-, models except engine code DPXA, DPXB	2258-2259
1.5.2 Fitting location. control unit 2 for NOx sender -GX46-. models with engine code DPXA. DPXB	2260-2261

1.6 Fitting location, ABS control unit -J104-	2262-2264
1.7 Fitting location automatic glow period control unit -J179-	2265-2274
1.7.1 Fitting location, automatic glow period control unit -J179-, 6-cylinder diesel engine, left-hand drive, except engine code DHXA, DHXC, DPXA, DPXB	2265-2266
1.7.2 Fitting location, automatic glow period control unit -J179-, 6-cylinder diesel engine, right-hand drive, except engine code DHXA, DHXC, DPXA, DPXB	2267-2268
1.7.3 Fitting location, automatic glow period control unit -J179-, 6-cylinder diesel engine, engine code DHXA, DHXC	2269-2270
1.7.4 Fitting location, automatic glow period control unit -J179-, 6-cylinder diesel engine, engine code DPXA, DPXB	2271-2272
1.7.5 Fitting location, automatic glow period control unit -J179-, 8-cylinder diesel engine	2273-2274
1.8 Fitting location automatic gearbox control unit -J217-	2275-2276
1.9 Fitting location, auxiliary heater control unit -J364-	2277-2278
1.10 Fitting location, control unit for wiper motor -J400-	2279-2280
1.11 Fitting location, adaptive cruise control unit -J428-	2281-2283
1.11.1 Fitting location, adaptive cruise control unit -J428-, before product upgrade	2281-2282
1.11.2 Fitting location, adaptive cruise control unit -J428-, from product upgrade	2283
1.12 Fitting location, power steering control unit -J500-	2284-2285
1.13 Fitting location, engine control unit -J623-	2286-2288
1.13.1 Fitting location, engine control unit -J623-, 196-pin	2286
1.13.2 Fitting location, engine control unit -J623-, 280-pin	2287
1.13.3 Fitting location, engine control unit -J623-, 315-pin	2288
1.14 Fitting location, glow period control unit 2 -J703-	2289
1.15 Fitting location, control unit for air conditioning compressor -J842-	2290-2291
1.16 Fitting location, high-voltage heater (PTC) control unit -J848-	2292
1.17 Fitting location, control unit 2 for adaptive cruise control -J850-	2293-2294
1.18 Fitting location, control unit for structure-borne sound -J869-	2295-2296
1.19 Fitting location, roll stabiliser control unit -J924-	2297-2298
1.20 Fitting location, power unit mounting control unit -J931-	2299-2300
1.21 Fitting location, thermal management control unit -J1024-	2301-2303
1.22 Fitting location, front left radar sensor control unit for object detection -J1088-	2304
1.23 Fitting location, front right radar sensor control unit for object detection -J1089-	2305-2306
1.24 Fitting location, windscreen washer pump control unit -J1100-	2307-2308
1.25 Fitting location, control unit for laser distance control -J1122-	2309-2310
1.26 Fitting location of control unit for electric compressor -J1123-	2311
1.27 Fitting location, control units on front headlight -MX1-/-MX2-	2312-2320
1.27.1 Fitting location, control units on front headlight -MX1-/-MX2-, before product upgrade, Xenon headlights	2312-2313
1.27.2 Fitting location, control units on front headlight -MX1-/-MX2-, before product upgrade, LED headlights	2314-2316
1.27.3 Fitting location, control units on front headlight -MX1-/-MX2-, from product upgrade, LED headlights	2317-2318
1.27.4 Fitting location, control units on front headlight -MX1-/-MX2-, from product upgrade, matrix LED headlights	2319-2320
1.28 Fitting location, brake servo -NX6-	2321-2322
1.29 Fitting location maintenance connector for high-voltage system -TW-	2323-2324
1.30 Fitting location, radiator fan -VX57-/-VX103-	2325
1.31 Fitting location, brake system pressure accumulator -VX70-	2326-2328