

Contents

| | |
|---|-----------|
| 27 - Starter, current supply, CCS | 1 |
| 1 Battery | 1 |
| 1.1 Basic information on the battery | 1 |
| 1.2 Battery types | 1 |
| 1.3 Warnings and safety precautions | 3 |
| 1.4 Battery terminal screw connection | 5 |
| 2 Checking battery | 6 |
| 2.1 Test sequence | 6 |
| 2.2 Visual inspection | 8 |
| 2.3 Checking colour indicator of magic eye | 9 |
| 2.4 Checking battery using vehicle diagnostic tester | 10 |
| 2.5 Battery tester with printer VAS 6161 | 11 |
| 2.6 Battery tester with printer VAS 5097 A | 17 |
| 2.7 Current draw test | 23 |
| 2.8 Checking open-circuit voltage of battery, stock vehicles | 24 |
| 3 Charging battery | 26 |
| 3.1 Charging battery | 26 |
| 3.2 Service charging | 27 |
| 3.3 Totally discharged batteries | 27 |
| 4 Alternator | 29 |
| 4.1 Checking alternator | 29 |
| 4.2 Bosch alternator up to 2000 - assembly overview | 30 |
| 4.3 Bosch alternator from 2001 onwards - assembly overview | 30 |
| 4.4 Removing and installing voltage regulator - Bosch alternator from 2001 onwards | 31 |
| 4.5 Bosch alternator from 2007 onwards - assembly overview | 32 |
| 4.6 Removing and installing voltage regulator - Bosch alternator from 2007 onwards | 33 |
| 4.7 Checking carbon brushes - all types of Bosch alternators from 2001 onwards | 34 |
| 4.8 Valeo alternator up to 2000 - assembly overview | 34 |
| 4.9 Valeo alternator from 2001 onwards - assembly overview | 35 |
| 4.10 Removing and installing voltage regulator - Valeo alternator from 2001 onwards | 36 |
| 4.11 Checking carbon brushes - Valeo alternator from 2001 onwards | 38 |
| 4.12 Removing and installing voltage regulator - Valeo alternator from 2007 onwards | 38 |
| 4.13 Checking carbon brushes - Valeo alternator from 2007 onwards | 39 |
| 4.14 Hitachi alternator - assembly overview | 41 |
| 4.15 Removing and installing voltage regulator - Hitachi alternator | 42 |
| 4.16 Checking carbon brushes - Hitachi alternator | 44 |
| 4.17 Removing and installing poly V-belt pulley without freewheel | 44 |
| 4.18 Removing and installing poly V-belt pulley with freewheel | 45 |
| 4.19 Checking poly V-belt pulley with freewheel | 52 |
| 92 - Windscreen wash/wipe system | 53 |
| 1 Washer fluid hoses | 53 |
| 1.1 Disconnecting and connecting washer fluid hose connectors | 53 |
| 1.2 Servicing a smooth washer fluid pipe | 55 |
| 1.3 Servicing a washer fluid hose with corrugated tube | 56 |
| 94 - Lights, bulbs, switches - exterior | 59 |
| 1 Safety information for handling gas discharge bulbs | 59 |
| 96 - Lights, bulbs, switches - interior | 61 |
| 1 Immobiliser | 61 |
| 1.1 General notes | 61 |
| 1.2 Defective transponder or loss of key | 61 |



| | | |
|--------------------|---|------------|
| 1.3 | Renewing reader coil | 61 |
| 1.4 | Procedure for renewing lock set | 62 |
| 2 | Towing bracket | 63 |
| 2.1 | Removing and installing socket for towing bracket - version 1 | 63 |
| 2.2 | Removing and installing socket for towing bracket - version 2 | 65 |
| 2.3 | Removing and installing socket for towing bracket - version 3 | 67 |
| 2.4 | Removing and installing socket for towing bracket - version 4 | 69 |
| 97 - Wiring | | 72 |
| 1 | Vehicle diagnostic, testing and information systems | 72 |
| 1.1 | Connecting vehicle diagnostic tester | 72 |
| 2 | Repairing wiring harnesses and connectors | 74 |
| 2.1 | General information on repairs to the vehicle electrical system | 74 |
| 2.2 | Wiring harness repair set | 77 |
| 2.3 | Description of tools | 80 |
| 2.4 | Repairing wiring harnesses | 86 |
| 2.5 | Repairing fibre optic cables | 100 |
| 2.6 | Repairing aerial wires | 114 |
| 2.7 | Repairing connector housings and electrical connectors | 127 |
| 2.8 | Releasing and dismantling connector housings | 129 |
| 3 | Contact surface cleaning set VAS 6410 | 131 |
| 3.1 | Using contact surface cleaning set VAS 6410 | 131 |
| 4 | ESD (electrostatic discharge) workplace VAS 6613 | 139 |
| 4.1 | Using ESD workplace VAS 6613 | 139 |