

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	3
2 Repair instructions	4
2.1 Rules for cleanliness	4
2.2 General notes	4
2.3 Contact corrosion	5
2.4 ESD (electrostatic discharge) workplace	5
2.5 Routing and attachment of pipes, hoses and wiring	5
2.6 Identification plates	5
2.7 Use of impact wrenches	6
91 - Communication	7
1 Safety information	7
2 Infotainment system	8
2.1 Layout - infotainment system	8
2.2 Overview of fitting locations - infotainment system	14
2.3 Removing and installing infotainment system display	15
2.4 Removing and installing control unit 1 for information electronics J794	17
2.5 Removing and installing driver side volume regulator E67	19
3 Sound system	21
3.1 Layout - sound system	21
3.2 Overview of fitting locations - sound system	32
3.3 Removing and installing digital sound package control unit/amplifier	39
3.4 Removing and installing rear treble loudspeakers R14 / R16	43
3.5 Removing and installing rear treble loudspeakers 2 R217 / R218	44
3.6 Removing and installing front treble loudspeakers R20 / R22	44
3.7 Removing and installing front treble loudspeakers 2 R220 / R221	46
3.8 Removing and installing rear mid-range loudspeakers R105 / R106	46
3.9 Removing and installing rear mid-range loudspeakers 2 R341 / R340	47
3.10 Removing and installing front mid-range loudspeakers R103 / R104	47
3.11 Removing and installing front mid-range loudspeakers 2 R276 / R277	48
3.12 Removing and installing rear bass loudspeakers R15 / R17	48
3.13 Removing and installing front bass loudspeakers R21 / R23	50
3.14 Removing and installing subwoofer R211	51
3.15 Removing and installing effect loudspeakers	52
3.16 Removing and installing centre loudspeaker R208	53
3.17 Removing and installing centre loudspeaker 2 R219	54
3.18 Removing and installing internal microphone R74	55
4 Aerial systems	56
4.1 Layout - aerial systems	56
4.2 Overview of fitting locations - aerial systems	59
4.3 Removing and installing aerial amplifier	63
4.4 Removing and installing window aerial suppression filter	64
4.5 Removing and installing roof aerial	65
4.6 Removing and installing GPS aerial	65
4.7 Removing and installing LTE aerials	67
4.8 Removing and installing satellite tuner aerial R172	68
4.9 Removing and installing digital radio aerial	68



4.10	Removing and installing emergency call module aerials	68
4.11	Removing and installing bumper aerials	69
4.12	Removing and installing traffic data aerial	71
4.13	Removing and installing dedicated short-range communication aerial	72
4.14	Removing and installing internal vehicle communication aerial R364	73
4.15	Removing and installing wireless data transfer aerial R336	73
4.16	Removing and installing wireless data transfer aerial 2 R366	74
4.17	Removing and installing near field communication aerial R350	74
4.18	Removing and installing near field communication aerial 2 R351	74
4.19	Removing and installing near field communication control unit 2 J1170	75
4.20	Removing and installing roof aerial control unit JX3	75
5	Radio	76
5.1	Layout - radio	76
5.2	Overview of fitting locations - radio	76
5.3	Removing and installing radio	76
5.4	Removing and installing digital radio/satellite radio	76
6	DVD/CD changer	77
6.1	Removing and installing DVD player R7	77
7	Telephone system	79
7.1	Layout - telephone	79
7.2	Overview of fitting locations - telephone system	91
7.3	Assembly overview - microphone unit	93
7.4	Removing and installing front microphone R140 / R141	95
7.5	Removing and installing aerial amplifier for mobile telephone R86	96
7.6	Removing and installing telephone bracket	97
8	Navigation system	99
8.1	Layout - navigation system	99
8.2	Overview of fitting locations - navigation system	99
8.3	Removing and installing control unit for navigation system	99
8.4	Removing and installing chip card reader control unit	99
9	TV system	101
9.1	Layout - TV system	101
9.2	Overview of fitting locations - TV system	104
9.3	Removing and installing TV tuner	105
9.4	Removing and installing TV card reader	107
10	Reversing camera system	108
11	Multifunction steering wheel	109
11.1	Layout - multifunction steering wheel	109
11.2	Assembly overview - multi-function steering wheel	109
11.3	Removing and installing multifunction buttons in steering wheel E441 / E440	110
11.4	Removing and installing tiptronic switches in steering wheel E480 / E479	112
12	Voice control system	113
12.1	Layout - voice control system	113
12.2	Removing and installing voice control system	113
13	Connection for external multimedia devices	114
13.1	Layout - external multimedia devices	114
13.2	Removing and installing connection for external multimedia devices	115
13.3	Removing and installing USB connection 1 U41	116
13.4	Removing and installing control unit with Android operating system J1243	116
14	Night vision system	118
15	Overhead view camera	119
16	Online services	120
16.1	Layout - online services	120
16.2	Overview of fitting locations - mobile online services	123

16.3	Removing and installing emergency call module control unit and communication unit J949	127
16.4	Removing and installing emergency battery, telematics A16	127
16.5	Removing and installing loudspeaker for emergency call module R335	129