

## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on pyrotechnic components	2
1.2 Safety precautions when working on vehicles with high-voltage system	4
1.3 Safety precautions when working in the vicinity of high-voltage components	5
1.4 Safety precautions when working on the high-voltage system	5
1.5 Safety precautions when working on vehicles with start/stop system	6
1.6 Storing, transporting and disposing of airbag units, belt tensioner units and battery isolators (pyrotechnic components)	7
1.7 Additional safety regulations for side airbags	7
1.8 Additional safety regulations for curtain airbags	8
1.9 Safety regulations for crash sensors (pressure sensors) for front side airbag	8
1.10 Additional safety regulations for working on seat occupied sensor controlling deactivation of front passenger airbag - country-specific version	9
1.11 Procedure for dealing with seat occupied sensor controlling deactivation of front passenger airbag following an accident - country-specific version	9
1.12 Renewing pyrotechnic, electrical and mechanical components of the restraint system following an accident	10
1.13 Checking airbag mounting components following an accident	11
1.14 Accident in which no airbag was triggered	11
1.15 Checking seat belts	12
1.16 Checking belt webbing	12
1.17 Checking automatic belt retractor (locking action)	13
1.18 Visual inspection of belt buckle	13
1.19 Functional check of belt buckle	14
1.20 Checking guide fittings and latch plate	14
1.21 Checking securing components and anchorage points following an accident	14
1.22 Checking child seat restraint function of seat belt for additional child seats (not for driver seat belt; country-specific version)	14
1.23 Checking child seat anchors following an accident	15
1.24 Safety regulations for automatic anti-dazzle interior mirror	15
<b>2 Repair instructions</b>	<b>16</b>
2.1 Contact corrosion	16
2.2 Routing and attachment of pipes, hoses and wiring	16
2.3 Use of impact wrenches	16
2.4 Identification plates	17
<b>68 - Interior equipment</b>	<b>18</b>
<b>1 Safety information</b>	<b>18</b>
<b>2 Storage compartments/covers/trim panels</b>	<b>19</b>
2.1 Overview of fitting locations - storage compartments/covers/trim panels	19
2.2 Assembly overview - dash panel cover (driver side)	20
2.3 Assembly overview - steering column trim	21
2.4 Assembly overview - glove compartment	22
2.5 Removing and installing dash panel cover (driver side)	24
2.6 Removing and installing upper steering column trim	24
2.7 Removing and installing lower steering column trim	26
2.8 Removing and installing glove compartment opening mechanism	26
2.9 Removing and installing lock cylinder for glove compartment opening mechanism	27
2.10 Manually releasing glove compartment cover	28
2.11 Removing and installing glove compartment	29
2.12 Removing and installing glove compartment cover	32
2.13 Removing and installing restrictor for glove compartment cover	33
2.14 Removing and installing footwell cover (front passenger side)	33



<b>3</b>	<b>Equipment</b>	<b>34</b>
3.1	Assembly overview - net partition	34
3.2	Assembly overview - sun visors	35
3.3	Assembly overview - sun blind	36
3.4	Assembly overview - luggage compartment cover	38
3.5	Removing and installing bracket for net partition	40
3.6	Removing and installing sun visor	41
3.7	Removing and installing sun visor centre mount	41
3.8	Removing and installing sun blind	42
3.9	Removing and installing grab handle	45
3.10	Removing and installing bracket for grab handle	47
3.11	Removing and installing luggage compartment cover	47
<b>4</b>	<b>Centre console</b>	<b>51</b>
4.1	Assembly overview - centre console	51
4.2	Removing and installing rear centre console trim	54
4.3	Removing and installing cover for centre console	55
4.4	Removing and installing front centre console storage compartment	57
4.5	Removing and installing front centre console footwell trim	57
4.6	Removing and installing centre console	57
4.7	Removing and installing trim panel for centre console	58
4.8	Removing and installing cup holder	59
4.9	Removing and installing rear centre console storage compartment	60
4.10	Removing and installing vent in rear centre console	60
4.11	Removing and installing bracket for centre console	61
4.12	Removing and installing trim for operating and display unit	61
<b>5</b>	<b>Front centre armrest</b>	<b>63</b>
5.1	Assembly overview - front centre armrest	63
5.2	Removing and installing front centre armrest	64
<b>6</b>	<b>Interior mirror</b>	<b>65</b>
6.1	Assembly overview - interior mirror	65
6.2	Removing and installing interior mirror	65
6.3	Checking operation of automatic anti-dazzle interior mirror	67
<b>69</b>	<b>Passenger protection</b>	<b>68</b>
<b>1</b>	<b>Safety information</b>	<b>68</b>
<b>2</b>	<b>Seat belts</b>	<b>69</b>
2.1	Overview of fitting locations - seat belts and anchorage points	69
2.2	Assembly overview - front three-point seat belt	71
2.3	Assembly overview - rear outer three-point seat belt	75
2.4	Assembly overview - rear centre three-point seat belt	76
2.5	Assembly overview - front belt buckle	77
2.6	Assembly overview - rear belt buckle	78
2.7	Removing and installing front three-point seat belt	80
2.8	Removing and installing rear three-point seat belt	86
2.9	Removing and installing rear belt guide	89
2.10	Removing and installing front belt guide	90
2.11	Removing and installing front belt end fitting	91
2.12	Removing and installing rear outer belt end fitting	92
2.13	Removing and installing rear centre belt end fitting	93
2.14	Removing and installing belt height adjuster	94
2.15	Removing and installing front belt buckle	95
2.16	Removing and installing rear belt buckle	95
<b>3</b>	<b>Child seat anchors</b>	<b>97</b>
3.1	Assembly overview - front child seat anchors	97
3.2	Assembly overview - rear child seat anchors	97

3.3	Removing and installing front child seat anchor	99
3.4	Removing and installing rear child seat anchor	99
<b>4</b>	<b>Airbag system</b>	<b>101</b>
4.1	Overview of fitting locations - airbag system	101
<b>5</b>	<b>Airbag control unit</b>	<b>104</b>
5.1	Assembly overview - airbag control unit	104
5.2	Removing and installing airbag control unit J234	104
<b>6</b>	<b>Battery isolation igniter</b>	<b>108</b>
6.1	Assembly overview - battery isolation igniter	108
6.2	Removing and installing battery isolation igniter	110
<b>7</b>	<b>Driver airbag</b>	<b>112</b>
7.1	Assembly overview - driver airbag	112
7.2	Removing and installing airbag unit with igniters	112
7.3	Renewing connector at airbag	116
<b>8</b>	<b>Front passenger airbag</b>	<b>118</b>
8.1	Assembly overview - front passenger airbag	118
8.2	Removing and installing front passenger airbag unit with igniters	119
8.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	121
<b>9</b>	<b>Side airbags</b>	<b>122</b>
9.1	Assembly overview - front side airbag	122
9.2	Assembly overview - rear side airbag	122
9.3	Removing and installing front side airbag with igniter	123
9.4	Removing and installing rear side airbag with igniter	126
9.5	Removing and installing wire for front side airbag	129
<b>10</b>	<b>Curtain airbags</b>	<b>132</b>
10.1	Assembly overview - curtain airbag	132
10.2	Removing and installing curtain airbag with igniter	133
10.3	Removing and installing guide for curtain airbag	135
<b>11</b>	<b>Crash sensors for airbags</b>	<b>136</b>
11.1	Overview of fitting locations - crash sensors for airbags	136
11.2	Removing and installing front airbag crash sensor for driver side G283	138
11.3	Removing and installing front side airbag crash sensor G179 / G180	139
11.4	Removing and installing crash sensor for side airbag in B-pillar G1101 / G1102	141
11.5	Removing and installing rear side airbag crash sensor G256 / G257	142
<b>12</b>	<b>Seat position sensor</b>	<b>144</b>
12.1	Assembly overview - seat position sensor	144
12.2	Removing and installing seat position sensor	144
<b>13</b>	<b>Belt-fastened recognition system</b>	<b>147</b>
13.1	Assembly overview - seat occupied sensor	147
13.2	Removing and installing seat occupied sensor on front passenger side G128	148
13.3	Removing and installing rear seat occupied sensor G177 / G178	148
13.4	Removing and installing pressure sensor for seat occupied recognition G452	149
<b>14</b>	<b>Seat occupied recognition system</b>	<b>150</b>
14.1	Overview of fitting locations - seat occupied recognition system	150
14.2	Removing and installing seat occupied recognition control unit J706	152
14.3	Removing and installing seat occupied sensor on front passenger side G128	153
<b>70</b>	<b>Trim, insulation</b>	<b>155</b>
<b>1</b>	<b>Safety information</b>	<b>155</b>
<b>2</b>	<b>Front door trim</b>	<b>156</b>
2.1	Assembly overview - front door trim	156
2.2	Removing and installing mid-range loudspeaker trim	158
2.3	Removing and installing trim panel	159
2.4	Removing and installing front door trim	159

2.5	Removing and installing front door puller .....	161
2.6	Removing and installing trim for mirror cover .....	162
2.7	Removing and installing interior door handle .....	163
<b>3</b>	<b>Rear door trim .....</b>	<b>164</b>
3.1	Assembly overview - rear door trim .....	164
3.2	Removing and installing mid-range loudspeaker trim .....	166
3.3	Removing and installing trim panel .....	166
3.4	Removing and installing interior door handle .....	167
3.5	Removing and installing rear door trim .....	167
3.6	Removing and installing rear door puller .....	169
3.7	Removing and installing rear ashtray .....	170
<b>4</b>	<b>Dash panel .....</b>	<b>171</b>
4.1	Assembly overview - dash panel .....	171
4.2	Removing and installing dash panel cover (side) .....	174
4.3	Removing and installing trim panel for dash panel .....	175
4.4	Removing and installing trim for dash panel insert .....	179
4.5	Removing and installing loudspeaker trim .....	180
4.6	Removing and installing trim for light switch .....	181
4.7	Removing and installing dash panel .....	182
4.8	Removing and installing loudspeaker mounting .....	186
4.9	Removing and installing outer dash panel vent .....	188
4.10	Removing and installing front centre defroster vent .....	189
4.11	Removing and installing side defroster vent .....	190
4.12	Removing and installing trim for head-up display .....	190
<b>5</b>	<b>Dash panel cross member .....</b>	<b>192</b>
5.1	Assembly overview - dash panel cross member .....	192
5.2	Removing and installing dash panel cross member .....	194
<b>6</b>	<b>Passenger compartment trim panels .....</b>	<b>201</b>
6.1	Overview of fitting locations - passenger compartment trim panels .....	201
6.2	Assembly overview - sill panel moulding .....	202
6.3	Assembly overview - A-pillar trim .....	203
6.4	Assembly overview - B-pillar trim .....	204
6.5	Assembly overview - D-pillar trim .....	205
6.6	Assembly overview - foot rest and floor covering .....	206
6.7	Removing and installing sill panel moulding .....	208
6.8	Removing and installing A-pillar trim .....	210
6.9	Removing and installing B-pillar trim .....	214
6.10	Removing and installing D-pillar trim .....	217
6.11	Removing and installing foot rest .....	219
6.12	Removing and installing floor covering .....	220
6.13	Removing and installing loudspeaker trim .....	223
6.14	Removing and installing partition cover .....	224
<b>7</b>	<b>Luggage compartment trim panels .....</b>	<b>225</b>
7.1	Overview of fitting locations - luggage compartment trim panels .....	225
7.2	Assembly overview - luggage compartment side trim .....	226
7.3	Assembly overview - luggage compartment floor .....	227
7.4	Assembly overview - lower rear lid trim .....	231
7.5	Assembly overview - upper rear lid trim .....	231
7.6	Removing and installing lower rear lid trim .....	232
7.7	Removing and installing upper rear lid trim .....	233
7.8	Removing and installing luggage compartment side trim .....	234
7.9	Removing and installing luggage compartment floor .....	237
7.10	Removing and installing lock carrier trim .....	237
7.11	Removing and installing fastening ring .....	238
7.12	Removing and installing retainer for luggage compartment floor covering .....	239

7.13	Removing and installing grip for rear luggage compartment floor .....	242
7.14	Removing and installing retaining rail .....	243
7.15	Removing and installing lining for spare wheel well .....	244
7.16	Removing and installing trim for rear lid lock .....	244
<b>8</b>	<b>Roof trim panels .....</b>	<b>245</b>
8.1	Assembly overview - moulded headliner .....	245
8.2	Removing and installing moulded headliner .....	246
8.3	Lowering moulded headliner .....	249
8.4	Attaching roof reinforcement to body .....	252
8.5	Removing and installing loudspeaker trim .....	254