

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on the high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety precautions when working on vehicles with start/stop system	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
1.5 Safety precautions when working on the cooling system	3
2 Repair instructions	4
2.1 Routing and attachment of pipes, hoses and wiring	4
2.2 Contact corrosion	4
2.3 Bonding surfaces for self-adhesive components	4
2.4 Secure threaded connections	5
2.5 Identification plates	5
2.6 Use of impact wrenches	5
50 - Body - front	7
1 Safety information	7
2 Lock carrier	8
2.1 Assembly overview - lock carrier	8
2.2 Removing and installing lock carrier	11
2.3 Removing and installing lower longitudinal member	14
2.4 Removing and installing bracket for lower longitudinal member	15
2.5 Removing and installing lock carrier brace	15
2.6 Removing and installing support for headlight mounting	16
3 Wing	17
3.1 Assembly overview - wing	17
3.2 Removing and installing wing	19
3.3 Removing and installing wing panel brace	20
3.4 Removing and installing wing bracket (centre)	20
3.5 Removing and installing wing bracket (rear)	21
3.6 Removing and installing front cover for wing	22
3.7 Removing and installing rear cover for wing	22
3.8 Removing and installing closure plate	22
4 Bulkhead	24
4.1 Assembly overview - bulkhead	24
4.2 Assembly overview - plenum chamber cover	26
4.3 Removing and installing plenum chamber bulkhead	27
4.4 Removing and installing plenum chamber closure plate	29
4.5 Removing and installing cover (top) for plenum chamber closure plate	29
4.6 Removing and installing cover (bottom) for plenum chamber closure plate	30
4.7 Removing and installing plenum chamber cover	31
55 - Bonnet, rear lid	33
1 Safety information	33
2 Bonnet	34
2.1 Assembly overview - bonnet	34
2.2 Assembly overview - Bowden cable	36
2.3 Removing and installing bonnet	37
2.4 Adjusting bonnet	38
2.5 Removing and installing hinges	42
2.6 Removing and installing striker	43
2.7 Removing and installing gas strut	43



2.8	Releasing gas from gas strut	44
2.9	Removing and installing insulation	44
2.10	Removing and installing impact guard	45
2.11	Removing and installing Bowden cable for operating lever for bonnet lock	46
2.12	Removing and installing bonnet lock	49
2.13	Removing and installing operating lever for bonnet lock	50
2.14	Removing and installing operating lever for arrester	51
2.15	Removing and installing mounting bracket for operating lever for bonnet lock	51
2.16	Removing and installing mounting bracket with Bowden cable for operating lever for arrester	51
3	Rear lid	53
3.1	Assembly overview - rear lid	53
3.2	Removing and installing rear lid	57
3.3	Adjusting rear lid	59
3.4	Removing and installing hinges	61
3.5	Removing and installing rear lid seal	62
3.6	Removing and installing adjusting buffer	63
3.7	Removing and installing rear lid lock	63
3.8	Removing and installing striker	63
3.9	Removing and installing power latching motor for rear lid V382	64
3.10	Removing and installing Bowden cable for power latching system	64
3.11	Removing and installing rear lid drive unit VX69 / rear lid drive unit 2 VX77	65
3.12	Adapting rear lid drive unit VX69 / rear lid drive unit 2 VX77	66
3.13	Preparing rear lid drive unit VX69 / rear lid drive unit 2 VX77 for disposal	66
3.14	Removing and installing rear lid control unit J605	67
3.15	Removing and installing rear lid power opening control unit J938	68
3.16	Removing and installing rear lid power opening sender G750 / G760	68
4	Tank flap unit	73
4.1	Assembly overview - tank flap unit	73
4.2	Removing and installing tank flap unit	73
4.3	Removing and installing trim panel for tank flap unit	75
4.4	Removing and installing drain hose for tank flap unit	75
4.5	Removing and installing manual release cable	76
5	Charging flap unit	77
5.1	Assembly overview - charging flap unit	77
5.2	Removing and installing charging flap unit	78
5.3	Removing and installing charging flap unit trim	79
5.4	Removing and installing drain hose for charging flap unit	80
5.5	Removing and installing manual release cable for high-voltage charging flap lock	80
57	Front doors, door components, central locking	82
1	Safety information	82
2	Door	83
2.1	Assembly overview - door	83
2.2	Assembly overview - door seals	86
2.3	Removing and installing door	88
2.4	Adjusting door	88
2.5	Removing and installing door arrester	92
2.6	Removing and installing impact bar	93
2.7	Removing and installing inner door seal	94
2.8	Removing and installing retainer for inner door seal	95
2.9	Removing and installing door seal for roof trim strip	96
2.10	Removing and installing outer door seal	97
2.11	Removing and installing joint seal	100
3	Door components	101

3.1	Assembly overview - window regulator	101
3.2	Assembly overview - door handle and door lock	102
3.3	Assembly overview - window guides and window slot seals	104
3.4	Removing and installing window regulator	105
3.5	Removing and installing window regulator motor	106
3.6	Removing and installing door handle	107
3.7	Removing and installing door handle trim	108
3.8	Removing and installing mounting bracket	109
3.9	Removing and installing operating cable for exterior door handle	111
3.10	Removing and installing lock cylinder	112
3.11	Removing and installing cap on door handle	113
3.12	Removing and installing door lock	113
3.13	Removing and installing striker	115
3.14	Removing and installing operating cable for interior door handle	115
3.15	Removing and installing inner door cover	115
3.16	Removing and installing power latching motor	117
3.17	Removing and installing inner window slot seal	117
3.18	Removing and installing outer window slot seal	118
4	Central locking system	120
4.1	Overview of fitting locations - central locking system	120
4.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	122
4.3	Removing and installing rear left door control unit J926 and rear right door control unit J927	122
4.4	Removing and installing convenience system central control unit J393	123
4.5	Removing and installing bonnet contact switch F266 / bonnet contact switch 2 F329	123
4.6	Removing and installing tank filler flap locking motor V155	124
4.7	Removing and installing actuator for high-voltage charging flap lock 1 F496	124
58	Rear doors, door components	126
1	Safety information	126
2	Door	127
2.1	Assembly overview - door	127
2.2	Assembly overview - door seals	129
2.3	Removing and installing door	131
2.4	Adjusting door	131
2.5	Removing and installing door arrester	134
2.6	Removing and installing inner door seal	135
2.7	Removing and installing retainer for inner door seal	136
2.8	Removing and installing outer door seal	138
2.9	Removing and installing joint seal	140
2.10	Removing and installing side member seal	142
3	Door components	143
3.1	Assembly overview - window regulator	143
3.2	Assembly overview - door handle and door lock	145
3.3	Assembly overview - window guides and window slot seals	147
3.4	Removing and installing window regulator	148
3.5	Removing and installing window regulator motor	149
3.6	Removing and installing door handle	150
3.7	Removing and installing door handle trim	151
3.8	Removing and installing mounting bracket	152
3.9	Removing and installing operating cable for exterior door handle	154
3.10	Removing and installing housing	154
3.11	Removing and installing cap on door handle	155
3.12	Removing and installing door lock	155
3.13	Removing and installing striker	156



3.14	Removing and installing operating cable for interior door handle	156
3.15	Removing and installing inner door cover	157
3.16	Removing and installing power latching motor	158
3.17	Removing and installing inner window slot seal	158
3.18	Removing and installing outer window slot seal	159
60	- Sunroof	161
1	Safety information	161
2	Sliding sunroof	162
2.1	Assembly overview - sliding sunroof	162
2.2	Assembly overview - sunroof roller blind	164
2.3	Assembly overview - wind deflector	165
2.4	Removing and installing sliding sunroof frame	166
2.5	Removing and installing glass panel	168
2.6	Adjusting glass panel	170
2.7	Removing and installing sliding sunroof adjustment control unit J245	172
2.8	Adapting sliding sunroof adjustment control unit J245	173
2.9	Removing and installing sliding sunroof motor V1	173
2.10	Adapting sliding sunroof motor V1	173
2.11	Removing and installing sliding sunroof seals	174
2.12	Removing and installing sunroof roller blind	176
2.13	Removing and installing sunroof roller blind motor V260	177
2.14	Adapting sunroof roller blind motor V260	178
2.15	Removing and installing wind deflector	178
2.16	Removing and installing mounting for wind deflector	179
2.17	Manual actuation	179
3	Water drain hoses	180
3.1	Assembly overview - water drain hoses	180
3.2	Cleaning water drain hoses	181
3.3	Removing and installing water drain hoses	182
63	- Bumpers	184
1	Safety information	184
2	Front bumper	186
2.1	Assembly overview - bumper cover	186
2.2	Assembly overview - impact bar	197
2.3	Removing and installing bumper cover	198
2.4	Adjusting bumper cover	201
2.5	Removing and installing bumper cover mounting	202
2.6	Removing and installing cover for headlight washer jet	202
2.7	Removing and installing frame for headlight washer jet	202
2.8	Removing and installing centre air intake grille	203
2.9	Removing and installing side air intake grille for front bumper	204
2.10	Removing and installing spoiler for closure plate	208
2.11	Removing and installing grille	209
2.12	Removing and installing trim strip (centre)	209
2.13	Removing and installing trim strip (side)	210
2.14	Removing and installing trim strip for bumper	210
2.15	Removing and installing side trim strip - Q8 from product upgrade onwards	211
2.16	Removing and installing trim for side air intake grille - Q8, SQ8 from product upgrade onwards	211
2.17	Removing and installing front spoiler	212
2.18	Removing and installing side panel of bumper cover	214
2.19	Removing and installing centre closure plate for bumper cover	215
2.20	Removing and installing side closure plate for bumper cover	215
2.21	Removing and installing spoiler for bumper cover	216

2.22	Removing and installing underbody guard	217
2.23	Removing and installing lock carrier cover	217
2.24	Removing and installing impact bar	219
2.25	Removing and installing moulded foam insert	219
2.26	Removing and installing bracket for ambient temperature sensor G17	220
3	Rear bumper	221
3.1	Assembly overview - bumper cover	221
3.2	Assembly overview - impact bar	232
3.3	Removing and installing bumper cover	232
3.4	Removing and installing base plate for bumper cover	235
3.5	Removing and installing bumper cover mounting	235
3.6	Removing and installing trim strip for bumper cover	237
3.7	Removing and installing bumper cover trim	240
3.8	Removing and installing spoiler	242
3.9	Removing and installing rear diffuser	243
3.10	Removing and installing tailpipe trim	244
3.11	Removing and installing closure plate	245
3.12	Removing and installing mounting for tailpipe trim	245
3.13	Removing and installing reflector	246
3.14	Removing and installing impact bar	247
64	- Glazing	249
1	Safety information	249
2	Repair instructions	250
2.1	Minimum drying times for bonded windows	250
2.2	Repairing windows	250
2.3	Tools and materials required for installation and removal	251
2.4	Preparing undamaged windows for installation	254
2.5	Preparing new windows for installation	254
2.6	Preparing body flange for installation	255
2.7	Cleaning off adhesive sealant	256
3	Windscreen	257
3.1	Assembly overview - windscreen	257
3.2	Removing and installing windscreen	258
3.3	Removing and installing heated windscreen control unit J505	262
4	Rear window	264
4.1	Assembly overview - rear window	264
4.2	Removing and installing rear window	264
5	Side windows	270
5.1	Assembly overview - rear side window	270
5.2	Removing and installing rear side window	270
6	Door windows	274
6.1	Assembly overview - front door window	274
6.2	Assembly overview - rear door window	274
6.3	Removing and installing front door window	275
6.4	Adjusting front door window	276
6.5	Removing and installing rear door window	281
6.6	Adjusting rear door window	282
66	- Exterior equipment	288
1	Safety information	288
2	Radiator grille/front trim	289
2.1	Assembly overview - radiator grille	289
2.2	Removing and installing radiator grille	293
2.3	Preparing new radiator grille for installation	295

2.4	Removing and installing front trim	295
2.5	Removing and installing centre closure plate	297
2.6	Removing and installing cover for sensor	299
3	Spoilers	301
3.1	Assembly overview - spoilers	301
3.2	Removing and installing spoiler	301
3.3	Removing and installing spoiler (side)	303
4	Strips/trim panels/extensions	305
4.1	Assembly overview - trim strips	305
4.2	Assembly overview - covers	306
4.3	Assembly overview - sill panel trim	307
4.4	Assembly overview - water deflector strip	308
4.5	Assembly overview - trim panel for B-pillar	309
4.6	Assembly overview - wheel arch covers	310
4.7	Removing and installing trim strip for rear lid	312
4.8	Removing and installing cover	313
4.9	Removing and installing sill panel trim	315
4.10	Removing and installing water deflector strip	317
4.11	Removing and installing fastening strip for water deflector strip	318
4.12	Removing and installing trim panel for B-pillar	318
4.13	Removing and installing wheel arch covers	320
4.14	Removing and installing wheel arch extension	324
5	Noise insulation	326
5.1	Assembly overview - noise insulation	326
6	Underbody cladding	327
6.1	Assembly overview - underbody cladding	327
6.2	Assembly overview - underbody struts	329
6.3	Assembly overview - jacking points	331
6.4	Removing and installing tunnel cross-piece	332
6.5	Removing and installing diagonal struts	333
6.6	Removing and installing jacking points	335
6.7	Removing and installing underbody guard	335
7	Roof strips/roof rails	337
7.1	Assembly overview - roof rail	337
7.2	Assembly overview - roof trim strip	339
7.3	Removing and installing roof rail	339
7.4	Removing and installing roof carrier detection sensor G625	340
7.5	Removing and installing compensation element	341
7.6	Removing and installing roof trim strip	342
8	Exterior mirror	343
8.1	Assembly overview - exterior mirror	343
8.2	Removing and installing exterior mirror	345
8.3	Removing and installing mirror glass	346
8.4	Removing and installing mirror adjustment unit	347
8.5	Removing and installing mirror cover	347
8.6	Removing and installing mirror trim	348
9	Wheel housing liner	349
9.1	Assembly overview - front wheel housing liner	349
9.2	Assembly overview - rear wheel housing liner	349
10	Lettering and badges	351
10.1	Assembly overview - lettering and badges	351
10.2	General notes on renewing lettering and badges	351
10.3	Dimensions - lettering and badges at rear	352
10.4	Dimensions - lettering and badges on sides	353

10.5	Removing and installing lettering and badges for radiator grille	354
11	Towing bracket	361
11.1	Assembly overview - towing bracket	361
11.2	Removing and installing trailer detector control unit J345	361
12	Heat shields	363
12.1	Overview of fitting locations - heat shields	363
12.2	Removing and installing heat shield for plenum chamber bulkhead	366
12.3	Removing and installing heat shield (bottom) for plenum chamber bulkhead	366
12.4	Removing and installing heat shield (front) for longitudinal member	367
12.5	Removing and installing heat shield (rear) for longitudinal member	368
12.6	Removing and installing heat shield (top front) for tunnel	369
12.7	Removing and installing heat shield for tunnel (gearbox)	372
12.8	Removing and installing heat shield for tunnel cross-piece (front)	374
12.9	Removing and installing heat shield for tunnel (front)	374
12.10	Removing and installing heat shield for tunnel (rear)	376
12.11	Removing and installing heat shield for propshaft	377
12.12	Removing and installing heat shield for exhaust system (centre)	377
12.13	Removing and installing heat shield for rear silencer	378